

---

# **USER'S GUIDE FOR ESTIMATING INDIRECT CARBON DIOXIDE, METHANE AND NITROUS OXIDE EMISSIONS FROM ELECTRICITY CONSUMPTION USING THE STATE INVENTORY TOOL**

---

**JANUARY 17, 2025**



Prepared by:  
ICF

Prepared for:  
State Energy and Environment Program,  
U.S. Environmental Protection Agency

This section of the User's Guide provides instruction on using the Indirect CO<sub>2</sub>, CH<sub>4</sub> and N<sub>2</sub>O Emissions from Electricity Consumption (Electricity Consumption) module of the State

Inventory Tool (SIT), and describes the methodology used for estimating greenhouse gas emissions from electricity consumption at the state level.

## **TABLE OF CONTENTS**

1.1	Getting Started .....	2
1.2	Module Overview .....	4
1.2.1	Data Requirements .....	4
1.2.2	Tool Layout.....	5
1.3	Methodology.....	6
1.4	References .....	12

## 1.1 GETTING STARTED

The Indirect CO<sub>2</sub>, CH<sub>4</sub> and N<sub>2</sub>O Emissions from Electricity Consumption (Electricity Consumption) module was developed using Microsoft® Excel 2000. While the module will operate with older versions of Excel, it functions best with Excel 2000 or later. If you are using Excel 2007 or later, instructions for opening the module will vary as outlined in the Excel basics below. Before you use the Electricity Consumption module, make sure your computer meets the system requirements. In order to install and run the Electricity Consumption module, you must have:

- IBM-PC compatible computer with the Windows 95 operating system or later;
- Microsoft® Excel 1997 or later, with calculation set to automatic and macros enabled;
- Hard drive with at least 20MB free; and
- Monitor display setting of 800 x 600 or greater.

### Microsoft Excel Settings

**Excel 2003 and Earlier:** For the SIT modules to function properly, Excel must be set to automatic calculation. To check this setting, launch Microsoft Excel before opening the Electricity Consumption module. Go to the Tools menu and select "Options..." Click on the "Calculations" tab and make sure that the radio button next to "Automatic" is selected, and then click on "OK" to close the window. The security settings (discussed next) can also be adjusted at this time.

**Excel 2007 and Later:** For the SIT modules to function properly, Excel must be set to automatic calculation. Go to the Formulas ribbon and select "Calculation Options." Make sure that the box next to the "Automatic" option is checked from the pop-up menu.

### Microsoft Excel Security

**Excel 2003 and Earlier:** Because the SIT employs macros, you must have Excel security set to medium (recommended) or low (not recommended). To change this setting, launch Microsoft Excel before opening the Electricity Consumption module. Once in Excel, go to the Tools menu, click on the Macro sub-menu, and then select "Security" (see Figure 1). The Security pop-up box will appear. Click on the "Security Level" tab and select medium. When set to high, macros are automatically disabled; when set to medium, Excel will give you the choice to enable macros; when set to low, macros are always enabled.

When Excel security is set to medium, users are asked upon opening the module whether to enable macros. Macros must be enabled in order for the Electricity Consumption module to work. Once they are enabled, the module will open to the control worksheet. A message box will appear welcoming the user to the module. Clicking on the "x" in the upper-right-hand corner of the message box will close it.

**Excel 2007 and Later:** If Excel's security settings are set at the default level a Security Warning appears above the formula box in Excel when the Electricity Consumption module is initially opened. The Security Warning lets the user know that some active content from the spreadsheet has been disabled, meaning that Excel has prevented the macros in the spreadsheet from functioning. Because SIT needs macros in order to function properly, the user must click the "Options" button in the security message and then select, "Enable this

content” in the pop-up box. Enabling the macro content for the SIT in this way only enables macros temporarily in Excel but does not change the macro security settings. Once macros are enabled, a message box will appear welcoming the user to module. Click on the “x” in the upper right-hand corner to close the message box.


If the Security Warning does not appear when the module is first opened, it may be necessary to change the security settings for macros. To change the setting, first exit out of the Electricity Consumption module and re-launch Microsoft Excel before opening the Electricity Consumption module. Next, click on the Microsoft Excel icon in the top left of the screen. Scroll to the bottom of the menu and select the “Excel Options” button to the right of the main menu. When the Excel Options box appears, select “Trust Center” in left hand menu of the box. Next, click the gray “Trust Center Settings” button. When the Trust Center options box appears, click “Macro Settings” in the left-hand menu and select “Disable all macros with notification.” Once the security level has been adjusted, open the Stationary Combustion module and enable macros in the manner described in the preceding paragraph.

### Viewing and Printing Data and Results


The Electricity Consumption module contains some features to allow users to adjust the screen view and the appearance of the worksheets when they are printed. Once a module has been opened, you can adjust the zoom by going to the Module Options Menu, and either typing in a zoom percentage or selecting one from the drop-down menu. In addition, data may not all appear on a single screen within each worksheet; if not, you may need to scroll up or down to view additional information.

You may also adjust the print margins of the worksheets to ensure that desired portions of the Electricity Consumption module are printed. To do so, go to the File menu, and then select “Print Preview.” Click on “Page Break Preview” and drag the blue lines to the desired positions (see Figure 2). To print this view, go to the File menu, and click “Print.” To return to the normal view, go to the File menu, click “Print Preview,” and then click “Normal View.”

**Figure 1. Changing Security Settings**

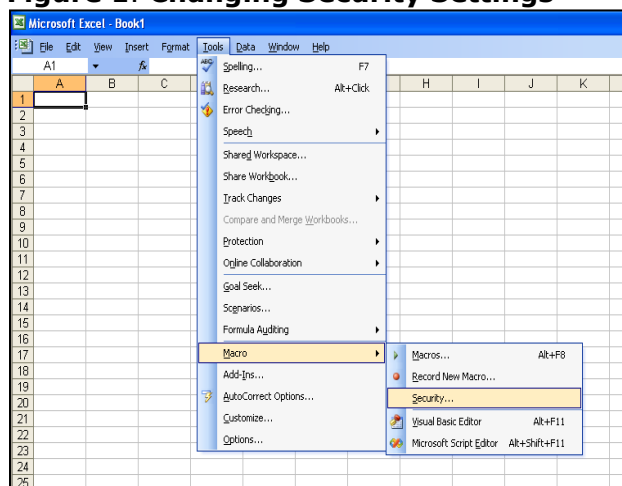

**Figure 2. Adjusting Print Margins**

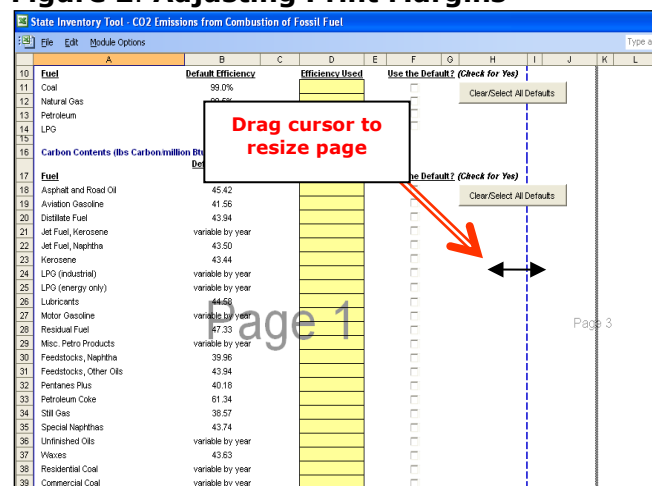

## 1.2 MODULE OVERVIEW

This User's Guide accompanies and explains the Electricity Consumption module of the SIT. The SIT was originally developed in conjunction with EPA's Emissions Inventory Improvement Program (EIIP) in order to automate the steps states would need to take in developing their own emission estimates in a manner that was consistent with prevailing national and state guidelines. The result was a user-friendly and comprehensive set of eleven modules that help users estimate greenhouse gas emissions at the state level.

Because most state inventories developed today rely heavily on the SIT, User's Guides have been developed for each of the SIT modules. These User's Guides contain the most up-to-date methodologies that are, for the most part, consistent with the Inventory of U.S. Greenhouse Gas Emissions and Sinks (EPA 2024a). Users can refer to the chapters and annexes of the U.S. Inventory to obtain additional information not found in the SIT or in the companion User's Guide.

In 2024, EPA published the results of the 2022 Inventory of U.S. Greenhouse Gas Emissions and Sinks disaggregated by U.S. state (EPA 2024a) to make consistent state-level GHG data available for all states for use by states, researchers, and the general public. However, EPA recognizes that there will be differences between the state-level estimates published by EPA and inventory estimates developed by states using the SIT or other tools. Inventories compiled by states may differ for several reasons, and differences do not necessarily mean that one set of estimates is more accurate, or "correct." In some cases, the Inventory of U.S. Greenhouse Gas Emissions and Sinks may be using different methodologies, activity data, and emission factors, or may have access to the latest facility-level information through the Greenhouse Gas Reporting Program (GHGRP). In other cases, because of state laws and regulations, states may have adopted accounting decisions that differ from those adopted by UNFCCC and IPCC to ensure comparability in national reporting (e.g., use of different category definitions and emission scopes consistent with state laws and regulations). Users of state GHG data should take care to review and understand differences in accounting approaches to ensure that any comparisons of estimates are equivalent or an apples-to-apples comparison of estimates.

The Electricity Consumption module calculates CO<sub>2</sub>, CH<sub>4</sub> and N<sub>2</sub>O emissions from the electricity consumption by the end-use equipment types shown in Table 1, by end-use sector. While the module provides default data for electricity consumption by end-use types (depending on availability), users are encouraged to use state-specific data, where available. If using outside data sources, or for a more thorough understanding of the tool, please refer to the following discussion for data requirements and methodology.

### 1.2.1 Data Requirements

To calculate CO<sub>2</sub>, CH<sub>4</sub> and N<sub>2</sub>O emissions from electricity consumption, the following data are required:

- Electricity consumption by sector;
- Percent electricity consumption by end-use equipment;
- Electricity emission factors; and
- Transmission loss factors.

Electricity consumption statistics should be collected on a kilowatt-hour<sup>1</sup> (kWh) basis. Statistics providing energy consumption data in other units, British Thermal Units (Btu), may be used, but require conversion to kWh. One kWh is equivalent to 3,412 Btu. Please note that even data given in Btu may be preceded by a prefix indicating order of magnitude (i.e. thousand, million, billion). For a better understanding of the quantity prefixes used with Btu, refer to Box 1.

### Box 1: Energy Units

A British thermal unit (Btu) is the quantity of heat required to raise the temperature of one pound of water one degree Fahrenheit at or near 39.2° Fahrenheit.

Btu	British thermal unit	1 Btu
MBtu	Thousand Btu	1x10 <sup>3</sup> Btu
MMBtu	Million Btu	1x10 <sup>6</sup> Btu
BBtu	Billion Btu	1x10 <sup>9</sup> Btu
TBtu	Trillion Btu	1x10 <sup>12</sup> Btu
QBtu	Quadrillion Btu	1x10 <sup>15</sup> Btu

The Electricity Consumption module calculates CO<sub>2</sub>, CH<sub>4</sub> and N<sub>2</sub>O emissions from the electricity consumption by the end-use equipment types, by end-use sector shown in Table 1. The following sections provide a discussion of the available data for each sector.

**Table 1. End-Use Equipment by Sector**


<b>Residential<sup>1</sup></b>	<b>Commercial<sup>2</sup></b>	<b>Industrial<sup>3</sup></b>	<b>Transportation<sup>4</sup></b>
Space Heating Air-conditioning Water Heating Refrigeration Other Appliances and Lighting	Space Heating Cooling Ventilation Water Heating Lighting Cooking Refrigeration Office Equipment Computers Other	<b>Indirect Uses- Boiler Fuel</b> Conventional Boiler Use CHP and/or Cogeneration Process <b>Direct Uses- Total Process</b> Process Heating Process Cooling and Refrigeration Machine Drive Electro-Chemical Processes Other Process Use <b>Direct Uses- Total Nonprocess</b> Facility HVAC Facility Lighting Other Facility Support Onsite Transportation Other Nonprocess Use	Automated Guideway Bus (charged batteries) Cable Car Commuter Rail Heavy Rail Inclined Plane Light Rail Trolleybus Other

Source: <sup>1</sup>EIA 2023, <sup>2</sup>EIA 2022, <sup>3</sup>EIA 2021, and <sup>4</sup>FTA 2022

## 1.2.2 Tool Layout

Because there are multiple steps to complete within the Electricity Consumption module, it is important to understand the module's overall design. The layout of the Electricity Consumption module and the purpose of its worksheets are presented in Figure 3.

<sup>1</sup> A measure of electricity defined as a unit of work or energy, measured as 1 kilowatt (1,000 watts) of power expended for 1 hour. One kWh is equivalent to 3,412 Btu.

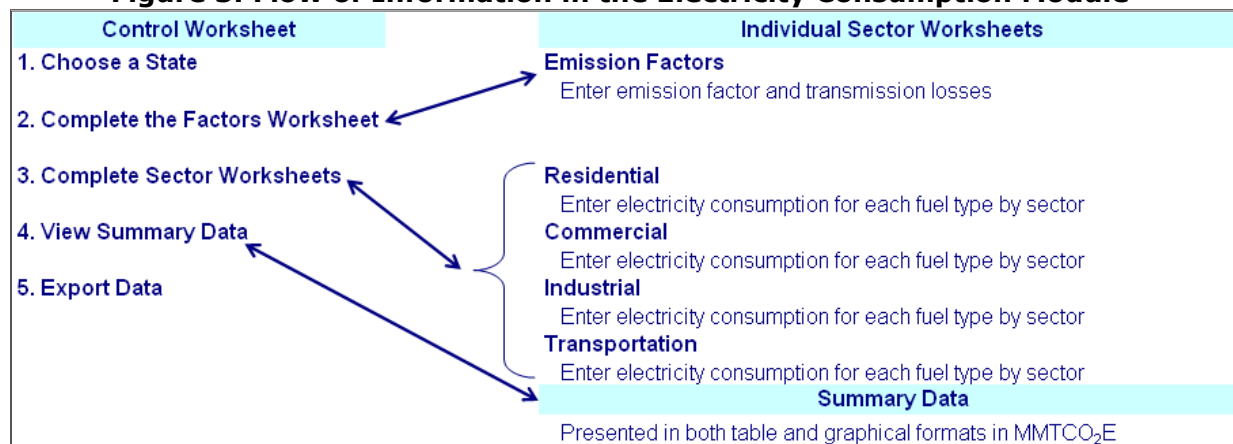**Figure 3. Flow of Information in the Electricity Consumption Module\***

\* These worksheets are the primary worksheets used in the Electricity Consumption module; subsequent worksheets are used to populate the default data and are provided for informational purposes only.

## 1.3 METHODOLOGY

This section provides a guide to using the Electricity Consumption module of the SIT to estimate indirect CO<sub>2</sub>, CH<sub>4</sub> and N<sub>2</sub>O emissions from sectors and end-use equipment that consume electricity. Within the Electricity Consumption module, these sectors are residential, commercial, transportation, and industrial. Because the methodology is similar in all sectors, a general methodology is discussed and specific examples for each sector are provided.

### Box 2: State Energy Data Sources

In-state sources, such as state energy commissions or public utility commissions, should be consulted first. Otherwise, default data provided by the Electricity Consumption module may be used. Electricity consumption statistics should be provided on a kWh basis.

The Electricity Consumption module automatically calculates emissions after you enter factors on the emission factor worksheet, electricity consumption data, and the percent consumption by end-use sector equipment. The tool provides default electricity consumption data, which comes from the EIA's State Energy Consumption, Price, and Expenditure Estimates (SEDS) EIA (2024b).<sup>2</sup> However, other more state-specific data may be used if available (see Box 2 for suggestions on where to find data).

This User's Guide provides an overview of the estimation methodology used in the Electricity Consumption module by walking through the following steps: (1) select a state; (2) complete the emission factor worksheet; (3) complete the residential sector worksheet; (4) complete the commercial sector worksheet; (5) complete the transportation sector worksheet; (6) complete the industrial sector worksheet; (7) review summary information; and (8) export data.

The general equation used to calculate indirect CO<sub>2</sub>, CH<sub>4</sub> and N<sub>2</sub>O emissions from electricity consumption is shown in Equation 1.

<sup>2</sup> These data are available at <https://www.eia.gov/state/seds/>.

**Equation 1. General Emission Equation**

$$\text{Emissions (MMTCO}_2\text{E)} = \frac{\{(\text{Total State Consumption (kWh)} \times \text{End-Use Equipment Consumption (\%)}) \div (1 - \text{Transmission Loss Factor (\%)})\} \times \text{Emission Factor (lbs CO}_2\text{E/kWh)} \times 0.0005 \text{ short ton/lbs} \times 0.90718 \text{ (Ratio of Short Tons to Metric Tons)} \div 1,000,000$$

**Step (1)      Select a State**

To begin, select the state you are interested in evaluating. By selecting a state, the rest of the tool will automatically reset to reflect the appropriate state default data and assumptions for use in subsequent steps of the tool.

**Step (2)      Complete the Factors Worksheet**

Step 2 requires users to select appropriate factors for several key variables necessary for estimating indirect CO<sub>2</sub>, CH<sub>4</sub> and N<sub>2</sub>O emissions from electricity consumption. On the Factors worksheet, default electricity emission factors and transmission loss factors are provided and will be used to estimate emissions throughout the tool. To select all of the default data, select the “Check All Boxes” button on the Factors worksheet or check the default box directly above the yellow input cells for each year in the time series. Note that users may select a default factor and later override the factor if better data becomes available. An example of the Factors worksheet is provided in Figure 4 below.

Default emission factors for electricity consumption (lbs CO<sub>2</sub>E/kWh) are provided in the Factors worksheet. Values are derived from Year 2005, 2007, 2009, 2010, 2012, 2014, 2016, 2018, 2019, 2020, and 2021 Emissions & Generation Resource Integrated Database (eGRID) subregion values, weighted by the number of households based on distribution utilities within in each eGRID subregion in each state (U.S. EPA 2007, U.S. EPA 2010, U.S. EPA 2012, U.S. EPA 2014, U.S. EPA 2015, U.S. EPA 2017, U.S. EPA 2018, U.S. EPA 2020, U.S. EPA 2021, U.S. EPA 2022, U.S. EPA 2023, and U.S. EPA 2024b). This weighted emission factor is intended to better reflect emissions related to electricity consumption within a state and consider the flow of electricity across state boundaries. Because these emission factors do not account for any transmission and distribution losses between the points of generation and the points of consumption, a transmission loss factor must be applied. The transmission loss factor considers electric energy lost due to the transmission and distribution of electricity. Additional information on eGRID emission factors is provided in Box 3.



### Box 3: eGRID Emission Factors

The Emissions & Generation Resource Integrated Database (eGRID) is a comprehensive inventory of environmental attributes of electric power systems. The preeminent source of air emissions data for the electric power sector, eGRID is based on available plant-specific data for all U.S. electricity generating plants that provide power to the electric grid and report data to the U.S. government. eGRID integrates many different federal data sources on power plants and power companies, from three different federal agencies: EPA, the Energy Information Administration (EIA), and the Federal Energy Regulatory Commission (FERC). eGRID also provides aggregated data by state, U.S. total, company, and by three different sets of electric grid boundaries.

Plant level emissions in eGRID are built by summing its component parts – which could simply be unit level boilers and/or turbines or a combination of boilers and prime movers representing an aggregation of like generating units. In general, eGRID plant level emissions reflect a combination of monitored and estimated data. Emissions and emission rates in eGRID represent emissions and rates at the point(s) of generation. They do account for losses within the generating plants (net generation).

Note that default emission factors are estimated throughout alternate years in the time series. While these emission and transmission loss factors were developed for 2005, 2007, 2009, 2010, 2012, 2014, and 2016, emission factor and household data were not available for the remaining years in the time series. To facilitate emission calculations for other years, the tool utilizes the 2005, 2007, 2009, 2010, 2012, 2014, 2016, 2018, 2019, and 2020 emission factors to linearly interpolate intermediate years and proxy the beginning and end of the time series. 2005 emission factors are used from 1990 through 2005. Emission factors are linearly interpolated for 2006 (using 2005 and 2007 eGRID factors), 2008 (using 2007 and 2009 eGRID factors), 2011 (using 2010 and 2012 eGRID factors), 2013 (using 2012 and 2014 eGRID factors), and 2015 (using 2014 and 2016 eGRID factors), and 2017 (using 2016 and 2018 eGRID factors). 2022 eGRID emission factors are used to proxy 2023 through 2025. Emission factors within the module will be updated as soon as new data become available.

**Figure 4. Factors Worksheet for the Electricity Consumption Module**

**2. Electricity Emission Factors and Transmission Loss Factors in Colorado**

Default emission factors for electricity consumption (lbs CO<sub>2</sub>/kWh) are provided below. Values are derived from Year 2005 and 2007 Emissions & Generation Resource Integrated Database (eGRID) subregion values, weighted by the number of households in each eGRID subregion in each state. This weighted emission factor is intended to better reflect emissions related to electricity consumption within a state, and take into account the flow of electricity across state boundaries. Since these emission factors do not account for any transmission and distribution losses between the points of generation and the points of consumption, a transmission loss factor must be applied. The transmission loss factor takes into account electric energy lost due to the transmission and distribution of electricity. Additional information on the emission factors is provided in the Electricity Consumption User's Guide.

Note that default emission factors are identical throughout the time series from 1990 through 2006 (using 2005 eGRID factors), and from 2007 through 2020 (using 2007 eGRID factors). While these emission and transmission loss factors were developed for 2005 and 2007, emission factor and household data were not available for the remaining years in the time series. To facilitate emission calculations for other years, the tool utilizes the 2005 and 2007 emission factors as proxies. Emission factors will be updated as soon as new data become available. For further detail on this method, refer to the Electricity Consumption User's Guide.

**1990** ☒ Default Factors?

Electricity Emission Factor (lbs CO<sub>2</sub>/kWh) 1.88

Transmission loss Factor (%) 5.33%

**1991** ☒ Default Factors?

Electricity Emission Factor (lbs CO<sub>2</sub>/kWh) 1.88

Transmission loss Factor (%) 5.33%

**1992** ☒ Default Factors?

Electricity Emission Factor (lbs CO<sub>2</sub>/kWh) 1.88

Transmission loss Factor (%) 5.33%

**1993** ☒ Default Factors?

Electricity Emission Factor (lbs CO<sub>2</sub>/kWh) 1.88

Transmission loss Factor (%) 5.33%

Navigation bar: Control | EF Selection | Residential C | Commercial C | Transportation C | Industrial C | Summary-MMTCO2E | Data Sources | Transport Breakout | NTD Pivot | CRECS

The worksheets for each sector have the same basic set-up, with variations in the color of the data input cells, and the end-use equipment for each end-use sector. On the residential sector worksheet, presented as an example in Figure 5, the orange cells indicate where the required energy activity data are entered either manually or automatically from default data. This activity data are converted into CO<sub>2</sub>, CH<sub>4</sub> and N<sub>2</sub>O emissions using the factors entered on the Factors worksheet and the formula presented in Equation 1.

The second piece of activity data required to estimate emissions is the percent end-use equipment for each sector across the state. A list of end-use equipment that consumes electricity in each sector is provided in Table 1 and is included in the Electricity Consumption module. End-use consumption data used in the module is derived from a variety of publications, discussed further in Box 4.

The Electricity Consumption module calculates emissions for each sector by multiplying total electricity consumption by the percent consumption by end-use equipment and the emission and transmission loss factor to obtain the total carbon emitted. Then, the total amount of carbon emitted are converted into MMTCO<sub>2</sub>E, by multiplying by the ratio of metric tons per short ton (0.9072) to obtain metric tons and dividing by 10<sup>6</sup> and multiplying by 44/12 to express emissions in MMTCO<sub>2</sub>E (Equation 1).

**Figure 5. Example of the Required Electricity Data in the Residential Worksheet**

3. Residential Electricity Consumption in Alabama

Click here for information on data sources

Indirect CO<sub>2</sub> emissions from electricity consumption in the residential sector are calculated by multiplying state energy consumption (total kWh consumed in the residential sector) by the percentage of state consumption by residential end-use. The resulting sub-sector consumption values (kWh) are then multiplied by a state-specific emission factor (lbs CO<sub>2</sub>/kWh) and transmission line losses. The resulting emissions values, in pounds of carbon, are converted to short tons of carbon, million metric tons of carbon equivalent (MMTCE), then to million metric tons of carbon dioxide equivalent (MMTCE), and summed. Note default data for residential electricity consumption includes the electricity associated with residential charging of electric vehicles under the "Other Appliances and Lighting" category.

Go to the Control Sheet

Go to the MMTCE Summary Sheet

Check All Boxes

Clear All Data

Residential 1990

☒ Default Consumption Data ☒ Default Percent Data

End-Use Equipment Data

Sub-sector	Total State Consumption (kWh)	% End Use of Sector Consumption (%)	Sub-sector Consumption (kWh)	Transmission Factor (%)	Emission Factor (lbs CO <sub>2</sub> /kWh)	Emissions (lbs carbon)	Emissions (short tons carbon)	Emissions (MMTCE)
Space Heating		10.8%	2,244,022,936	1.0%	-	-	-	0.00
Air-conditioning		22.4%	4,637,647,401	1.0%	-	-	-	0.00
Water Heating		10.8%	2,244,022,936	1.0%	-	-	-	0.00
Refrigeration		12.3%	2,543,225,994	1.0%	-	-	-	0.00
Other Appliances and Lighting		43.7%	9,050,692,508	1.0%	-	-	-	0.00
<b>TOTAL</b>	<b>20,719,811,775</b>	<b>100.0%</b>	<b>20,719,811,775</b>	<b>1.0%</b>	<b>-</b>	<b>-</b>	<b>-</b>	<b>0.00</b>

Residential 1991

☒ Default Consumption Data ☒ Default Percent Data

Required Electricity Consumption Data

Sub-sector	Total State Consumption (kWh)	% End Use of Sector Consumption (%)	Sub-sector Consumption (kWh)	Transmission Factor (%)	Emission Factor (lbs CO <sub>2</sub> /kWh)	Emissions (lbs carbon)	Emissions (short tons carbon)	Emissions (MMTCE)
Space Heating		10.8%	2,306,272,257	1.0%	-	-	-	0.00
Air-conditioning		22.4%	4,768,295,997	1.0%	-	-	-	0.00
Water Heating		10.8%	2,306,272,257	1.0%	-	-	-	0.00
Refrigeration		12.3%	2,610,775,224	1.0%	-	-	-	0.00
Other Appliances and Lighting		43.7%	9,301,964,768	1.0%	-	-	-	0.00
<b>TOTAL</b>	<b>21,294,580,502</b>	<b>100.0%</b>	<b>21,294,580,502</b>	<b>1.0%</b>	<b>-</b>	<b>-</b>	<b>-</b>	<b>0.00</b>

### Box 4: End-Use Equipment Data Sources

#### Residential

Residential end-use equipment activity is from the Residential Energy Consumption Survey (RECS) (EIA 2023). The Residential Energy Consumption Survey (RECS) provides information on the use of energy in residential housing units in the United States. This information includes: the physical characteristics of the housing units; the appliances utilized including space heating and cooling equipment; demographic characteristics of the household; the types of fuels used; and other information that relates to energy use. The RECS also provides energy consumption and expenditures data for: natural gas, electricity, fuel oil, liquefied petroleum gas (LPG), and kerosene. The RECS is published in 4-year intervals. As a result, the Electricity Consumption Module uses 2001, 2005, 2009, 2015, and 2020 RECS data, and interpolates to estimate intervening years. Activity data beyond 2020 is proxied to the 2020 values. The Electricity Consumption Module utilizes regional-level data available from the RECS.

RECS data are available online at: <https://www.eia.gov/consumption/residential/>.

#### Commercial

Commercial end-use equipment activity is from the Commercial Building Energy Consumption Survey (CBECS) (EIA 2022). The Commercial Buildings Energy Consumption Survey (CBECS) is a national sample survey that collects information on the stock of U.S. commercial buildings, their energy-related building characteristics, and their energy consumption and expenditures. Commercial buildings include all buildings in which at least half of the floorspace is used for a purpose that is not residential, industrial, or agricultural, so they include building types that might not traditionally be considered "commercial," such as schools, correctional institutions, and buildings used for religious worship. The CBECS has been published for 2003, 2012, and 2018. As a result, the Electricity Consumption Module uses 2003, 2012, and 2018, and interpolates to estimate intervening years. Activity data beyond 2018 is proxied to the 2018 values. The Electricity Consumption Module utilizes regional-level data available from the CBECS.

CBECS data are available online at: <https://www.eia.gov/consumption/commercial/>.

#### Transportation

Transportation end-use equipment activity is from the National Transit Database (NTD) (FTA 2022). The NTD was established by Congress to be the Nation's primary source for information and statistics on the transit systems of the United States. The data contained in the 2021 National Transit Database (NTD) is one of three publications comprising the National Transit Database Program's Annual Report. It provides detailed summaries of financial and operating data submitted to the Federal Transit Administration (FTA) by the nation's mass transit agencies for the report year ending on or between January 1 and December 31, 2022. The Electricity Consumption Module uses 2007 through 2022 data from the NTD, and proxies 1990 through 2007. The Electricity Consumption Module utilizes state-level data available from the NTD.

NTD data are available online at: <https://www.transit.dot.gov/ntd/data-product/2021-fuel-and-energy>.

#### Industrial

Industrial end-use equipment activity is from the Manufacturing Energy Consumption Survey (MECS) (EIA 2021). The Manufacturing Energy Consumption Survey (MECS) is the Federal Government's comprehensive source of information on energy use by U.S. manufacturers. The survey collects data on energy consumption and expenditures, fuel-switching capability, onsite generation of electricity, byproduct energy use, and other energy related topics. The Electricity Consumption Module uses 2002, 2006, 2010, 2014, and 2018 data from the MECS. Data for 1990 through 2001 data are proxied to 2002. Data between 2002 and 2006, 2006 and 2010, 2010 and 2014, and 2014 and 2018 are linearly interpolated. Data for 2019 through 2021 are proxied to 2018. The Electricity Consumption Module utilizes regional-level data available from the MECS.

MECS data are available online at: <https://www.eia.gov/consumption/manufacturing/>.

## Step (7) Review Summary Information

The steps above provide estimates of total CO<sub>2</sub>, CH<sub>4</sub> and N<sub>2</sub>O emissions from electricity consumption. The information for each sector is collected on the summary worksheet, displaying results in MMTCO<sub>2</sub>E. Figure 6 shows the summary worksheet that sums the emissions from all sectors in the Electricity Consumption module. In addition, the results are displayed in graphical format at the bottom of the summary worksheets. Toggle buttons to the left of each sector either expand (“+”) or collapse (“-”) rows to show end-use equipment data.

**Figure 6. Example of the Emissions Summary Worksheet in the Electricity Consumption Module**

7. Alabama Emissions Summary (MMTCo2E)

Emissions were not calculated for the following sector: Transportation.

Emissions (MMTCo2E)	1990	1991	1992	1993	1994	1995	1996	1997	1998	1999	2000	2001	2002	2003	2004	2005
Residential	13.53	13.91	13.80	14.73	15.12	15.88	16.74	16.26	17.85	17.66	18.73	18.16	19.61	19.21	19.66	20.45
Commercial	7.57	7.80	7.55	7.73	8.16	8.39	9.11	11.13	11.95	12.29	12.89	12.80	13.34	13.33	13.82	14.11
Industrial	18.04	18.28	19.25	19.93	20.54	21.45	21.89	21.30	21.90	22.55	22.88	20.86	21.30	22.21	23.24	23.69
Transportation	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
<b>TOTAL</b>	<b>39.15</b>	<b>39.98</b>	<b>40.60</b>	<b>42.48</b>	<b>44.15</b>	<b>46.72</b>	<b>47.74</b>	<b>48.69</b>	<b>51.70</b>	<b>52.50</b>	<b>54.54</b>	<b>51.82</b>	<b>54.28</b>	<b>54.78</b>	<b>56.73</b>	<b>58.28</b>

Toggle Button to Expand Sector

Emissions by Gas (MMTCo2E)	1990	1991	1992	1993	1994	1995	1996	1997	1998	1999	2000	2001	2002	2003	2004	2005
<b>Carbon Dioxide</b>	<b>38.94</b>	<b>39.70</b>	<b>40.39</b>	<b>42.27</b>	<b>43.91</b>	<b>46.49</b>	<b>47.50</b>	<b>48.44</b>	<b>51.44</b>	<b>52.24</b>	<b>54.27</b>	<b>51.56</b>	<b>53.97</b>	<b>54.48</b>	<b>56.44</b>	<b>57.96</b>
Residential	13.46	13.83	13.73	14.70	15.05	15.80	16.66	16.17	17.76	17.57	18.68	18.06	19.51	19.11	19.56	20.35
Commercial	7.53	7.76	7.51	7.74	8.12	8.35	9.06	11.07	11.89	12.23	12.82	12.74	13.27	13.26	13.75	14.04
Industrial	17.94	18.10	19.15	19.53	20.74	21.34	21.78	21.19	21.79	22.44	22.76	20.76	21.19	22.12	23.13	23.57
Transportation	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
<b>Methane</b>	<b>0.02</b>	<b>0.02</b>	<b>0.02</b>	<b>0.02</b>	<b>0.02</b>	<b>0.02</b>	<b>0.02</b>	<b>0.03</b>	<b>0.03</b>	<b>0.03</b>	<b>0.03</b>	<b>0.03</b>	<b>0.03</b>	<b>0.03</b>	<b>0.03</b>	<b>0.03</b>
Residential	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01
Commercial	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01
Industrial	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01
Transportation	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
<b>Nitrous Oxide</b>	<b>0.16</b>	<b>0.16</b>	<b>0.18</b>	<b>0.19</b>	<b>0.20</b>	<b>0.21</b>	<b>0.22</b>	<b>0.22</b>	<b>0.23</b>	<b>0.24</b>	<b>0.25</b>	<b>0.24</b>	<b>0.25</b>	<b>0.25</b>	<b>0.26</b>	<b>0.26</b>
Residential	0.06	0.06	0.06	0.07	0.07	0.07	0.08	0.07	0.08	0.08	0.09	0.08	0.09	0.09	0.09	0.09
Commercial	0.03	0.04	0.03	0.04	0.04	0.04	0.04	0.05	0.05	0.05	0.06	0.06	0.06	0.06	0.06	0.06
Industrial	0.06	0.06	0.09	0.09	0.09	0.10	0.10	0.10	0.10	0.10	0.10	0.10	0.09	0.10	0.11	0.11
Transportation	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
<b>TOTAL</b>	<b>39.15</b>	<b>39.98</b>	<b>40.60</b>	<b>42.48</b>	<b>44.15</b>	<b>46.72</b>	<b>47.74</b>	<b>48.69</b>	<b>51.70</b>	<b>52.50</b>	<b>54.54</b>	<b>51.82</b>	<b>54.28</b>	<b>54.78</b>	<b>56.73</b>	<b>58.28</b>

## Step (8) Export Data

The final step is to export the summary data. Exporting data allows the estimates from each module to be combined later by the Synthesis Module to produce a comprehensive greenhouse gas inventory for the state.

To access the “Export Data” button, return to the control sheet and scroll down to the bottom (8). Click on the “Export Data” button and a message box will open that reminds the user to make sure all steps of the module have been completed. If you make any changes to the Electricity Consumption module later, you will then need to re-export the results.

**Note: the resulting export file should not be modified.** The export file contains a summary worksheet where users can view the results, as well as a separate data worksheet with an unformatted version of the results; this data worksheet contains the information that is exported to the Synthesis Tool, and it is especially important that users do not modify it. Adding/removing rows, moving data, or making other modifications jeopardize the ability of the Synthesis Module to accurately analyze the data.

Clicking “OK” prompts you to save the file.

The file is already named, so you only need to choose a convenient place to save the file.

After the file is saved, a message box will appear indicating that the data was successfully exported.

While completing the modules, you are encouraged to save each completed module; doing so will enable you to easily make changes without re-running it entirely.

Following data export, the module may be reset and run for an additional state. Alternatively, you may run the remaining modules of the State Inventory Tool to obtain a comprehensive profile of emissions for your state.

## 1.4 REFERENCES

EIA. 2021. *Manufacturing Energy Consumption Survey*. Energy Information Administration, U.S. Department of Energy. Released February 2021. Available at: <https://www.eia.gov/consumption/data.ph>.

EIA. 2022. *Commercial Building Energy Consumption Survey*. Energy Information Administration, U.S. Department of Energy. Released December 2022. Available at: <https://www.eia.gov/consumption/commercial/data/2012/>  
<https://www.eia.gov/consumption/commercial/data/2018>.

EIA. 2023. *Residential Energy Consumption Survey*. Energy Information Administration, U.S. Department of Energy. Released June 2023. Available at: <https://www.eia.gov/consumption/residential/data/2020/>.

EIA. 2024. *State Energy Data 2021 Consumption*. Energy Information Administration, U.S. Department of Energy. DOE/EIA-0214(2022). Available at: .

FTA. 2022. National Transit Database (NTD). 2022 Annual Database Energy Consumption. Available at: <https://www.transit.dot.gov/ntd/data-product/2022-fuel-and-energy>.

U.S. EPA. 2007. The Emissions & Generation Resource Integrated Database for 2005 (eGRID2005) Version 1.1, eGRID subregion year 2005 data file, December 2007. Available at: <http://www.epa.gov/energy/eGRID>.

U.S. EPA. 2010. The Emissions & Generation Resource Integrated Database for 2007 (eGRID2007) Version 1.1, eGRID subregion year 2007 data file, February 2010. Available at: <http://www.epa.gov/energy/eGRID>.

U.S. EPA. 2012. The Emissions & Generation Resource Integrated Database for 2009 (eGRID2009) Version 1.1, eGRID subregion year 2009 data file, February 2012. Available at: <http://www.epa.gov/energy/eGRID>.

U.S. EPA. 2014. The Emissions & Generation Resource Integrated Database for 2010 (eGRID2010) Version 1.0, eGRID subregion year 2010 data file, February 2014. Available at: <http://www.epa.gov/energy/eGRID>.

U.S. EPA. 2015. The Emissions & Generation Resource Integrated Database for 2012 (eGRID2012) Version 1.0, eGRID subregion year 2012 data file, February 2015. Available at: <http://www.epa.gov/energy/eGRID>.



- U.S. EPA. 2017. The Emissions & Generation Resource Integrated Database for 2014 (eGRID2014) Version 2.0, eGRID subregion year 2014 data file, February 2017. Available at: <http://www.epa.gov/energy/egrid>.
- U.S. EPA. 2018. The Emissions & Generation Resource Integrated Database for 2016 (eGRID2016) Version 1.0, eGRID subregion year 2016 data file, February 2018. Available at: <http://www.epa.gov/energy/egrid>.
- U.S. EPA. 2020. The Emissions & Generation Resource Integrated Database for 2018 (eGRID2018) Version 1.0, eGRID subregion year 2018 data file, February 2020. Available at: <http://www.epa.gov/energy/egrid>.
- U.S. EPA. 2021. The Emissions & Generation Resource Integrated Database for 2019 (eGRID2019) Version 1.0, eGRID subregion year 2019 data file, February 2021. Available at: <http://www.epa.gov/energy/egrid>. U.S. EPA. 2022a. Inventory of U.S. Greenhouse Gas Emissions and Sinks: 1990 – 2020. Office of Atmospheric Programs, U.S. Environmental Protection Agency. Available at: <https://www.epa.gov/ghgemissions/inventory-us-greenhouse-gas-emissions-and-sinks-1990-2020>.
- U.S. EPA. 2022. The Emissions & Generation Resource Integrated Database for 2020 (eGRID2020) Version 1.0, eGRID subregion year 2020 data file, January 2022. Available at: <http://www.epa.gov/energy/egrid>.
- U.S. EPA. 2023. The Emissions & Generation Resource Integrated Database for 2022 (eGRID2021) Version 1.0, eGRID subregion year 2021 data file, January 2023. Available at: <http://www.epa.gov/energy/egrid>.
- U.S. EPA. 2024a. Inventory of U.S. Greenhouse Gas Emissions and Sinks By State: 1990 – 2022. Office of Atmospheric Protection, U.S. Environmental Protection Agency. Available at: <https://www.epa.gov/ghgemissions/state-ghg-emissions-and-removals>. <http://www.epa.gov/energy/egridh>
- U.S. EPA. 2024b. The Emissions & Generation Resource Integrated Database for 2022 (eGRID2022) Version 1.0, eGRID subregion year 2022 data file, January 2024. Available at: <http://www.epa.gov/energy/egrid>.