


Hazards in a Flooded Home

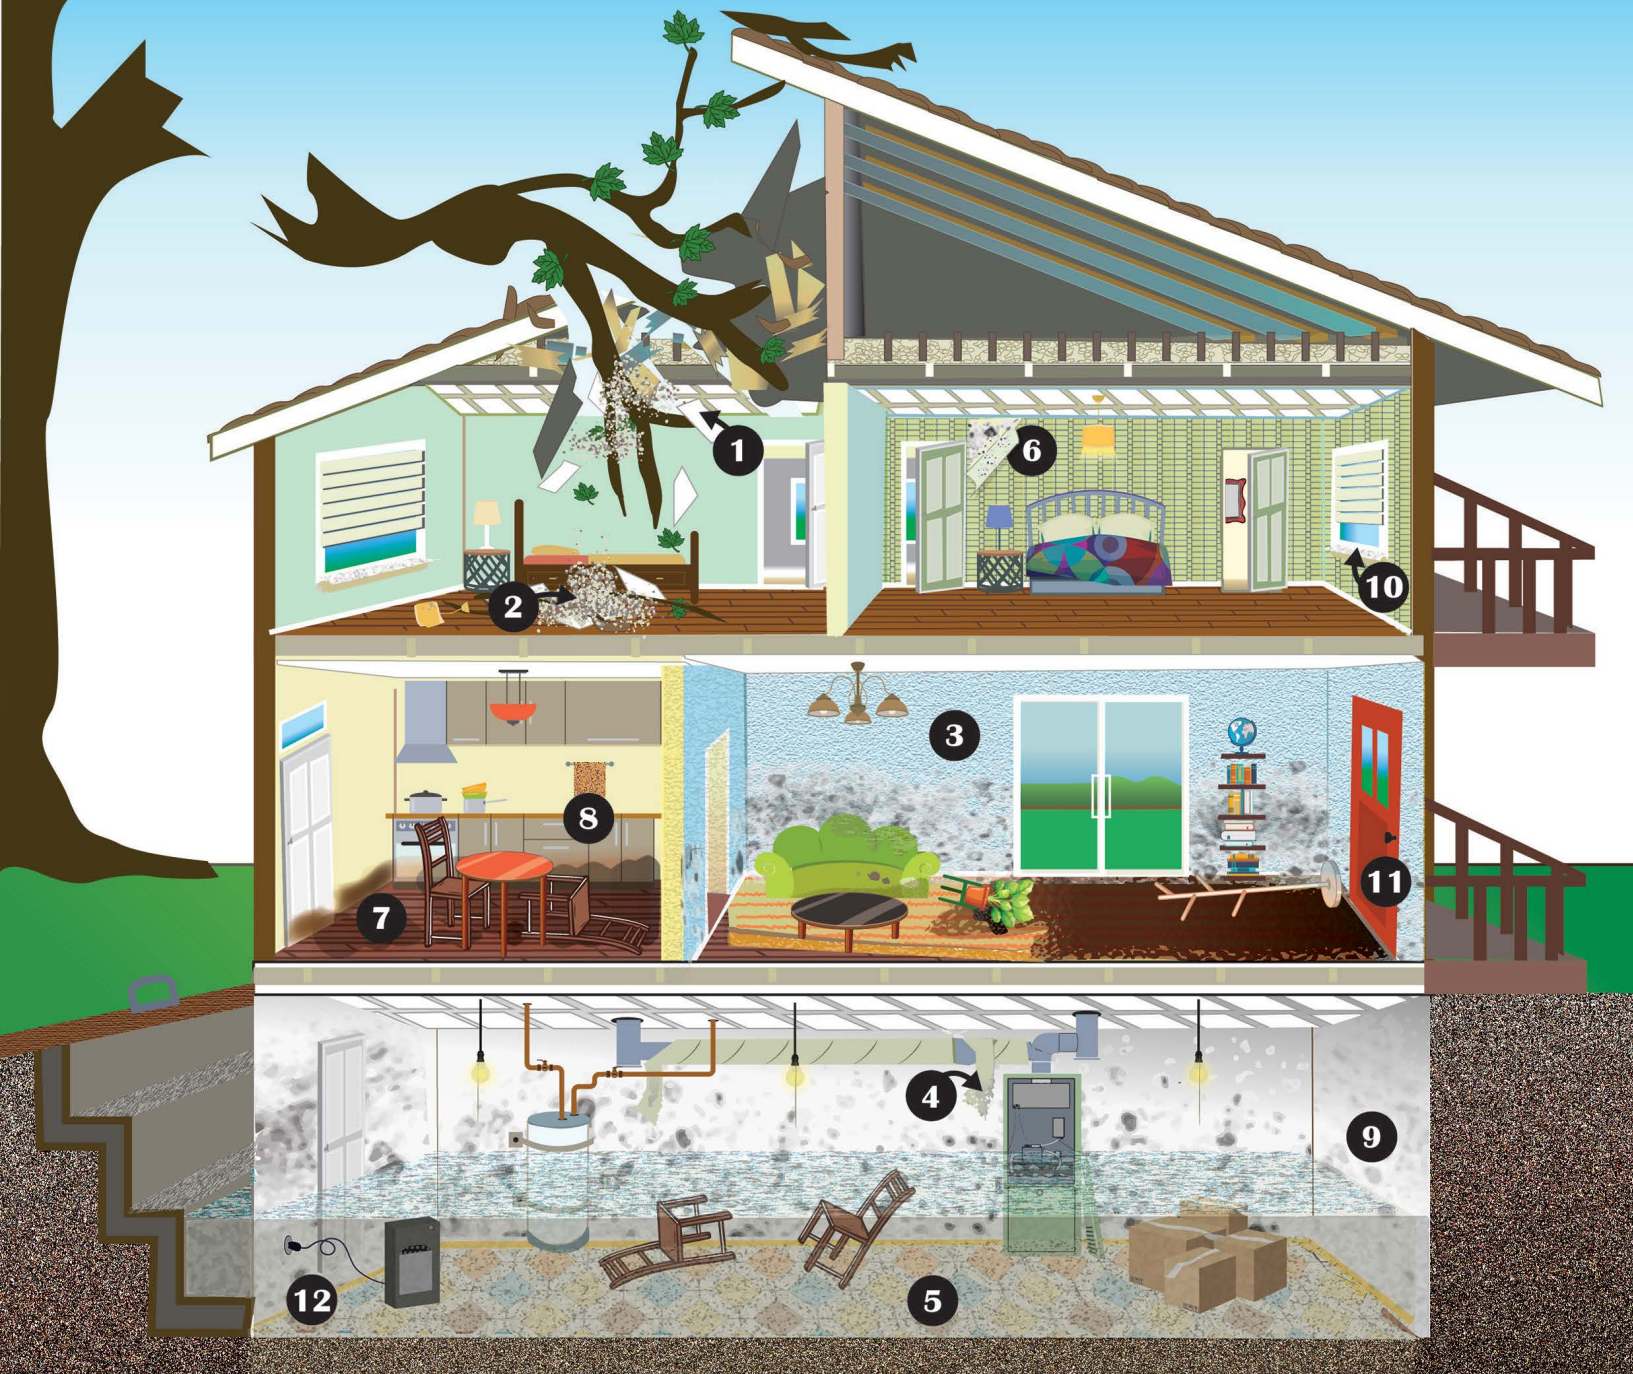

Asbestos

- 1 Acoustic ceiling tiles
- 2 Vermiculite insulation: gray-brown or silver-gold pebble-like
- 3 Textured coated walls and ceilings
- 4 Insulation on boilers, furnaces, and piping
- 5 Vinyl tiles and linoleum sheet flooring

Mold

- 6 Behind wallpaper or wood paneling
- 7 In and under flooring such as lifted wood floors, carpet, and cracked tiles
- 8 Hidden mold behind kitchen cabinets
- 9 Mold on furniture and walls

Lead

- 10 Interior and exterior windows and windowsills
- 11 Interior and exterior doors and door frames

Shock Hazard

- 12 Electrical shock hazard