



JOINT EPA-HUD CURRICULUM

January 2026

Model Certified Lead Dust Sampling Technician Initial Training Course

STUDENT MANUAL

Table of Contents

Student Overview	1
Chapter 1: Introduction	3
Presentation Slides	4
Attachment 1-A: Comparing Lead Evaluation Professionals	23
Chapter 2: Visual Inspection	24
Presentation Slides	25
Attachment 2-A: Sample Visual Inspection Form	44
Attachment 2-B: Completed Sample Visual Inspection Form	45
Chapter 3: Lead Dust Wipe Sampling	46
Presentation Slides	47
Attachment 3-A: Sample Collection Form	90
Attachment 3-B: Completed Sample Collection Form	91
Attachment 3-C: Worksheet for Performing Mathematical Calculations from Fractions to Decimals	92
Attachment 3-D: EPA Lead Dust Wipe Checklist	93
Chapter 4: Selecting a Laboratory	95
Presentation Slides	96
Attachment 4-A: Questions to Ask a Laboratory	109
Attachment 4-B: Blank Chain of Custody Form	110
Attachment 4-C: Worksheet for Performing Mathematical Conversions for Dust Samples	112
Attachment 4-D: Activity Interpreting Laboratory Results	113

Chapter 5: Writing the Report	117
Presentation Slides	119
Attachment 5-A: Sample Written Report	126

Chapter 6: Putting the Skills Together	132
Chapter 6 Presentation Slides	133
Attachment 6-A - Activity 1: Where to Take Samples for Renovated Areas	140
Attachment 6-B - Activity 3: Interpreting Laboratory Results	143
Attachment 6-C - Activity 4: Translating Results into a Written Report	147

Appendix A: Excerpt from the Renovation, Repair, and Painting Regulations at 40 CFR Part 745 Subpart E	151
---	------------

Appendix B: Lead-Safe Certified Guide to Renovate Right	155
--	------------

Appendix C: Lead Dust Sampling Technician Field Guide	177
--	------------

Student Overview

The Course Curriculum

The U.S. Environmental Protection Agency (EPA) and U.S. Department of Housing and Urban Development (HUD) have produced this course to teach individuals how to conduct non-abatement dust-lead testing. This course is designed to be taught over an 8-hour time period with 2 hours devoted to hands-on training. For certification purposes, the course can be taught by either an EPA-accredited training provider, or a training provider accredited by an authorized State, Tribe, or Territory.

Objectives for the Course

At the end of the course, students will be able to:

- Understand the federal, state, and Tribal regulatory requirements for dust-lead testing to the dust-lead action levels;
- Conduct a visual inspection and correctly identify visible dust, debris, and deteriorated paint;
- Appropriately determine where to take dust samples and how to develop a sampling strategy;
- Collect dust samples in accordance with standard acceptable procedures;
- Interpret the results of a laboratory analysis for lead in dust correctly;
- Apply these skills to conduct an appropriate dust-lead test in post-renovation and other circumstances; and
- Write a complete, accurate, and understandable report of sampling results.

Audience for the Course

Organizations that will be interested in this course include:

- State and local public agencies that administer federal funds for housing;
- Non-profit and community housing organizations, particularly those that assist public agencies in administering Federal housing funds;
- State and local health departments;
- Home inspection firms; and
- Lead and other environmental services firms.

Appropriate staff to take this course will include:

- Housing quality standards (HQS) inspectors;
- Rehabilitation specialists;
- Home inspectors; and
- Other staff who are involved in evaluating buildings.

Overview of Lead Dust Sampling Technician Training Curriculum

This training course consists of three parts in the six chapters including:

Part 1: Introduction

- **Chapter 1: Introduction** provides an overview of the course, the role of a lead dust sampling technician, and the relevance of the EPA Renovation, Repair, and Painting (RRP) Rule and HUD’s Lead Safe Housing Rule (LSHR).

Part 2: Skills

- **Chapter 2: Visual Inspection** explains how to perform a visual inspection for paint chips, dust and debris and, in some circumstances, deteriorated paint.
- **Chapter 3: Lead Dust Wipe Sampling** describes how to prepare for and collect dust wipe samples.
- **Chapter 4: Selecting a Laboratory and Interpreting Results** describes how to select a recognized lab, how to submit samples, and how to interpret the results.

Part 3: Application

- **Chapter 5: Writing the Report** covers how to prepare the report.
- **Chapter 6: Putting the Skills Together** gives the students an opportunity to put their new skills to the test in a series of desktop and hands on exercises that cover the issues of sample location selection, dust wipe sampling, interpreting laboratory results and writing a post-work dust-lead testing report

Course Materials

Course materials include slides, an instructor manual, a student manual, and a Lead Dust Sampling Technician Field Guide, all of which can be found at www.epa.gov/lead/lead-dust-sampling-tech.

- **Slides.** Each chapter in this course has slides that highlight key points to be made during the presentation. The slides also include pictures, diagrams, and other visual aids.
- **Instructor Manual.** The instructor manual includes copies of the slides and explanatory text. At the front of each chapter, there are brief instructor notes that describe the chapter objectives, the activities, and additional information if necessary. The back of each chapter includes attachments such as sample documents, exercises, etc. Finally, in the back of the manual there are three appendices that contain useful resources for both instructors and students.
- **Student Manual.** The student manual includes everything in the instructor manual except this instructor overview and the instructor notes that appear at the front of every chapter in the instructor manual.
- **Lead Dust Sampling Technician Field Guide.** The Lead Dust Sampling Technician Field Guide provides protocols for conducting post-renovation dust-lead testing under EPA's RRP Rule and clearance examinations under HUD's LSHR in housing and child-occupied facilities built before 1978. This guide also provides federal standards for lead in dust. Refer students to the Lead Dust Sampling Technician Field Guide as appropriate.

In presenting the course, instructors are encouraged to use the student materials in the following ways:

- Recommend to the students that they follow along with the slides as they are presented and to take notes;
- Refer students to the attachments and appendices and encourage them to mark pages with specific information, summaries, checklists, tables, or tools they can use; and
- Refer students to the Lead Dust Sampling Technician Field Guide as appropriate.

Chapter 1: Introduction

Chapter 1: Introduction

Lead Dust Sampling Technician Initial Training Course

January 12, 2026

1

Notes:
Welcome to the Lead Dust Sampling Technician Training Course.

Course Objectives

- Understand what a dust-lead test is
- Identify steps in dust-lead testing
- Learn how to:
 - Conduct a visual inspection
 - Collect lead dust samples
 - Interpret results
 - Write a report
 - Explain the results to the client

2

Notes:
The EPA has provided this model curriculum to teach individuals how to conduct dust-lead testing after renovation activities.
Dust-lead testing is often performed to find out whether lead dust remains after renovation, repair, or painting. It is required by HUD’s LSHR regulations for most renovations. By the end of the course, students will be able to perform the actions listed above.

Introduce Yourself

- Name
- Occupation/organization
- How does your work involve lead-based paint?

3

Overview of Student Materials

- Student Manual
- Attachments
- Appendices
- Lead Dust Sampling Technician Field Guide

4

Notes:

Notes:

The student materials include a student manual, attachments, appendices, and a copy of the Lead Dust Sampling Technician Field Guide.

- The student manual contains copies of the slides that are used by the instructor during the course.
- The attachments and appendices provide important summaries, checklists, tables, and tools you can use.
- The Lead Dust Sampling Technician Field Guide outlines key points and procedures in one easy-to-read reference tool that can be taken along on the job.

Health Risks of Lead

- In children:
 - Damage to the brain and central nervous system
 - Decreased intelligence
 - Learning and behavioral problems, and hyperactivity
 - Damage can be long-term, affecting children throughout their lives
- In pregnant women:
 - Miscarriage
 - Harm to the developing fetus

5

Health Risks of Lead continued

- In adults:
 - Heart-related problems
 - High blood pressure
 - Infertility problems
 - Decreased kidney function

6

Notes:

Children under 6 are most at risk from exposure to small amounts of lead.

Children are at a greater risk than adults. During normal and frequent playing or hand-to-mouth activity, children may swallow or inhale lead dust from their hands, toys, food, or other objects.

In children, lead may cause:

- Damage to the brain and nervous system
- Decreased intelligence, and learning and behavioral problems
- Attention deficit disorder and hyperactivity
- Hearing and speech problems

Among adults, pregnant women are especially at risk from exposure to lead. Lead can build up in the body over time, settling in the bones. This stored lead can be transferred during pregnancy to a fetus and can cause an increased risk of :

- Miscarriage
- The baby being born too early or too small
- Harm to a developing fetus' brain, kidneys and nervous system

Notes:

For most adults, the major route of entry of lead into the body is through inhalation (breathing) of lead dust via occupational exposures.

In adults lead exposure can cause:

- Heart related problems and high blood pressure
- Decreased kidney function
- Weakness in fingers, wrists and ankles
- Infertility problems in both men and women
- Digestive problems
- Nerve disorders
- Learning, memory and concentration problems
- Muscle and/or joint pain

Why Are Dust and Debris a Problem?

- Renovations that disturb lead-based paint create dust and debris.
- Very small amounts of lead dust can poison children.
- Adults can swallow or breathe lead dust during work activities.
- Workers can bring lead dust home and poison their families.

7

Notes:

Dust and debris from renovation, repair, and painting jobs in pre-1978 housing and child-occupied facilities may contain lead.

- Pre-1978 paint may contain lead.
- Common renovation activities like sanding, scraping, cutting, and demolition can create hazardous lead dust and chips by disturbing lead-based paint.
- Some tasks, such as power sanding, open flame burning, and the use of heat guns above 1100 degrees Fahrenheit, create large amounts of extremely fine lead dust that is very difficult to clean up.

A tiny amount of lead can be extremely harmful.

- Lead dust particles are often so small that you cannot see them, yet you can breathe or swallow them. These smaller, inhaled or swallowed lead dust particles are more easily absorbed by the body than larger particles, and can therefore more easily cause poisoning.
- Lead dust may be breathed or swallowed by children, residents, and workers.
- Through normal hand-to-mouth activities, children may swallow or inhale lead dust on their hands, toys, food, or other objects. Children may also ingest paint chips.
- Adults can swallow or breathe lead dust during work activities.
 - When workers perform activities, such as scraping and sanding by hand, or use a power sander or grinding tool, dust is created. The dust goes into the air that they breathe.
 - If workers eat, drink, smoke, or put anything into their mouths without washing up first, they may swallow the lead dust present.

Regulations Addressing Lead Hazards in Housing

- To address the issue of lead hazards in housing, EPA and HUD have issued several regulations.
- EPA currently oversees the training and certification of abatement contractors, inspectors, and risk assessors.
- HUD's Lead Safe Housing Rule (LSHR) addresses lead hazards in federally owned and assisted housing.
- In April 2008, EPA issued the Renovation Repair and Painting (RRP) Rule to address lead hazards created during renovation.

8

Notes:

Overview of the Lead Hazard Evaluation Courses

- Lead Dust Sampling Technician
- Lead-Based Paint Inspector
- Risk Assessor
 - All three disciplines can conduct dust-lead testing after an RRP project

9

Lead Dust Sampling Technician

- EPA’s RRP Rule also established the lead dust sampling technician discipline.
- To work as a lead dust sampling technician, an individual must successfully complete this training course. The course completion certificate will serve as your certification.
- Lead dust sampling technicians are used in both EPA’s and HUD’s regulations.

10

Notes:

There are three courses for professionals who wish to be certified to conduct evaluations for lead dust, lead hazards and/or lead-based paint:

- **Lead Dust Sampling Technician:** This 8-hour training course teaches you how to become a lead dust sampling technician. You will learn how to conduct a visual inspection, collect dust wipe samples, interpret results, and write a post-work dust-lead testing report.
- **Lead-Based Paint Inspector:** To become a certified lead-based paint inspector, you must take a 24-hour training course. In the lead-based paint inspector course, you will learn the skills and protocols for conducting a paint inspection. A lead-based paint inspection is a surface-by-surface investigation to locate all lead-based paint on a property. We will talk more about what a paint inspection is in the next chapter.
- **Risk Assessor:** To become a certified risk assessor, you must successfully complete a lead-based paint inspector course plus an additional 16-hour risk assessor course. In the risk assessor course, you will learn the skills and protocols necessary for conducting risk assessments. A risk assessment is an on-site investigation to identify all lead-based paint hazards on a property.

Today you are taking the **Lead Dust Sampling Technician** Training Course.

Refer to **Attachment 1-A: Comparing Lead Evaluation Professionals** on p. 29 for additional information.

Notes:

A Lead Dust Sampling Technician *Can...*

- Perform post-renovation dust-lead testing under EPA’s RRP Rule
- Determine whether the work area has been sufficiently cleaned of lead dust after renovation, repair, or painting
- Perform a clearance examination after hazard reduction or maintenance activities in most properties covered by HUD’s LSHR

11

A Lead Dust Sampling Technician Is *Not Allowed To...*

- Perform post-abatement dust-lead testing
 - Lead abatement jobs are designed to permanently address lead-based paint hazards
 - Post-abatement clearance below the action levels after an abatement must be done by a certified risk assessor or lead-based paint inspector and may not be done by a lead dust sampling technician
- Sample paint for lead content
- Sample soil for lead

12

Notes:

A lead dust sampling technician can perform dust-lead testing, but not if associated with an abatement.

The purpose of dust-lead testing after renovation, repair, or painting activities that disturb lead-based paint is to determine if a work area is safe for re-occupancy. These activities can create lead dust, so proper cleanup is critical.

Notes:

While lead dust sampling technicians can conduct post-renovation dust-lead testing, they are not allowed to conduct post-abatement dust-lead testing. Post-abatement dust-lead testing must be done by a certified risk assessor or a lead-based paint inspector.

Abatement projects are designed to permanently address lead-based paint and lead-based paint hazards. Abatement does not include renovation, remodeling, landscaping, or other activities, when such activities are not designed to permanently address lead-based paint hazards, but, instead, are designed to repair, restore, or remodel a given structure or dwelling, even though these activities may incidentally result in permanently addressing lead-based paint hazards.

If a renovation job involves abatement, the lead dust sampling technician cannot perform dust-lead testing on the abatement part of the job. Make sure you understand what type of work was done before conducting dust-lead testing.

In addition, a lead dust sampling technician is not trained to test paint for lead content. Paint sampling must be done by a lead-based paint inspector, risk assessor or certified renovator.

Finally, a lead dust sampling technician is not trained to sample soil. Soil sampling must be done by a certified lead-based paint inspector or risk assessor.



HUD NOTE: HUD does not allow lead dust sampling technicians to work on abatement projects. HUD also requires that a certified risk assessor or a certified lead-based paint inspector approve the work of the lead dust sampling technician and sign the abatement report. Lead Dust sampling technicians may work on single-family properties or individually-specified dwelling units and associated common areas in a multi-unit property as directed by a certified risk assessor or a certified lead-based paint inspector, but may not themselves select dwelling units or common areas for testing.

EPA's RRP Rule

- Common renovation activities like sanding, cutting, and demolition can create hazardous lead dust and chips by disturbing lead-based paint.
- All contractors performing RRP projects in pre-1978 homes, child care facilities and schools must be certified and use lead-safe work practices to prevent lead contamination.
- All lead dust sampling technicians must be trained and certified.

13

Notes:

Contractors performing RRP projects that disturb lead-based paint in homes, child care facilities, and schools built before 1978 must be certified and must follow specific work practices to prevent lead contamination.

EPA's RRP Rule: Cleaning Verification

- Upon completion of renovation activity, the RRP Rule requires either:
 - Cleaning verification by a certified renovator, or
 - Dust-lead testing by a certified lead dust sampling technician, lead-based paint inspector, or risk assessor
- “Cleaning verification” need not be done if both dust-lead testing and achieving clearance below the actions levels is required by:
 - The contract between the renovator and the property owner, or
 - Another federal, state, or local law

14

Notes:

The cleaning verification process involves a visual inspection of the work area, followed by wiping of the window sills, floors, and countertops with wet disposable cleaning cloths and comparing the wipes to a cleaning verification card.

Cleaning verification must be performed by a certified renovator; it cannot be done by the lead dust sampling technician and lead dust sampling technicians are not allowed to perform clearance below the actions levels on abatement projects or on abatement parts of renovation projects.

See **Appendix A on page 179** for a portion of the EPA RRP final rule.



HUD NOTE: A certified lead dust sampling technician may work on HUD-assisted single-family properties or individually-specified dwelling units and associated common areas in a multi-unit property. The certified lead dust sampling technician may work on a random sampling of dwelling units or common areas in multifamily properties only as directed by a certified risk assessor or a certified lead-based paint inspector, but the lead dust sampling technician may not select dwelling units or common areas for testing, and the risk assessor or inspector must approve the lead dust sampling technician's work and sign the post-work dust sampling report for the report to be acceptable.

EPA's RRP Rule: LDST Certification

- You must be a certified LDST to perform post-renovation dust-lead testing under EPA's RRP Rule.
- Successful completion of this course completes the certification process.
- You will be certified by either EPA, or a state, Tribe, or territory in which you work if they are an authorized program.

15

Notes:

To conduct a post-renovation dust-lead test, the individual must be a certified lead dust sampling technician (LDST), lead-based paint inspector, or risk assessor.

EPA LDST certification allows the certified individual to perform post-renovation dust-lead testing in residential housing and child-occupied facilities. Certified lead dust sampling technicians cannot conduct post-abatement dust-lead testing.

When going to a worksite, lead dust sampling technicians must have a copy of their initial course completion certificate and most recent refresher training course completion certificate.

EPA's RRP Rule: Dust-Lead Testing

- Before conducting lead dust sampling after a renovation, a visual inspection of the work area for dust and debris is required.
- Results of dust-lead testing must be interpreted according to the EPA dust-lead actions levels/HUD clearance standards and provided to the client.
- All surfaces represented by a test that failed to clear below the dust-lead action levels must be re-cleaned and re-tested until the action levels are met.

16

Notes:

More details on all these topics are discussed later in the course.

HUD’s Lead Safe Housing Rule (LSHR)

- HUD requires clearance testing on all but very small renovation or maintenance jobs.
- Clearance must be performed by a clearance examiner who is independent of those performing work (third party).
- This clearance must be performed by either a certified lead-based paint inspector, risk assessor, or lead dust sampling technician.
- HUD requires a visual inspection (assessment), dust sampling, laboratory analysis, and submission of a clearance report

17

HUD’s LSHR

- HUD clearance generally covers an entire dwelling unit, common areas, and exteriors.
- Worksite-only clearance is permitted on certain renovation or maintenance jobs.
 - For ongoing lead-based paint maintenance
 - Rehabilitation assistance up to and including \$5,000 per unit
- Clearance report must include specifics of property, results of visual inspection, laboratory information, dates, written description of work performed, and dust testing results

18

Notes:

HUD’s LSHR requires that lead hazards be corrected in target housing receiving federal housing assistance or being sold. It also requires clearance dust sampling as a routine part of every such activity, unless very small amounts of paint are disturbed.

Notes:

Clearance must be on the entire unit unless the worksite has been properly contained or the LSHR specifically permits worksite-only clearance. The LSHR permits worksite-only clearance for units receiving rehabilitation assistance up to and including \$5,000 and for ongoing lead-based paint maintenance activities.

Sampling requirements will be discussed in later chapters.

HUD’s LSHR Continued

- Use EPA dust-lead action levels/HUD clearance standards to interpret dust sampling results.
- HUD requires that all surfaces represented by a failed clearance test be re-cleaned and re- tested until the clearance level is met.
- If the work area fails the visual inspection, the sampling technician must stop and require the renovator to re-clean.
- The sampling technician must then re-inspect before dust testing.

19

Notes:
Details on these topics are provided later in the course.

Lead Evaluation Professional	Is qualified to perform	Is <u>not</u> qualified to perform	Training hours required for certification	Skills
Lead dust sampling technician	• Post-renovation dust-lead testing • Dust-lead testing after hazard reduction or maintenance activities in HUD-covered properties	• Post-abatement clearance • Soil and paint testing	• 8 training hours	Perform: • Visual inspection • Lead dust wipe sampling Identify dust lead hazards after renovation.
Lead-based paint inspector	• Paint inspections • All clearance below the action levels	• Risk assessments	• 24 training hours	Perform: • Visual inspection • Paint chip sampling • Paint testing by XRF • Post-work lead dust wipe sampling Identify the existence and location of lead-based paint.
Lead-based paint risk assessor	• Risk assessments • Paint inspections • All clearance below the action levels	N/A	• 40 training hours (24 inspector hours and 16 risk assessor hours)	Perform: • Resident interviews • Visual inspection • Lead dust wipe sampling • Soil sampling • Paint chip sampling • XRF testing Assess a unit, identify all lead hazards, and recommend methods for lead hazard reduction.

Chapter 2: Visual Inspections
Lead Dust Sampling Technician Initial Training Course

January 12, 2026

1

Notes:

Chapter 2: Visual Inspection

Objectives

- Learn what a visual inspection is
- Learn the steps for performing a visual inspection under both EPA's and HUD's regulations
- Learn when to look for deteriorated paint, visible dust or debris, and paint chips
- Record results on a visual inspection form

2

Notes:

This chapter will outline the steps a lead dust sampling technician must take to perform a visual inspection. A visual inspection is the first activity to perform on site for any dust-lead testing. This chapter will also highlight the differences in visual inspection between EPA's RRP Rule and HUD's LSHR.

Visual Inspection

- Under both EPA's and HUD's rules, visual inspection is the first step in the post-work dust-lead testing process.
- Under EPA's rule, the visual inspection is designed to determine if the area is free of visible dust and debris before dust-lead testing can begin.



3

Notes:

Visual Inspection Continued

- The visual inspection determines whether the unit/work area (interior and exterior) is clear of visible conditions that can result in exposure to lead-based paint hazards:
 - Chips or debris
 - Visible dust
- In addition, HUD's rule requires identification of deteriorated paint.
 - Required before dust sampling can begin
 - Whole-unit clearance generally required

4

Notes:

The visual inspection determines whether the unit/work area is clear of conditions that can result in exposure to lead-based paint hazards, such as paint chips, debris, visible dust, and deteriorated paint. If these conditions are present, the unit does not meet EPA's and HUD's rules for dust-lead testing. HUD generally requires visual inspection and clearance of an entire unit, with worksite-only clearance allowable under certain conditions.

Visual Inspection – EPA RRP Dust-Lead Testing

- At the conclusion of the renovation, the certified renovator may have conducted a visual inspection to look for paint chips, dust, and debris.
- The LDST must conduct a separate visual inspection of the work area to ensure that the area is ready for dust-lead sampling.
- If any paint chips, dust, or debris are found, the renovation firm should re-clean these areas before the LDST begins to collect dust wipe samples.

5

Notes:

It is important for the lead dust sampling technician to understand that the renovation firm may perform his or her own preliminary visual inspection. The lead dust sampling technician should also perform a visual inspection of the work area. If the lead dust sampling technician observes paint chips, dust, or debris in the work area, these conditions must be brought to the attention of the certified renovator for re- cleaning.

Visual Inspection – HUD LSHR 1

- Addresses entire unit unless worksite-only clearance is allowed.
- Do not perform dust-lead testing if unit/work area does not pass visual inspection.
- If deteriorated paint, dust, or debris is found, it must be eliminated before dust testing may begin.
 - See Attachments 2-A and 2-B

6

Notes:

Why look for deteriorated paint?

In order to address lead dust in a housing unit, you need to address its sources, including deteriorated lead-based paint. If paint contains lead, deteriorated paint can create chips and dust, which can cause exposure to lead.

NOTE: The LSHR refers to this process as a “visual assessment,” but for purposes of this curriculum, the term “visual inspection” is used.

Visual Inspection – HUD LSHR 2

- Inspect exterior area if:
 - Exterior painted surfaces have been disturbed by renovation activity
 - Openings to exterior were not sealed during interior work
- Inspect ground and outdoor living areas close to affected surfaces
- Visible dust or debris must be removed
- Deteriorated paint must be eliminated
- Dust sampling is not performed for exterior work

7

Notes:

EXTERIOR VISUAL INSPECTION IS NOT REQUIRED IF ONLY INTERIOR WORK IS PERFORMED.

An independent third party is needed to do an exterior visual inspection if the exterior work was done under HUD’s LSHR. A certified lead dust sampling technician is qualified to perform this inspection.

For more information, see **Appendix B** or 24 CFR 35.1340.



HUD NOTE: HUD requires sampling technicians to verify with renovator that openings to the exterior are closed during interior work. If not closed, exterior visual inspection is required for interior work.

Dust-lead sampling is not required for exterior work. There are no dust-lead action levels for porches, balconies, railings, or other horizontal exterior features.

Exterior Debris



8

Notes:

Visual Inspection – HUD LSHR 3

- Identify any paint that is not intact:
 - Chipping
 - Peeling
 - Chalking
 - Cracking
 - Holes, moisture, and friction damage
- Hairline cracks and nail holes are not considered deteriorated paint.



9

Notes:

Deteriorated paint is any paint that is not intact. It does not have to be peeling paint.

As seen in the following photographs, deteriorated paint can include:

- Chipping paint on door and window trim
- Peeling paint and flaking paint on walls and window sashes
- Paint with small bubbles that look like blisters
- Paint with lines and cracks that make it easy to peel the paint away
- Paint that is “chalking” or creating chalk-like dust

Note: Hairline cracks and nail holes are not considered deteriorated paint.

Visual Inspection – HUD LSHR 4

- Dust
 - Dust you can see
- Debris
 - Pieces of wood, bits of plaster, and various other building pieces covered in paint
- Paint chips
 - Small pieces of paint



10

Notes:

What do visible dust, paint chips, and debris look like?

- Visible dust is dust you can see.
- Debris can be pieces of wood, bits of plaster, and various other building pieces covered with paint that are left in the room or near where the work was done.
- Paint chips are little pieces of paint. Chips can be even smaller than your fingernail or larger than your hand. Look for paint chips on floors and windows.

Visual Inspection – HUD LSHR 5

- Chipping paint



11

Notes:

Visual Inspection – HUD LSHR 6

- Holes in wall



12

Notes:

Visual Inspection – HUD LSHR 7

- Deteriorated paint



13

Notes:

Visual Inspection – HUD LSHR 8

- Cracking paint



14

Notes:

The arrow here points to a crack in the paint.

Visual Inspection – HUD LSHR 9

- Moisture damage



15

Notes:

Moisture can be the cause of many paint problems. In this case, it is causing the paint to bubble.

Visual Inspection – HUD LSHR 10

- Friction damage



16

Notes:

Visual Inspection – HUD LSHR 11

- Be precise about locations.
- Write down results as you go.
- Write down other information, indicating source.
- See sample visual inspection form.
 - Attachment 2-B

17

Notes:

When recording the results of a visual inspection, take the following steps:

- Be precise about locations (e.g., room descriptions and/or specific areas in room) where visible dust, debris, paint chips, and deteriorated paint were found.
- Write down results as you go along.
- Write down other information the client provides about the surface in question.

See **Completed Sample Visual Inspection Form in Attachment 2-B on page 53.**

Review

- Visual inspection is the first step in the post-work dust-lead testing process.
- EPA's visual inspection determines that the area is free of dust and debris before dust-lead testing can begin.
- HUD's visual inspection also checks for deteriorated paint and generally covers the entire unit unless worksite-only clearance is allowed.

18

Notes:

- See Slides 3 to 16 for information and answers.
- See Slide 3 for information and answers.
- See Slides 3 to 9 for information and answers.

Review Continued

- Visual inspection as part of post-work dust-lead testing is the responsibility of the certified lead dust sampling technician.
- Be methodical in your visual inspection, and record results in a consistent manner.

19

Notes:

Attachment 2-A: Sample Visual Inspection Form

SAMPLE VISUAL INSPECTION FORM

Information Needed	Report Information
Date and Time of Dust-Lead Testing	
Lead Dust Sampling Technician	
Client	
Property Address	

Location	Identify visible areas of dust, paint chips, painted debris, and deteriorated paint. (Note location: walls, ceiling, floors, doors, windows, trim, cabinets, approximate square footage, etc.)

Attachment 2-B: Completed Sample Visual Inspection Form

SAMPLE VISUAL INSPECTION FORM

Information Needed	Report Information
Date and Time of Dust-Lead Testing	8/5/25 11:00 am
Lead Dust Sampling Technician	Jane White
Client	The Smith Family
Property Address	78 East Main Street

Location	Identify visible areas of dust, paint chips, painted debris, and deteriorated paint. (Note location: walls, ceiling, floors, doors, windows, trim, cabinets, approximate square footage, etc.)
Entry Area	
Living Room	
Dining Room	
Kitchen	Window above sink; deteriorated paint on window sash. Client said deteriorated paint was tested and is not lead-based paint.
Common Area	
Bedroom #1: Small bedroom (Street Side)	East window; deteriorated paint on lower sash and dust and paint chips in trough. Client said deteriorated paint was tested and is not lead-based paint.
Bedroom #2: Small bedroom (Back of the house)	Dust and paint chips on floor.
Bath #1	
Exterior	

Chapter 3: Lead Dust Wipe Sampling

Chapter 3: Lead Dust Wipe Sampling

Lead Dust Sampling Technician Initial Training Course

January 12, 2026

Notes:

Objectives

- Learn when and where to take a dust wipe sample
- Learn how to take a dust wipe sample
- Sample three surfaces where dust is collected
- Learn the difference between single- surface and composite sampling

2

Why Collect Samples

- You cannot tell by looking at dust whether it contains lead.
- A small amount of lead dust can contaminate a room.

3

Notes:

Notes:

Why collect samples?

- Not all dust contains lead.
- You cannot tell by looking whether dust is contaminated with lead. A laboratory test is needed.

Activity: Lead Dust Contamination Demonstration

It only takes a little lead to contaminate a room. For example, imagine that each granule of artificial sweetener in a sweetener packet represents a tiny piece of lead. If only two or three of these “lead” granules were placed in a 1 square-foot area of floor, enough lead would be present to exceed the EPA dust-lead action level. An individual granule is very small and would be nearly impossible to find by simply looking at an area, especially if the granule was ground up into smaller particles and spread throughout the area.

A Lead Dust Wipe Measures:

- Total amount of lead dust on a specific surface area (lead loading)
 - EPA dust-lead action levels use this type of measurement
- Lead present at the time and location of sample collection
 - Does not tell you about past or future levels
 - Lead levels can change depending on the activity in the house or in different locations

4

Notes:

A dust wipe measures the total amount of lead dust on a specific surface area. This measurement is called lead “loading.” Lead loading is a good indicator of the amount of lead to which a child is exposed.

- Dust wipes measure lead dust at a particular point in time.
- Lead levels can change as the amount of lead dust on the surface changes.
- Lead levels also can change depending on the activity in the house, including activities that disturb lead-based paint and the frequency of cleaning.
- The measurement tells you how much lead existed when the sample was collected; it does not tell you about past or likely future lead levels.

Timing of Dust Sampling

- You must wait at least one hour after final cleanup is completed and visual inspection is passed before collecting samples.
- This allows time for dust to settle out of the air and onto surfaces.
- Be strategic about laying out sampling area to capture areas where the highest dust generating tasks occurred during the job.

5

Notes:

You must wait a minimum of 1 hour after the final cleanup is completed before collecting dust wipe samples. This allows time for the dust to settle out of the air and onto surfaces.

Sampling Strategy

- A single surface dust wipe measures total lead dust from a specific surface on component or area.
- When choosing sampling locations, identify areas where the most dust was generated during the job.
- Whenever possible sample hard floors, not carpets.
- Make sure to follow the sampling requirements in the next slides or the *Lead Dust Sampling Technician Field Guide* to select your final sample locations.



6

Lead Dust Wipe Sampling Locations: EPA RRP Rule

- If there is more than one room, hallway, or stairwell within the work area, take:
 - One window sill sample and one floor sample within each room, hallway, or stairwell (no more than four rooms, hallways, or stairwells need be sampled)
- If the windows were not closed and covered with plastic during the renovation, also take one window trough sample in each room, hallway, or stairwell (no more than four need be sampled)
 - One floor sample adjacent to the work area, but not in an area that has been cleaned
- For federally-assisted housing, take these samples if the work area is contained, otherwise, clear the whole unit, as discussed in the previous slide.

7

Notes:

Single-surface dust wipe samples contain one wipe from one surface.

- They measure lead dust from a specific surface, such as a floor or an interior window sill.
- They measure the total lead in the surface area.
- They do not tell you about dust lead levels in other places on the same surface. Dust lead levels can vary substantially.

When planning a sampling strategy, consider your sample numbering scheme and prepare for the number of samples you expect to take. Try to capture the sampling locations near dust-generating tasks that occurred during the job.

Notes:

Although cleaning verification is not performed on carpeted floors, dust-lead sampling is. LDSTs should not avoid sampling carpeted floors.

If the work area includes more than four rooms, hallways, or stairwells, only four must be sampled. A window sill sample and a floor sample must be collected from each of four rooms, hallways, or stairways within the work area.

The RRP Rule requires all objects and surfaces, including floors, within 2 feet of the work area to be cleaned after the work has been completed. Floor samples required to be collected outside of the work area must be collected outside of the cleaned area surrounding the work area.

Window troughs may contain pre-existing dust lead hazards. If possible, LDSTs should discuss the window trough sampling requirements with the certified renovator before the renovation begins. If the windows in the work area remain closed and covered with plastic during the renovation, window trough sampling will not be necessary.

The next few slides on sampling apply to HUD as well.

**Lead Dust Wipe Sampling Locations: EPA RRP Rule
Continued**

- If the work area is a single room, hallway, or stairwell, or a smaller area, take:
 - One window sill sample and one floor sample
 - If the windows were not closed and covered with plastic during the renovation, also take one window trough sample
 - One floor sample adjacent to the work area, but not in an area that has been cleaned

8

HUD Clearance

- HUD does not allow clearance to be performed on a work area alone that has not been adequately contained
- HUD clearance can be done in several ways
 - Whole unit clearance in most cases
 - Worksite-only clearance in some cases
 - Clearance for interior work when containment is used
- LDST should discuss sampling strategy with renovator prior to start of work
- See optional HUD Sampling Exercise for detailed descriptions of HUD sampling strategies

9

Notes:

Notes:

HUD has different requirements than EPA. Although EPA’s post-renovation dust-lead testing protocol is similar to HUD’s allowed protocol for worksite-only clearance, HUD has additional requirements to use this sampling strategy.

Although the sampling requirements are very important for federally-funded renovation activity, these units will represent a relatively small percentage of all renovation projects performed nationwide. Because most of the renovation jobs that are expected to occur in U.S. housing will not be funded with federal housing assistance, details on HUD sampling are provided in the optional sampling exercise for HUD-assisted work.

All LDSTs should discuss sampling plans with the renovator before work begins; with particular attention to whether the project is receiving federal housing assistance, so the proper sampling strategy can be used to comply with the Lead Safe Housing Rule.

How To Take Dust Wipe Samples

- Now that you know where and when to sample, the next section will cover the most important part of the course: How to take dust wipe samples.
- Regardless of the rule you are working under, the methods for taking and later analyzing dust wipe samples are identical.

10

Notes:

Dust Wipe Sampling Materials

- **Wipes:** Disposable individually packaged wipes
 - Check with your laboratory, they often provide these
- Disposable **gloves:** Should be non-sterilized and non- powdered
- Disposable **shoe covers:** Use of disposable shoe covers helps minimize the transfer of settled dust from one location to another
- **Containers:** Centrifuge tubes or other hard plastic, non-glass containers
 - They should be non-sterilized, plastic tubes equipped with a sealable lid
- Reusable **template:** A 12” x 12” reusable template for floors

11

Notes:

Key supplies are listed above. Check with your analytical lab, because they will often provide some of these materials.

- **Disposable lead dust wipes.** Use individually packaged wipes (laboratories often provide these). The wipes should meet ASTM Standard E1792. Do not use any wipes that contain aloe or lanolin.
- **Disposable gloves.** Gloves should be disposable. Non-sterilized and non-powdered gloves are recommended because powder on gloves may contaminate the sample (laboratories often provide them).
- **Disposable shoe covers.** Use of disposable shoe covers between buildings and the removal of shoe covers before entering your vehicle can be helpful in minimizing the inadvertent transfer of settled dust from one location to another.
- **Centrifuge tubes or other hard plastic, non-glass container.** They should be non-sterilized, plastic tubes equipped with a sealable lid.
- **Reusable templates.** A 12”x12” reusable plastic or disposable cardboard template is best.

Dust Wipe Sampling Materials Continued

- **Tape:** Painter’s or masking tape works well
- **Ruler:** To measure sampling areas if templates are not available
- **Sample collection forms and chain-of-custody forms**
- **Labeling and cleanup supplies**
 - Permanent markers, trash bags, labels, re-sealable storage bags, and **sanitary wipes** for face and hands if no access to warm, soapy water.
- **Pen:** To complete the sample collection form, label tubes, and write down notes
- **Calculator:** To assist in the calculation of sampling area dimensions 12

Notes:

Key supplies are listed above. Check with your analytical lab, because they will often provide some of these materials.

- **Tape.** Painter’s or masking tape works well. Tape is used to secure templates while taking dust samples and to outline sample areas when templates are not available.
- **Ruler.** To measure sampling areas if templates are not available.
- **Sample collection forms and chain-of-custody forms.** Laboratories will generally provide their own forms.
- **Labeling and cleanup supplies.** Permanent markers, trash bags, labels, re-sealable storage bags, and sanitary wipes for face and hands if no access to warm and soapy water.
- **Pen.** A pen should be used to complete the sample collection form, label tubes, and write down notes.
- **Calculator.** A calculator should be used to assist in the calculation of sampling area dimensions.

Blank Samples

- A new, unused wipe that is tested at the laboratory to determine whether the sampling medium is contaminated
- Laboratory should not know they are blanks
 - Blanks should be assigned sample numbers and locations
 - Only your copy of the sample collection form should identify which samples are blanks
- One blank sample should be submitted
- For each job tested
- From each wipe lot

Notes:

Blank samples are new, unused wipes that are sent to the laboratory to determine whether the sampling media are contaminated by providing a “clean” (assumed lead-free) wipe for comparison. Because you should prepare blank samples on every job, you should factor the costs associated with these samples into your fee. Submitting blank samples is important to test the accuracy of your sampling techniques, the sampling media, and the laboratory’s analysis.

Preparing blank samples. You should prepare blank samples in the same manner as other dust wipes.

- Prepare blank samples at the end of a job – after collecting all of your dust wipe samples.
- Remove a new wipe from the container with a new glove, shake the wipe open, and refold it as you would if you were taking a dust sample.
- Insert the unused wipe into a sampling container without touching any surfaces.

Labeling and submitting blank samples. Blank samples should be labeled so you can identify them, but the lab cannot. Do not label blank samples as “blank.”

- Give the sample a fictitious number that looks like your other sample numbers and provide a fictitious sample location and measurements to the lab.
- Keep notes in your records identifying the blank sample number.
- Submit one blank sample for each unit sampled. Additionally, one blank should be included from each wipe lot used to ensure that the lots are not contaminated. The wipe lot number is usually found on the bottom of the wipe container.
- It is improper to label blanks as such because of the unavoidable potential for biasing the laboratory analysts; it is poor practice to have all blanks at the same portion of each unit’s (and each wipe lot’s) samples.

Interpreting blank samples. If the laboratory detects more than 10 µg/wipe, one of three errors may have occurred:

- The dust wipes were contaminated before you began using them;
- You contaminated the wipes during your sampling; or
- The laboratory contaminated them during the analysis.

If the blank sample is contaminated, then the data should not be used and the unit in question should be re-sampled.

How To Collect Samples

- Step 1: Put on disposable shoe covers and lay out the sample area.
- Step 2: Prepare the tubes.
- Step 3: Put on clean gloves.
- Step 4: Sample the selected area and place wipe in tube.
- Step 5: Measure the sample area.
- Step 6: Record sample area (dimensions) on forms.
- Step 7: Clean up.

14

Step 1: Put on Disposable Shoe Covers and Lay Out the Sample Area

- Put on shoe covers.
- Outline sample area with tape or a template.
- Templates should be durable material.
 - Floor sample is generally 12” x 12”
 - Make sure you clean the template with a new wipe
- Tape can also be used to outline the sample area.
- Lay out tape squarely so you can accurately measure the sample area later.
- Do NOT touch area inside the sample area.

15

Notes:

This slide presents an overview of the dust sample collection process, which has seven key steps. Each of these steps is presented here and in more detail later in this training.

Step 1: Put on disposable shoe covers and lay out the sample area. Carefully outline the area you will sample using a template or tape.

Step 2: Prepare the tubes. Label the tubes and place partially opened tubes near the spot you will sample.

Step 3: Put on clean gloves. Put on clean gloves before collecting each sample. This helps minimize contamination.

Step 4: Wipe sample area. Wipe the entire area you laid out with disposable wipe for the sample. Fold the wipe and place it in the appropriate tube.

Step 5: Measure the sample area. Measure the area sampled.

Step 6: Record sample area on forms. Record measurement on sample collection form and chain-of- custody form.

Step 7: Clean up. Sampling materials must be cleaned or removed from the site because they may be contaminated.

Notes:

Step 1: Put on Disposable Shoe Covers and Lay Out the Sample Area

The following describes how to lay out the sample area using a template. Whenever possible, use a template to avoid measurement errors. (*Make sure you clean the template before following sampling protocol.)

The templates will vary in their dimensions:

- The floor template should have a 144-square inch or 1-square foot opening (12 inches = 1 foot) or an alternative area that has accurately known dimensions. A square foot is the basic measurement used by EPA-recommended guidance for dust-lead testing.
- The interior window sill or window trough template should have an opening of at least 16 square inches (approximately 2” x 8”). Interior sills can vary in width.
- Tape the template to the appropriate surface (floor, interior sill, or interior trough) using masking or painter’s tape. Be careful to avoid placing your hands in the sample area, as this might remove or add lead dust and give you a misleading result.
- If using tape, ensure that the tape is laid out squarely so that an accurate area can be determined for the sample size. It is very difficult to measure the area if the tape is not laid out in a square or rectangle.

Do not touch or otherwise disturb the area inside the measured sample area. This could remove or add lead dust and give you a misleading result. (You will measure the exact area of the sample area after collecting the dust sample.)

Taping Template to Floor



16

Notes:

Here is an example of how the sampling area is laid out when you have a template. Note how it is taped to the floor.

***Be sure to clean reusable templates.** Tape corners at a 45-degree angle away from the corner.

***Be sure not to touch the inside of the sample area.**

Outlining Sample Area with Tape



17

Notes:

Here is an example of using tape to outline the sample area on a floor when a template is not available. Make sure that the tape is laid at right angle to ensure the area outlined as close to a perfect square as possible. Doing so will make measuring the area of the sample much easier and more accurate.

Taping Window Sill



18

Notes:

If a template for a sill or trough is not available, lay out the sampling area with painter's tape. Place tape perpendicular to the edge of the sill or trough. The sample area will be calculated after taking the sample to avoid contaminating the area.

If the sill or trough is not taped, the width of the sample area varies from front-to-back when the ends of the sill or trough are not parallel straight lines, so the area of the sample will be difficult to determine.

Make sure the area you are sampling is at least 16 square inches. Try to sample at least 8" of sill width.

Step 2: Prepare the Tubes

- Use clean, hard-sided tubes.
- Make sure tube is labeled with an ID number.
- Record ID number on sample collection form and chain-of-custody form.
- Partially unscrew tube cap.
- Place tube near sample area.

19

Notes:

Step 2: Prepare the Tubes

Tubes must be prepared so that they are properly labeled and are accessible to you when you are ready to put your samples in them.

- Label each tube with an identification number.
- Record the identification number on the sample collection form and chain-of-custody form.
- Partially unscrew the cap on the tube to be sure you can open it easily.
- Place the tube near the area you plan to sample. This avoids possible contamination of the wipe and loss of sampled dust between the time you collect the sample and place it in the tube.
- Organizing tubes in a portable test tube rack may be helpful.

Step 3: Put on Clean Gloves

- Use disposable gloves.
- Use new gloves for each sample.
- After putting on the gloves, do NOT touch anything else before you pick up the wipe.

20

Notes:

Step 3: Put on Clean Gloves

Wearing clean gloves avoids transferring lead dust from your hands to the wipe.

- Use disposable gloves.
- Use new gloves for each sample collected.
- Do not put on the gloves until you are ready to take the sample. You can contaminate the gloves if you touch other surfaces, such as when measuring the sample area.
- After putting on the gloves, do NOT touch anything else before you pick up the wipe.

Step 4: Wipe Sample Areas

- The procedures for taking dust wipe samples from floors, window sills, and troughs are listed on the following slides.
- The procedure for sampling floors is different than the procedure for sampling window sills and troughs.
- Step 4 of lead dust wipe sampling is also described in the *Lead Dust Sampling Technician Field Guide*.

21

Notes:

Step 4: Wipe Sample Area – Floors (1)

- Do not touch other objects. They can contaminate the wipe.
- Press the wipe down firmly (with fingers, not the palm of the hand) at an upper corner of the sample area.
- Make as many “S” like motions as needed to wipe the entire sample area, moving from side to side. Do not cross the outer border of the tape or template.
- Fold the wipe in half, keeping the dirty side in, and repeat the wiping procedure (“S” like motion). Folding wipe carefully helps to prevent the loss of any collected dust.

22

Notes:

Step 4: Sampling Procedure for Floors

- Do not touch other objects. They can contaminate the wipe.
- Press the wipe down firmly (with fingers, not the palm of the hand) at an upper corner of the sample area.
- Make as many “S”-like motions as needed to wipe the entire sample area, moving from side to side. Do not cross the outer border of the tape or template.
- Fold the wipe in half, keeping the dirty side in, and repeat the wiping procedure (“S” motion). This helps to prevent the loss of any collected dust.

Students should refer to Attachment 3-A: Sample Collection Form and Attachment 3-B: Completed Sample Collection Form. A checklist of the key steps involved in taking a dust sample can be found in Attachment 3-D: Lead Dust Wipe Checklist and the Lead Dust Sampling Technician Field Guide.

Step 4: Wipe Sample Area – Floors (2)

- Fold the wipe in half again, keeping all the dust in the wipe, and repeat the wiping procedure one more time, concentrating on collecting dust from the corners within the selected surface area.
- Wipes are folded to keep the collected dust within the wipe, avoid dust losses, and to expose a clean wipe surface for further collection.

23

Notes:

Step 4: Sampling Procedure for Floors continued

- Fold the wipe in half again, keeping all the dust in the wipe, and repeat the wiping procedure one more time, concentrating on collecting dust from the corners within the selected surface area.
- Wipes are folded to keep the collected dust within the wipe, avoid dust losses, and to expose a clean wipe surface for further collection.

Step 4: Wipe Sample Area – Floors (3)

- Fold the wipe again with the sample side folded in, and place the folded wipe into the sample tube. Avoid contact with other surfaces.
- Cap the container. Discard the gloves into a trash bag.

24

Floor Sampling (1)



25

Notes:

Step 4: Sampling Procedure for Floors last steps

- Fold the wipe again with the sample side folded in, and place the folded wipe into the sample tube. Avoid contact with other surfaces. Wipes should be stored only in their original container or in the tube. Do not use plastic bags or other items to hold wipes. Blank wipes should also be used. Blanks should be assigned sample numbers and locations so that the laboratory does not know they are blanks. Only your copy of the sample collection form should identify which samples are blanks.
- Cap the container. Discard the gloves into a trash bag.

Students should refer to Attachment 3-A: Sample Collection Form and Attachment 3-B: Completed Sample Collection Form. A checklist of the key steps involved in taking a dust sample can be found in Attachment 3-D: Lead Dust Wipe Checklist and the *Lead Dust Sampling Technician Field Guide*.

Notes:

Floor Sampling (2)



26

Notes:

Floor Sampling (3)



27

Notes:

Step 4: Wipe Sample Area – Window Sills and Troughs

- Sampling interior window sills and troughs
 - Hold fingers together and flat against surface.
 - Wipe surface in a single pass while applying constant pressure.
 - Fold wipe in half with wiped side in and wipe in both directions.
 - Fold wipe in half again with wiped side in and concentrate on corners and edges.
 - Place the folded wipe in the tube.

28

Notes:

Special Considerations for Interior Window Sills and Troughs

Window troughs may contain pre-existing dust lead hazards. If possible, LDSTs should discuss the window trough sampling requirements with the certified renovator before the renovation begins. If the windows in the work area remain closed and covered with plastic during the renovation, window trough sampling will not be necessary.

Sampling Procedure for Window Sills and Troughs:

- Holding the fingers together and flat against the selected surface area, wipe the measured surface in one direction in a single pass. Apply pressure to the fingers while wiping the surface. This will avoid overloading the wipe on the first pass.
- Fold the wipe in half with the sample side folded in, and repeat the preceding wiping procedure in both directions within the selected surface area on one side of the folded wipe.
- Fold the wipe in half with the sample side folded in, and repeat the preceding wiping procedure one more time, concentrating on collecting settled dust from the corners within the selected surface area.

Step 4: Wipe Sample Area – Window Sills and Troughs Continued

- Sampling interior window sills and troughs
 - Cap the tube.
 - Label the tube properly.
 - Measure and record the dimensions of the selected sampling area. Discard the gloves into a trash bag then close the bag.

29

Notes:

Special Considerations for Interior Windows Sills and Troughs

Sampling Procedure for Window Sills and Troughs:

- Fold the wipe again with the sample side folded in, and insert the folded wipe into the tube and cap it.
- Label the tube with sufficient information to uniquely identify the sample.
- Measure and record the dimensions of the selected sampling area (the area actually wiped during sample collection). Discard the gloves into a trash bag.

Sampling a Window Sill



30

Notes:
Note how the lead dust sampling technician is holding the wipe and moving across the window sill.

Sampling a Window Trough



31

Notes:
Here is an example of how to sample a window trough. **The trough is not taped because its area is less than 16 inches**, so sample the entire trough and determine its area. Measure carefully and down to 1/8 of an inch. Make sure the window trough has been adequately cleaned before sampling.

Step 5: Measure the Sample Area

- Measure width and length (unless template was used).
 - Area must be at least 16 square inches (2 inches by 8 inches)
 - Measure to 1/8 inch
- Measure exact area after sample is taken.
 - Length of sill or trough between inside edges of tape
 - Tape across width of sill or trough (front to back)
- Do not remove tape until after measurements are taken.

32

Notes:

Step 5: Measure the Sample Area

If a template was used, record the dimensions of the template on the lab collection form. If a template was not used, you must measure the sample area.

- Measure the exact length and width of the sample area with a tape measure after the dust sample has been taken. This allows you to get an accurate measurement without contaminating the sample area.
- Make sure you measure the area inside the tape, not the outside border.
- Always measure to an eighth of an inch (1/8"). Sloppy measurement can produce inaccurate results.

Measuring a Window Sill



33

Notes:

When the wiping is done, measure the area wiped, unless you used a template and know the dimensions already. Measure the length and width of the area wiped.

Note: The ruler does not have additional space between where the measurements begin and the edge of the ruler.

Step 6: Record Sample Area on Forms

- Record measurement on sample collection form and lab chain-of-custody form.
- Calculate area outlined by the tape and record on the sample collection form and lab chain-of-custody form.
- In some cases, conversion from inches to feet will be necessary. To make these calculations easier, measurements should always be converted from fractions to decimals (e.g., 0.5 rather than 1/2).
- Check with analytical laboratory for additional recording requirements.

34

Step 7: Clean Up

- Clean template with a clean sampling wipe; place template in a plastic bag for storage.
- Remove materials from site:
 - Gloves, tape from floors and windows, used shoe covers
 - Put items in plastic bag, **NOT** in client’s containers
- Clean clothing and remove shoe covers before leaving the work area.
- Clean face and hands with warm, soapy water
 - Use sanitary wipes if no access to warm, soapy water

35

Notes:

- See **Attachment 3-A: Sample Collection Form** and **Attachment 3-B: Completed Sample Collection Form**.
- Instructors should pull out **Attachment 3-C: Worksheet for Performing Mathematical Calculations from Fractions to Decimals** and review with the class. A few simple calculations for the class may be very useful.

Notes:

Step 7: Clean Up

Sampling materials may be contaminated and therefore must be cleaned or removed from the site.

- Clean the template with a clean wipe and place it in a re-sealable plastic bag for storage. This decontaminates the template between uses and helps avoid contamination when it is not being used. Throw wipe away in trash bag.
- Be sure you have recorded the location and dimensions of the sample area before removing tape.
- Remove gloves, tape, and shoe covers. Throw them away in trash bag.
- Clean face and hands with warm, soapy water. (Use sanitary wipes if no access to warm, soapy water.)

Refer to the *Lead Dust Sampling Technician Field Guide* (Appendix C) and **Attachment 3-D: Lead Dust Wipe Checklist**, which summarizes all the steps just described.

Hands-on Activity: Let's Try It

- You are now going to practice taking dust wipe samples.
- Each individual must demonstrate proficiency.
- Follow your instructor's directions for taking samples.
- You can refer to your Field Guide or Attachment 3-D for a list of key steps.

36

Notes:

Activity: Take samples on a variety of surfaces – window sills, troughs, and floors.

Avoiding Common Mistakes

- These common mistakes can give incorrect results:
 - Incorrect measurement
 - Contaminated wipe
 - Contaminated gloves
 - Sample area is disturbed
 - Sloppy recording

37

Notes:

If the lead dust sampling technician makes any of the following common mistakes, the technician could get incorrect results:

Incorrect measurement. Small mistakes in reading the tape measure can produce misleading results. Being off by half an inch can make the difference between passing or failing the EPA action levels/HUD clearance standards for lead in dust.

Wipe is contaminated. It is important that the wipe is clean before you collect the sample and that you do not lose any dust before putting the wipe in the tube. Common sources of contamination include the following:

- Wipe touches the floor or window before you place it in the tube.
- Wipe falls to the floor before wiping and you do not get a new one.
- Wiping motions go beyond the template outline or taped area, collecting added dust or debris.
- Wipe is placed on the floor or interior sill while unscrewing the tube cap, collecting dust.

Gloves are contaminated. The gloves can contaminate the sample if they are not clean.

- Gloves are put on too early and you touch dust on other surfaces.
- Gloves are not changed for each sample. Previously used gloves can carry lead dust from the previous sample.

Sample area is disturbed. Contamination may remove or add lead dust to sample area before you wipe the area. The lead dust sampling technician should select a new area to sample.

- Place hand or tape measure inside sample area before you wipe it.
- Place hand inside sample area while taping down template to the floor.
- Slide template across sample area as you tape it down.
- Use template that has not been cleaned.

Sample area is recorded incorrectly. To avoid errors:

- Record measurements for interior sills and troughs immediately after measuring the area.
- Review forms before you submit them to double-check measurements.

How Did It Go?

- Would you like to review and practice any of these steps again?
- Are you ready to do this on your own?

38

Notes:

When you are done sampling, discuss these questions with the large group.

Composite Dust Wipe Sampling

- In composite sampling, samples are collected from common components in different rooms and analyzed as one.
- You may receive a request to take a composite sample during dust-lead testing.
- Analytical laboratories often have difficulty processing composite samples.
- Contact your laboratory before taking any composite samples.

39

Notes:

EPA allows composite samples during dust-lead testing. You may receive a request to take a composite sample during dust-lead testing. HUD discourages composite sampling for clearance. Analytical laboratories often have difficulty processing composite samples. Contact your laboratory before taking any composite samples.

- A composite is a sample that holds up to four dust wipes in one container. Each wipe is called a subsample.
- A composite tells you the average amount of lead dust across all the areas you sampled. This provides a measure of average exposure. Subsamples need to be collected from areas of equal size for the results to be an average.
- In contrast to single wipe samples, composite samples do not define the location of lead dust, if it exists. Rather, they simply identify that lead dust exists somewhere in the sampled area.

Rules for a Composite Sample

- Measures average amount of lead dust on several surfaces (up to four) of the same type.
 - Sample container holds up to four dust wipes.
 - Do not use more than four wipes.
 - Do not mix samples from different types of surfaces.
- Sample equal areas with each wipe, and use templates where possible.
- Interior sills or troughs: use smallest sill or trough to set area.

40

Notes:

Make sure the areas sampled for each of the subsamples are the same size. If you include wipes that collected dust from areas with varying sizes, you will not get an accurate reading of the average levels. This should not be a problem if templates are used.

- Floors. Use a 12" x 12" sample area. Use a template or tape outline.
- Interior window sills and troughs. Identify the smallest interior window sill and/or trough you plan to sample. Measure the length and width after you lay down the template or tape and take the dust sample. Use these measurements to outline the same sample area for all of the other interior sills and/or troughs. This will guarantee that all the interior sills or troughs sampled are the same size.

Do not combine subsamples across units. A composite sample can only include dust wipes from a single unit. Do not use more than four wipes in a composite sample. It is difficult for labs to analyze composites holding more than four wipes. Check that your lab has experience analyzing composite wipes.

Composite Sampling Procedures

- Outline all areas to wipe for composite before collecting sample.
- Use a new wipe for each subsample.
- Follow single wipe sampling procedures.
- Use a separate chain of custody form for each composite sample.
- It is not necessary to change gloves between subsamples.

41

Notes:

- Whenever possible, use a template when collecting composite samples. If a template is not available, outline the areas you plan to wipe before collecting the subsamples. Remember that the sample size must be the same for all subsamples included in a composite sample.
- Use a separate wipe for each subsample area wiped.
- Follow the single-wipe sampling procedures.
- You can use one set of gloves for all subsamples in the composite. However, if your glove touches an area outside the sample area, put on a new one.
- After wiping each subsample area, carefully place the wipe into the tube.

Proper Hygiene After Completing a Sampling Job

- Hand washing
- Face washing
- Check your clothing and shoes (especially soles) before leaving work site

42

Review

- Planning sampling locations and supplies
- Where and when to take dust wipe samples
- Steps in taking a dust wipe sample
- Single-surface and composite sampling
- Clean up after sampling

43

Notes:

Notes:

Attachment 3-A: Sample Collection Form

Field Dust Wipe Sampling Form

Information Needed	Report Information
Name of Sampling Technician	
Name of Property Owner	
Property Address	
Apt. #	

Sample Number	Room and Location (name of room used by owner)	Surface Type* (circle one)	Dimensions of Sample Area (inch x inch)	Area (ft²)
		FL, WS, WT		
		FL, WS, WT		
		FL, WS, WT		
		FL, WS, WT		
		FL, WS, WT		
		FL, WS, WT		
		FL, WS, WT		
		FL, WS, WT		

* Surface Types: FL=Floor; WS=Window sill; WT=Window Trough

Total numer of samples on this page: _____

Attachment 3-B: Completed Sample Collection Form

Field Dust Wipe Sampling Form

Information Needed	Report Information
Name of Sampling Technician	Jane White
Name of Property Owner	Smith family
Property Address	78 East Main St., Hammon, IN 89898
Apt. #	25

Sample Number	Room and Location (name of room used by owner)	Surface Type* (circle one)	Dimensions of Sample Area (inch x inch)	Area (ft²)
98-1	Upstairs large bedroom – near doorway	<u>FL</u> , WS, WT	115/8" x 121/8"	.979
98-2	Upstairs large bedroom – selected window in room on west side of room	FL, <u>WS</u> , WT	2315/16" x 27/8"	.478
98-3	Upstairs small bedroom – in center of room	<u>FL</u> , WS, WT	1113/16" x 121/2"	1.025
98-4	Upstairs small bedroom – only window in room	FL, <u>WS</u> , WT	241/8" x 31/4"	.544
98-5	Kitchen – near stove	<u>FL</u> , WS, WT	113/4" x 113/8"	.928
98-6	Kitchen – above sink	FL, <u>WS</u> , WT	239/16" x 3"	.491
		FL, WS, WT		
		FL, WS, WT		

* Surface Types: FL=Floor; WS=Window sill; WT=Window Trough

Total number of samples on this page: 6

Attachment 3-C: Worksheet for Performing Mathematical Calculations from Fractions to Decimals

When recording the sample area on the dust wipe collection form, you may need to perform one or both of the following conversions: converting fractions to decimals and converting inches to square feet. To facilitate the mathematical calculations, fractions should always be converted to decimals first. Refer to the following Table of Common Conversions for assistance.

1. Converting fractions to decimals: Tables of common conversions

Fraction	Decimal	Fraction	Decimal
1/8	0.125	1/4	0.250
2/8	0.250	2/4	0.500
3/8	0.375	3/4	0.750
4/8	0.500	1/3	0.333
5/8	0.625	2/3	0.667
		1/2	0.500

2. Converting inches to square feet (ft²)

If the area you sampled was not a square foot, you will need to convert it to this dimension. One foot equals 12 inches, and 1 square foot equals 144 square inches.

- Record the sample area in inches (in) as opposed to feet (ft).
- Convert the sample area to square inches (in²). Round the number to a maximum of three decimal places.
- Divide the square inches by 144 to get square feet (ft²). Round the number to a maximum of three decimal places.

Step	Steps to convert inches to square feet	Calculation
1	Dimensions of sample area in inches (in)	Length: ____ in Width: ____ in
2	Multiply length times width to calculate the area in square inches (in²)	____ in × ____ in = ____ in²
3	Divide the area in square inches (in²) by 144 to calculate the area in square feet (ft²)	____ in² ÷ 144 = ____ ft²

3. Example

Convert an area with length of 20 ½ inches and a width of 5 ¼ inches to square feet.

1. Convert fractions to decimals: 20 ½ in is 20.500 in and 5 ¼ in is 5.250 in
2. Calculate the area in square inches: 20.500 in × 5.250 in = 107.625 in²
3. Calculate the area in square feet: 107.625 in² ÷ 144 = 0.747 ft²

Attachment 3-D: EPA Lead Dust Wipe Checklist

These are the steps involved in taking a lead dust wipe sample. When you are collecting dust samples, you should follow each of these steps. **Note:** The procedure for sampling floors is different than the procedure for sampling window sills and troughs.

Step	Criteria	Check when done
1	Put on disposable shoe covers and lay out the sample area • Clean the template and properly dispose of wipe • Tape down template; or lay out sample area using tape	
2	Prepare the tubes • Label tube with identification number • Record identification number on sample collection and chain-of-custody forms • Partially unscrew cap of tube and place tube near the area planned for sampling	
3	Put on clean gloves	
4	Wipe sample area and place wipe in centrifuge tube	
4a	First swipe (floors): • Press wipe down firmly • Make overlapping “S”-like motions on the sample surface while moving side-to-side • Do not cross outer boundary tape or template	
4b	Second swipe (floors): • Fold wipe in half, keeping dust inside, and press wipe down firmly • Make top-to-bottom overlapping “S”-like motions • Do not cross outer boundary tape or template	
4c	Third swipe (floors): • Fold wipe in half, keeping dust inside, and press wipe down firmly • Repeat the wiping procedure one more time (focusing in on corners) • Do not cross outer boundary tape or template • Fold wipe again, keeping all dust inside wipe • Place wipe in sample container tube	
4d	Window sills and troughs (side-to-side) • Hold fingers together, wipe surface in one direction, and press wipe down firmly • Fold wipe in half and repeat wiping procedure, using a reverse direction • Fold wipe in half again and repeat wiping procedure concentrating on corners • Fold wipe in half again and insert into a rigid-walled container • Label the rigid-walled container to identify sample	
5	Measure the sample area • Measure the area inside the tape, not the outside border • Measure to ⅛ inch	

Step	Criteria	Check when done
6	Record sample area • Calculate sample area • Record measurements on the sample collection form • Fill in chain-of-custody form	
7	Clean up • Clean template with new wipe, place template in a plastic bag for storage, and then discard wipe • Put gloves, used shoe covers, and tape from floors and windows into trash bags • Check your clothing and shoes (especially soles) before leaving work site • Wash your face and hands with warm, soapy water or sanitary wipe	

Chapter 4: Selecting a Laboratory

Chapter 4: Selecting a Laboratory and Interpreting Results
Lead Dust Sampling Technician Initial Training Course

January 12, 2026

1

Notes:

Objectives

- Select an EPA-recognized lab
- Maintain a chain of custody
- Review and interpret lab results

2

Notes:

After performing lead dust wipe sampling, you will need to submit the samples to a laboratory for analysis and interpret the laboratory results to determine the levels of lead dust in a unit. This chapter describes the steps you will need to take.

At the end of this chapter, you will be able to do the following:

- Select an EPA-recognized laboratory and explain why proper selection is important
- List the important steps to ensure samples are not tampered with or lost, maintaining a chain of custody
- Review and interpret the laboratory results

Selecting a Laboratory

- Submit samples to a lab recognized by EPA’s National Lead Laboratory Accreditation Program (NLLAP)
- To locate a lab
 - Call the National Lead Information Center (NLIC) at 1-800-424-5323
 - Visit www.epa.gov/lead/nllap
- Review the “Selecting a Lead Laboratory” fact sheet

3

Notes:

All samples must be submitted to a laboratory recognized by the EPA’s National Lead Laboratory Accreditation Program (NLLAP) to be proficient in lead in dust analysis.

- The NLLAP provides the public with a list of recognized laboratories for analyzing lead in dust samples. You can contact the National Lead Information Center (NLIC) Clearinghouse at 1-800-424-LEAD, or visit www.epa.gov/lead/nllap for an up-to-date list of NLLAP-recognized laboratories. The *Selecting a Lead Laboratory* fact sheet (EPA-740-F-26-003) with basic information is available online and in this manual.
- For a laboratory to become EPA-NLLAP recognized, it must participate in the Environmental Lead Proficiency Analytical Testing (ELPAT) Program and undergo a quality system audit, including an onsite assessment by a laboratory outside accreditation body participating in the NLLAP, such as the American Industrial Hygiene Association.

It is important to recognize that not every recognized laboratory will meet your needs. Taking the time to select a good laboratory will save you time and effort in the long run. Knowing the costs associated with laboratory supplies and the analysis will also help you calculate the fees you will charge customers. Even if your company has selected a laboratory for you to work with, it is a good idea to ask a few simple, straightforward questions so you can find out whether the laboratory meets some basic quality criteria.

See **Attachment 4-A: Questions to Ask a Laboratory**

Questions To Ask Laboratories

- Tell the lab you will be collecting dust wipe samples for lead.
- Ask:
 - Is the laboratory recognized to analyze for lead in dust by NLLAP?
 - Will sampling materials be provided?
 - What is the turnaround time for analysis?
 - Can the laboratory analyze composite samples? (If the client wants composite samples)
 - What is the cost per sample?

4

Notes:

Review **Attachment 4-A: Questions to Ask a Laboratory**

Quality Control in the Field

- Submit blank wipe samples.
- Duplicate, or side by side sampling can be used to check lab consistency.
- Review all of your sample collection and chain-of-custody forms.
- Carefully review all lab results.

5

Review Your Sample Collection Form

- Confirm all information is recorded clearly and correctly.
 - Sample numbers
 - Sample locations
 - Sample dimensions
- Keep a copy for your records and note blanks.

6

Notes:

Dust-lead testing and analysis require a great deal of care and precision by both you and the laboratory. Follow the steps above to help control the quality of the lab results. Each step is discussed in further detail on the following slides.

Notes:

In Chapter 3, we described how to record sample information on the sample collection form clearly and accurately. Before you send the samples to the laboratory, you should check your sample collection form to confirm that all of the following information is recorded clearly and correctly.

- **Sample numbers** - Samples should be numbered sequentially, in the order you took them. (This information must be included accurately on the laboratory chain-of-custody form.)
- **Sample locations** - These should be precise. For example, “left window on back wall in master bedroom” is better than “bedroom window.”
- **Sample dimensions for dust wipe samples** - As discussed in Chapter 3, these dimensions are extremely important and should be recorded to the nearest 1/8 of an inch.

After completing the form, it is essential that you keep a copy for your records and to note the ID numbers of your blank samples.

- A record of each person who handles the sample from the time it is collected until it is sent to the lab.
- The lead dust sampling technician is responsible for maintaining chain of custody until he or she transfers custody of the samples.
- Include information on sampling form
- A sample Chain of Custody form is shown on the next slide, and as an attachment to this chapter.

Notes:

It is important that samples are not lost before or during the analysis process. To trace the path of the sample, you should establish a “chain of custody.” This simply means that every person who handles the sample must sign and date a form.

Who is in the chain of custody? People in the chain of custody may include:

- Lead dust sampling technician
- Technician's supervisor
- Person packing the samples for shipment
- Person picking up and shipping the samples
- Person receiving the shipment at the laboratory

Maintaining the chain of custody - Ensure that the chain of custody is maintained from when you take the samples until you transfer custody of the samples.

- Space for documenting the chain of custody may be included as part of the sample collection form or you may use a separate form. There should be enough space for each individual handling the sample to sign and date the form – 5 to 7 lines should be sufficient.
- You should also keep a copy of any shipping or mailing forms documenting when the samples were sent to the laboratory.
- You should send the package with delivery confirmation and return receipt requested, or the equivalent shipping record.

Chain of Custody Form

Notes:

The chain of custody form can be found at the end of the chapter as Attachment 4-B.

Evaluating Laboratory Results for Single Samples

- Check for appropriate units ($\mu\text{g}/\text{ft}^2$)
- Compare results to the EPAaction levels/HUD clearance standards:
 - Floors < 5 $\mu\text{g}/\text{ft}^2$ **passes**
 - Window Sills < 40 $\mu\text{g}/\text{ft}^2$ **passes**
 - Window Troughs < 100 $\mu\text{g}/\text{ft}^2$ **passes**

9

Activity: Interpreting Laboratory Results

- Turn to **Attachment 4-D**.
- Answer the questions.
- Be prepared to explain your answers.

10

Notes:

When you receive the results from the laboratory, you must interpret them to determine whether they pass or fail to clear below the dust-lead action levels. This section describes dust lead hazards and the process used to evaluate the sample results. Specifically, you will need to evaluate the laboratory results, converting them if necessary, and comparing them to the federal or state standards.

To evaluate the laboratory results, you may need to take the steps listed below. These steps should be implemented as follows:

Step 1: Check the units. If results are not reported in $\mu\text{g}/\text{ft}^2$, use the conversion table (see **Attachment 4-C: Worksheet for Performing Mathematical Conversions for Dust Samples**).

Step 2: Compare the results to the EPA dust-lead actions levels. Once you have made the necessary conversion, you can compare the laboratory results to the appropriate EPA dust-lead action levels. EPA action levels have been developed for lead dust on floors, interior window sills, and window troughs. It is important to recognize that the levels for lead dust are different for each of these three surfaces. If test results equal or exceed the action levels, the unit, worksite, or common area represented by the sample fails clear the dust-lead test.

Notes:

Attachment 4-D can be found on page 127

Evaluating Laboratory Results for Composite Samples

Location	2 Subsamples	3 Subsamples	4 Subsamples
Floors	5 µg/ft²	7 µg/ft²	2.5 µg/ft²
Window Sills	40 µg/ft²	27 µg/ft²	20 µg/ft²
Window Troughs	100 µg/ft²	67 µg/ft²	50 µg/ft²

11

Notes:

Composite samples determine the average of the dust lead levels on the surfaces that make up the composite.

To minimize the chance that any individual surface included in the composite does not fail to clear below the action levels, composite samples that contain more than two subsamples are compared to more stringent standards than are single-surface samples.

Avoiding Common Mistakes

- Mistaking weight (mass) for surface loading by using incorrect units (µg for µg/ft²)
- Not submitting blank samples
 - Labeling or recording in the sample log blank samples as blanks
- Not maintaining a chain of custody

12

Notes:

Listed above are some common mistakes you might make while performing any of the activities listed on the previous slide.

- **Mistaking the units.** One common mistake is not understanding the units of measurement provided in the lab report. When the results come from the laboratory, check whether they are provided in µg or µg/ft². If they are in µg, you must convert them to µg/ft² before recording them on your report and interpreting results. Discuss with your laboratory how results are reported.
- **Failing to submit blank samples.** Another common mistake is not submitting blank samples. Without this mechanism, you have no way of verifying if the laboratory results were uncontaminated, or that you used good sampling techniques. Submit one blank sample for every unit sampled.
- **Failing to maintain the chain of custody.** This is your only mechanism to track the handling of the sample. The chain-of-custody form must be maintained from the time you take the dust wipe sample until you transfer custody. Re-sampling is recommended if this document is not maintained.

Review

- Select an EPA-recognized lab.
 - Call 1-800-424-5323
 - Visit www.epa.gov/lead/nllap
 - Ensure the lab is EPA-recognized for the analysis of lead in dust
- Maintain a chain of custody.
- Interpret lab results.

13

Notes:

Attachment 4-A: Questions to Ask a Laboratory

Question	Question Background Information
Is the laboratory recognized by NLLAP?	All samples must be analyzed by an NLLAP laboratory. You can contact the NLIC Clearinghouse at 1-800-424-5323 for an up-to-date list of NLLAP-recognized laboratories. Even after selecting a laboratory, you should check the laboratory’s accreditation every 6 months.
What is the turnaround time for sample analysis?	The laboratory turnaround time is an important factor; labs usually provide results within 1 to 3 days. A faster turnaround time allows you to be more responsive to your client but may cost more money.
What is the cost per sample?	Prices can vary depending on how quickly you want the results. A 6-hour turnaround will cost more than samples analyzed over a few days.
Will the laboratory provide sampling materials?	Some laboratories will provide you with the materials necessary to perform sampling. You may want to select a laboratory that provides these materials because laboratory-supplied materials and forms can help minimize potential errors in the analysis and recordkeeping.
Can the laboratory analyze composite samples?	It is good practice to check in advance the laboratory’s capabilities in analyzing composite samples, if your client wants you to collect composite samples. Some laboratories do not offer this service.
Does the laboratory perform all the necessary mathematical calculations?	The federal guidance is provided in µg/ft². Depending on the size of the sample or sample area, some mathematical calculations may need to be performed to convert the sample area to 1 square foot. Selecting a laboratory that will perform this calculation for you can reduce the possibility of mathematical errors.

Submitting Company:

Lab Work Order #

Project Name:

Project Location:

Project Number:

Purchase Order No.:

Special Instructions [Include requests for special reporting or data packages]:

STATE WHERE SAMPLES WERE COLLECTED:

Act #

Phone #

FAX #

Turn Around Time

Matrix / Sample Type (Select ONE)

Tests / Analytes (Select ALL that Apply)

ORGANICS TESTS and other Analyses

☐ Same day*

☐ 1 business day*

☐ 2 business days*

☐ 3 business days*

☐ STANDARD (5 bus. days)

☐ Standard Full TCLP (10d)

☐ Weekend*

☐ ☐

All samples on form should be of SAME matrix type.

Use additional forms as needed.

☐ Air

☐ Aqueous

☐ Bulk

☐ Hi-Vol Filter (PM10)

☐ Hi-Vol Filter (TSP)

☐ Oil

☐ Paint

☐ Sludge

☐ Soil

☐ Solid

☐ Waste

☐ Wastewater

☐ Water Drinking

☐ Compliance

☐ Wipe

☐ Wipe, Composite

☐

☐

☐

☐ PCM (NIOSH 7400)

☐ TEM (AHERA)

☐ TEM (EPA Level II)

☐

☐ Total Dust (NIOSH 0500)

☐ Resp. Dust (NIOSH 0600)

☐ Silica - FTIR (NIOSH 7602)

☐ Silica - XRD (NIOSH 7500)

☐ PLM (EPA 600.1982)

☐ PLM (EPA Point Count)

☐ PLM (Qualitative only)

☐ NYELAP 198.1/41.6

☐ CAELAP (EPA Interim)

☐ TEM (Chaffield)

☐ Lead

☐ RCRA Metals

☐

☐

☐ TCLP / Lead

☐ TCLP / RCRA Metals

☐ TCLP / Full (w/ organics)

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

☐

Attachment 4-C: Worksheet for Performing Mathematical Conversions for Dust Samples

Table with symbols for units of measurement and weight used for calculations

Unit of Measurement or Weight	Symbol
Inches	in
Square inches	in ²
Feet	ft
Square feet	ft ²
Micrograms	µg
Micrograms per square foot	µg/ft ²

1. Convert the sample area to square feet (ft²)

If the area you sampled was not a square foot, you will need to convert it to this dimension. One foot equals 12 inches, and 1 square foot equals 144 square inches.

- Record the sample area in inches (in) as opposed to feet (ft).
- Convert the sample area to square inches (in²). Round the number to a maximum of three decimal places.
- Divide the square inches by 144 to get square feet (ft²). Round the number to a maximum of three decimal places.

Step	Steps to convert inches to square feet	Calculation
1	Dimensions of sample area in inches (in)	Length: ____ in Width: ____ in
2	Multiply length times width to calculate the area in square inches (in²)	____ in × ____ in = ____ in²
3	Divide the area in square inches (in²) by 144 to calculate the area in square feet (ft²)	____ in² ÷ 144 = ____ ft²

2. Convert the results to micrograms per square foot (µg/ft²)

After you have converted the sample area to square feet, you need to find the amount of lead dust contained in that area. The micrograms per square foot (µg/ft²) describe the quantity of lead dust contained in a 1 square-foot area.

Divide the amount of lead (µg) by the area (ft²).

Step	Steps to convert to micrograms per square foot (µg/ft²)	Calculation
1	Dimensions of sample area in square feet (ft²)	Area = ____ ft²
2	Quantity of lead in micrograms (µg)	Lead = ____ µg
3	Divide the area in square inches (in²) by 144 to calculate the area in square feet (ft²)	____ µg ÷ ____ ft² = ____ µg/ft²

Attachment 4-D: Activity Interpreting Laboratory Results

Instructions: The purpose of this activity is to test your ability to verify the results received from the laboratory, compare these results to EPA dust-lead action levels and interpret the results. Using the following excerpt from a dust-lead testing results form, check the laboratory’s calculation of the weighted lead dust sample.

Using the following excerpt from a dust-lead testing results form, check the laboratory’s calculation of the lead dust loading.

Sample #	Location	Surface	Total Lead (µg)	Dimensions of Sample Area (ft²)	µg/ft²
92-1	Upstairs bedroom	Floor	5	1.025	4.9
92-2	Upstairs bedroom	Interior window sill	150	0.478	202.7
92-3	Kitchen, front window	Interior window sill	42	0.544	77.2
92-4	Kitchen, side window	Window trough	87	0.928	60.0

1. Check the results (µg lead/ft²) for each sample. If the results are incorrect, provide the correct results in µg lead/ft².

2. After verifying the laboratory’s results, compare these results to the appropriate EPA recommended guidance. Did the individual samples pass below the action levels or fail to clear below the action levels?

EPA Action Levels for Lead Dust

Floors: < 5 µg/ft²

Interior window sills: < 5 µg/ft²

Window troughs: < 5 µg/ft²

Sample #	Result	Dust-Lead Action Level	Pass or Fail
92-1			
92-2			
92-3			
92-4			

Selecting a Laboratory to Analyze Lead Samples

It is important to select a qualified laboratory because:

Results Can Vary. The results of lead testing are often used to show that a home is free of hazardous levels of lead in dust, soil or paint. Small mistakes in sampling procedures can produce results that have different meanings. In some cases, sampling mistakes may falsely show that a home is lead-safe or may falsely identify lead hazards. Make sure the lab you choose is part of the National Lead Laboratory Accreditation Program (NLLAP). NLLAP is a program designed to test a lab's ability to analyze dust wipes, soil and paint samples for lead. EPA and HUD regulations require the use of NLLAP-recognized laboratories when laboratory analysis of lead samples is required.

Supplies and Services are Different. Some laboratories work only with large industrial or commercial clients. Others provide help to those who need a few samples analyzed.

Price is Only One Factor to Consider. Laboratories that have higher prices may offer a better value if you consider the services that they provide and their attention to quality control.

Here is a list of questions to ask labs to help you determine if the lab has the services and capacity to meet your needs.

Topic	Questions to Ask
Accreditation	• Is the lab recognized by the EPA as accredited under NLLAP? • Only use labs with NLLAP accreditation. • Some states also regulate lead laboratories.
Types of Clients	• Are samples accepted from the general public? • Is there a minimum number of samples?
Samples Analyzed	• Are paint, dust, soil and/or water samples analyzed? • Are composite samples analyzed?
Cost and Turn-around Time	• What is the cost per sample for standard turn-around time? • What is the standard turn-around time? • Does the lab offer 24-hour turn-around? • Are there volume discounts?
Reporting	• How are the results provided? U.S. mail, fax and/or e-mail? • What units are used for reporting each type of sample result? For lead dust, it is easiest if results are reported in micrograms per square foot (µg/ft²) and calculated using the measurements you provide. This saves time and reduces errors. • Are the results compared with appropriate federal, state or local standards to determine compliance?
Client Support	• Are sample collection materials provided, such as wipes, gloves, templates, tubes for submitting samples, and forms? • Are written sample collection directions provided? • Will the lab offer assistance over the phone? • Does the lab have a home sampling kit for lead?
Quality Control	• Will the lab provide blind quality control samples to check the accuracy and precision of the laboratory's procedures?

To obtain a current list of laboratories recognized by the EPA as accredited under the National Lead Laboratory Accreditation Program (NLLAP):

- Call the National Information Center at 1-800-424-LEAD [5323]
- Visit epa.gov/lead/nllap

Call your state health department To obtain a current list of lead laboratories licensed by your state.

Visit epa.gov/lead/lead-dust-sampling-tech for more information about selecting a laboratory in Chapter 4: Selecting a Laboratory and Interpreting Results of the Lead Dust Sampling Technician Initial Training Course (EPA-740-B-26-010, January 2026)

Visit the U.S. Department of Housing and Urban Development's Office of Lead Hazard Control and Healthy Homes website at <https://www.hud.gov/lead>.

Cleaning Up Is Important

- Small amounts of lead in dust can poison young children.
- Dangerous levels of lead dust may remain after working with paint, even if a work site looks clean.
- Workers may bring lead contaminated dust home.
- Cleaning protects children in homes where work is done, as well as children in the homes of workers.
- Simple cleaning techniques reduce dust lead levels.

This fact sheet was developed for lead dust sampling technicians, lead-based paint risk assessors, and lead-based paint inspectors.

Chapter 5: Writing the Report

Chapter 5: Writing a Report

Lead Dust Sampling Technician Initial Training Course

January 12, 2026

1

Notes:

Objectives

- List the items that make up a complete post-work dust-lead testing report.
- Make the report easy for the client to understand.

2

Notes:

At the end of the chapter, students will be able to:

- List the key contents of a complete a post-work dust-lead testing report
- Describe ways to make the report easy to read
- Respond appropriately to questions that clients may ask upon receiving their report

Contents of Report – EPA RRP Rule

- Cover Page
- Summary of Sampling Results
- Visual Inspection Results
- Laboratory Analytical Results
- Renovate Right pamphlet
 - *Appendix B*

3

Notes:

These are the six elements of the post-work dust-lead testing report.

Blank forms that can be used for the Cover Page, Summary of Sampling Results, and Visual Inspection Results are provided in Attachment 6-C of this manual.

A copy of the *Lead-Safe Certified Guide to Renovate Right: Important Lead Hazard Information for Families, Child Care Providers and Schools* pamphlet is also included in Appendix B.

Contents of Report – HUD LSHR

- Address of property and if multifamily, specific units and common areas affected
- Date of clearance exam
- Name, address and signature of person performing clearance including certification number
- Visual inspection results

4

Contents of Report – HUD LSHR Continued

- Dust sampling results
- Name and address of each laboratory that analyzed samples
- Start and completion dates of work performed
- Detailed written description of methods used during work and specific, detailed locations where work occurred
- If soil hazards are corrected, description of location

5

Notes:

Because HUD has more extensive visual inspections requirements, than does the EPA rule, HUD requires more information regarding the details of a post-work dust-lead testing report.

Notes:

Because HUD has more extensive visual inspections requirements, than the EPA rule, HUD requires more information regarding the details of a post-work dust-lead testing report.

Activity: Writing the Report

- Refer to Attachment 5-A
- Review the blank and completed dust-lead testing reports

6

Notes:
Use **Attachment 5-A: Sample Dust-Lead Testing Report**.

Review

- The items that make up a complete post-work dust-lead testing report
- How to make a report easy for a client to understand

7

Notes:

Attachment 5-A: Sample Written Report

The following report is a sample post-work dust-lead testing report from a small HUD funded rehabilitation job (less than \$5,000/unit) in a unit that involved window replacements in the small bedroom and kitchen of a single-family home that is available for rent. The post-work dust-lead testing report covers dust-lead testing of the worksite.

POST-WORK DUST-LEAD TESTING REPORT

General Information

Information Needed	Report Information
Date of Dust-Lead Test	8/5/25
Lead Dust Sampling Technician	Jane White
Property Address	80 East Main St. Hammond, IN 89898
Client Name and Address	Smith Family 80 East Main St. Hammond, IN 89898
Laboratory Name and Address	Analysis Services, Inc. 990 45th St., Suite 500 Gary, IN 44444
Telephone Number	222-222-2222
NLLAP Number	IN 999999

Summary of Post-Work Dust-Lead Testing Results

This unit failed the dust-lead testing portion of the lead dust sampling examination. Areas represented by the failed samples should be re-cleaned.

Lead dust above the EPA action levels/HUD clearance standards was found in the following areas:

Location	Surface	µg lead/ft²
Small bedroom	Side facing window (C-1)—window sill	600
Small bedroom	Floor	200
Kitchen	Window above sink (A-1)-- window sill	525

Signature: Jane White

Date: 8/12/25

Summary of Hazard Reduction Activities

Information Needed	Report Information
Name of Firm	ABC Renovations
Address of Firm	123 Main Street East Chicago, IN 12345
Supervisor Name	John Brown #1634
Supervisor Certification Number	1634
Start and Completion Date of Hazard Reduction or Completion Activity	8/4/25 to 8/5/25

Description of Hazard Reduction Activities and Areas Addressed

Location	Activity
Kitchen	Replaced A-1 window with new, vinyl-clad window
2nd floor small bedroom	Replaced C-1 and C-2 windows with new, vinyl-clad windows

Description of Work

The supervisor was present on the job site when work was being performed. Workers used lead-safe work practices. Plastic sheeting covered a 5-foot area on the ground outside under the windows being replaced and on the floor inside. Signs were posted at the doors to the bedroom and kitchen. Occupants were not allowed in the kitchen and bedroom and the outside work area during this activity. The window frame was misted prior to tear-out. After removal, workers wrapped the old windows in plastic sheeting and picked up debris on the plastic immediately and bagged it. The plastic sheeting was carefully gathered up and bagged for disposal. Workers replaced their disposable booties when leaving the work area for lunch and breaks. Respirators were not necessary. The new windows were installed and a clearance examination was requested.

Part I. VISUAL INSPECTION RESULTS FORM

Information Needed	Report Information
Date of Lead Dust Sampling	8/5/25
Lead Dust Sampling Technician	Jane White
Client	Smith Family
Property Address	80 East Main St. Hammond, IN 89898

Visual Inspection of the Work Area

Work Area	Deteriorated Paint	Debris	Visible Dust	Notes	Pass or Fail?
Small bedroom	n/a	n/a	n/a	n/a	Pass
Kitchen	n/a	n/a	n/a	n/a	Pass
First floor hallway	n/a	n/a	n/a	n/a	Pass
Staircase	n/a	n/a	n/a	n/a	Pass
Second floor hallway	n/a	n/a	n/a	n/a	Pass
Exterior soil under kitchen window	n/a	n/a	n/a	n/a	Pass
Exterior soil under bedroom window	n/a	n/a	n/a	n/a	Pass


DUST-LEAD TESTING RESULTS FORM

Information Needed	Report Information
Date of Lead Dust Sampling	8/5/25
Lead Dust Sampling Technician	Jane White
Client Name	Smith Family
Property Address	80 East Main St. Hammond, IN 89898

Dust-Lead Testing Results

Sample #	Location	Surface	Dimensions of Sample Area (ft²)	µg lead/ft²	Pass or Fail?
1-2	Upstairs small bedroom	Front facing window (C-2) - window sill	4" x 18"	17	Pass
1-3	Upstairs small bedroom	Floor under C-1 window	12" x 12"	80	Fail
1-4	Upstairs small bedroom	Side facing window (C-1) - window sill	4" x 18"	100	Fail
2-1	Second floor hallway, 3 feet from newel post	Floor	12" x 12"	2	Pass
3-1	Staircase 5th step from bottom	Floor	12" x 12"	4	Pass
4-1	Kitchen	Floor under A-1 window	12" x 12"	8	Fail
4-2	Kitchen	Window above sink (A-1) - window sill	4" x 18"	225	Fail
5-1	First floor, entry foyer, 2 feet inside front door	Floor	12" x 12"	3	Pass

FIRST FLOOR

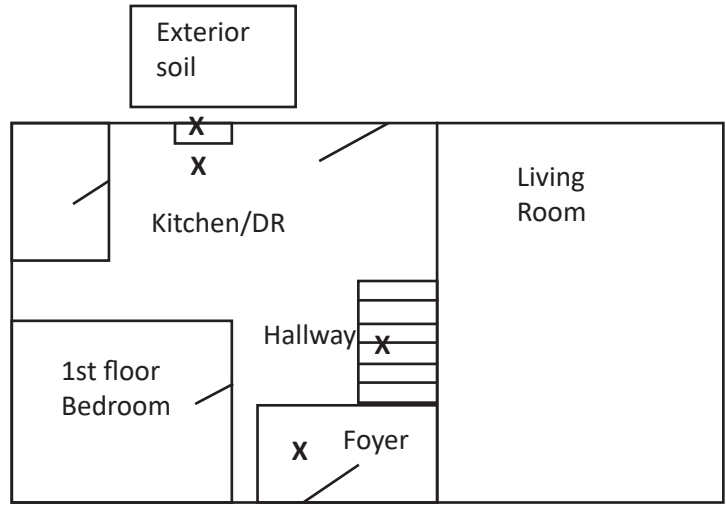

X = sample locations


Understanding Your Report

1. The Summary Results section lists all of the areas that failed the dust-lead test. The areas represented by the sample needs to be re-cleaned to see if the cleaning removed the contaminated dust. Deteriorated painted surfaces should be repaired using interim controls or abatement techniques.
2. For written information on how to address lead hazards, call the National Lead Information Center (NLIC) at 1-800-424-LEAD (1-800-424-5323). You may consider hiring a risk assessor to evaluate lead hazards in your home and recommend a lead hazard control plan. Risk assessors can be located by calling NLIC at 1-800-424-LEAD or by visiting cdxapps.epa.gov/leadpro.
3. The laboratory result forms attached to the report list the analyst, all of the areas sampled inside and outside the building and the laboratory analysis results for each sample.
4. The dust-lead test results are expressed in micrograms per square foot ($\mu\text{g}/\text{ft}^2$); soil samples are expressed in micrograms per gram ($\mu\text{g}/\text{g}$).
5. Areas that failed the dust-lead test showed lead dust levels above EPA dust-lead action levels. The guidance that was used during this dust-lead test is as follows:

EPA Actions Levels for Lead Dust

Carpeted and uncarpeted floors: $< 5 \mu\text{g}/\text{ft}^2$
Interior window sill (stool): $< 40 \mu\text{g}/\text{ft}^2$
Window trough: $< 100 \mu\text{g}/\text{ft}^2$

SECOND FLOOR

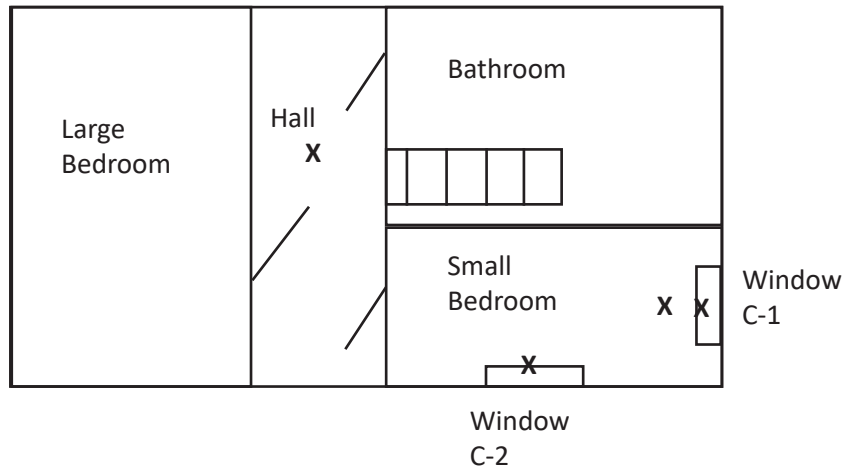

Chapter 6: Putting the Skills Together

Chapter 6: Putting the Skills Together

Lead Dust Sampling Technician Initial Training Course

January 12, 2026

Notes:

Objectives

- Practice the skills taught in the class:
 - Choosing appropriate sampling locations
 - Taking lead dust samples
 - Interpreting results

2

Notes:

This chapter will outline the steps a lead dust sampling technician must take from start to finish when conducting an examination. This chapter includes five activities to help practice implementing the protocols.

By the end of this chapter, students will be able to demonstrate that they can:

- Choose appropriate sampling locations
- Take lead dust samples
- Interpret Results

Activity 1: Where To Take Samples

- You are now going to practice sampling area strategies.
- Your instructor will provide you with a hypothetical renovation scenario and diagram.
- Read the scenario and mark the location(s) of where you think dust wipe samples should be taken.

3

Notes:

Remember...

- Be strategic about laying out sampling area to capture areas where the highest dust generating tasks occurred during the job.
- Refer to the Field Guide or Chapter 3 to determine the appropriate places to take your samples.

4

Notes:

Activity 2: Dust Wipe Sampling

- You are now going to practice taking dust wipe samples again.
- Everyone must demonstrate proficiency.
- Follow your instructor's directions for taking samples.

5

Notes:

Activity 2: Now that the sampling locations have been determined, you will take samples on a variety of surfaces – window sills and troughs, and floors.

Activity 3: Interpreting the Results

- Analyze the results
 - Your instructor will provide you with laboratory results to interpret.
 - Use EPA dust-lead action levels for guidance:
 - Floors: < 5 µg/ft²
 - Interior window sills: < 40 µg/ft²
 - Window troughs: < 100 µg/ft²

6

Notes:

Results and Report Writing

When analyzing the data, follow the guidelines provided in Chapter 4.

Use the EPA action levels/HUD clearance standards when evaluating sample results.

Activity 4: Translating Results into a Written Report

- Translate analyzed results into a written report
 - Using the result from the previous activity (Interpreting the Results), write up a report that can be easily understood by the client.
 - Use the format introduced in Chapter 5: Writing the Report as a guide.

6

Notes:

Report Writing

Use the information in Chapter 5: Writing the Report as a guideline to translate the results into an easy to understand report.

Activity 1: Where to Take Samples for Renovated Areas

Scenario: A homeowner renovated her house and she chose, under the EPA RRP Rule, to have post-work dust-lead testing conducted in her home, instead of cleaning verification. This language was inserted in the contract at the beginning of the project. After reading the description about each type of renovation performed, decide where and whether or not samples should be taken inside the house by marking an “X” on the floor plan (see floor plan on following page).

1. The kitchen cabinets were replaced. Next to the cabinets, a stove and the 18-inch-square metal wall plate that held the exhaust vent for the stove were removed. A plastic barrier was hung between the kitchen and the hallway during this project.
2. In an effort to have a more energy-efficient house, both windows in bedroom 2 were replaced with triple-paned, argon-gas windows. The contractor erected a barrier at the existing doorway to the bedroom.
3. The homeowner’s company decided its employees could reduce both fuel costs and pollution by allowing them to work from home more often. As a result, the homeowner needed to create an office space. She decided to split her spacious upstairs bedroom into a smaller bedroom and an office. She had a wall constructed in the middle to divide the room. The original bedroom door was removed and two new doors were installed to allow access into each room. A window was installed in the office. The renovator considered both new rooms as a single work area and only erected a barrier between the bedroom/office and the hall.
4. The bathroom floor, original since the house was built in the 1960s, was replaced with new ceramic tile. Both the existing floor and the existing walls were ceramic tile.


Activity 1: Where to Take Samples for Renovated Areas in a HUD-Funded Project

Scenario: A homeowner received federal rehabilitation assistance (less than \$5,000) to renovate specific areas of her house. After reading the description about each type of renovation performed, decide where and whether or not samples should be taken inside the house by marking an “X” on the floor plan (see floor plan on following page).


1. The kitchen cabinets were replaced. Next to the cabinets, a stove and the 18-inch-square metal wall plate that held the exhaust vent for the stove were removed. A plastic barrier was hung between the kitchen and the hallway during this project.
2. The two windows in Bedroom 2 had their sashes replaced with triple-paned, argon-gas-filled sashes. The sashes were replaced from the inside and plastic was hung on the outside of the windows. The contractor erected a barrier over the existing doorway to the bedroom. (Note that this work scope differs from the scope in the EPA example.)
3. The homeowner’s company decided its employees could reduce both fuel costs and pollution by allowing them to work from home more often. As a result, the homeowner needed to create an office space. She decided to split her spacious upstairs bedroom into a smaller bedroom and an office. She had a wall constructed in the middle to divide the room. The original bedroom door was removed and two new doors were installed to allow access into each room. A window was installed in the office. The renovator considered both new rooms as a single work area and only erected a barrier between the bedroom/office and the hall.
4. The bathroom floor, original since the house was built in the 1960s, was replaced with new ceramic tile. Both the existing floor and the existing walls were ceramic tile.

Mark “X” for sample locations

FIRST FLOOR

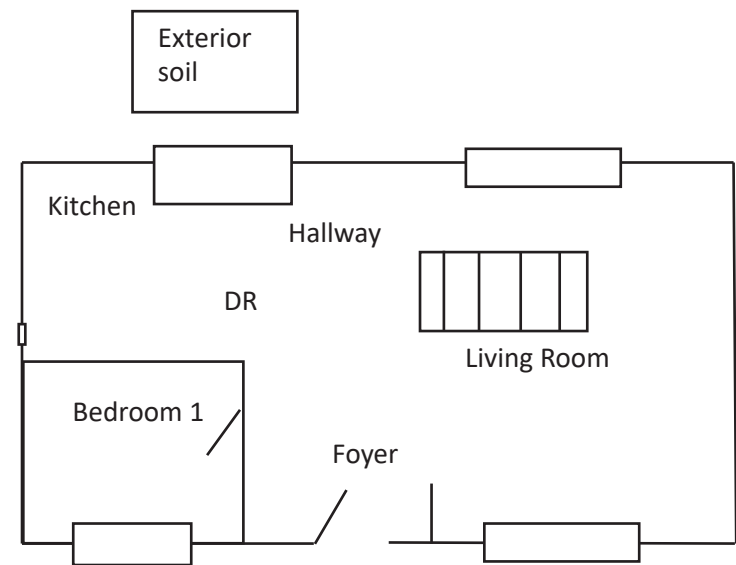

SECOND FLOOR

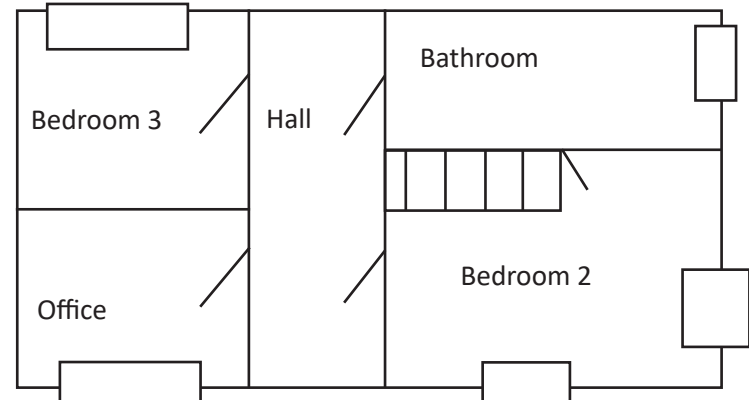

Attachment 6-B

Activity 3: Interpreting Laboratory Results

Instructions: The purpose of this activity is to test your ability to verify the results received from the laboratory, compare these results to the EPA action levels/HUD clearance standards, and interpret the results. Using the following excerpt from a dust-lead testing results form, check the laboratory’s calculation of the weighted lead dust sample

Sample #	Location	Surface	Total Lead (µg)	Dimensions of Sample Area (ft²)	µg/ft²
X-1	Kitchen	Floor	5	1.070	5.5
X-2	Kitchen	Interior window sill	323	0.969	333.3
X-3	Kitchen	Window trough	210	0.525	400.0
X-4	Hallway	Floor	4	1.107	3.6
X-5	Bedroom 2	Floor	20	0.988	20.2
X-6	Hall	Floor	3	1.107	2.7
X-7	Bedroom 3	Floor	4	1.094	3.7
X-8	Office	Floor	192	1.094	17.5
X-9	Bedroom 3	Interior window sill	412	0.88	468.1
X-10	Bedroom 3	Window trough	52	0.67	77.6
X-11	Hall	Floor	11	1.107	9.9
X-12	Office	Interior window sill	30	0.88	341.0
X-13	Office	Window trough	12	0.76	15.8

1. Check the results (µg lead/ft²) for each sample. If the results are incorrect, provide the correct results in µg lead/ft².

2. After verifying the laboratory’s results, compare these results to the appropriate EPA dust-lead action levels. Did the individual samples pass or fail to clear to below the dust-lead action levels?

EPA Action Levels for Lead Dust

Floors: < 5 µg/ft²

Interior window sills: < 5 µg/ft²

Window troughs: < 5 µg/ft²

Sample #	Result	Dust-Lead Action Level	Pass or Fail?
X-1			
X-2			
X-3			
X-4			
X-5			
X-6			
X-7			
X-8			
X-9			
X-10			
X-11			
X-12			
X-13			

Activity 3: Interpreting Laboratory Results in a HUD-Funded Project

Instructions: The purpose of this activity is to test your ability to verify the results received from the laboratory, compare these results to EPA actions levels/HUD clearance standards, and interpret the results. Using the following excerpt from a dust-lead testing results form, check the laboratory’s calculation of the dust lead loading. (Note: To keep the exercise within the class time available, just the first 13 samples in the lab report are shown)

Sample #	Location	Surface	Total Lead (µg)	Dimensions of Sample Area (ft²)	µg/ft²
X-1	Kitchen	Floor	5	1.070	5.5
X-2	Kitchen	Interior window sill	323	0.969	333.3
X-3	Kitchen	Window trough	156	0.526	296.6
X-4	Hallway	Floor	4	1.107	3.6
X-5	Bedroom 2	Floor	50	0.988	50.6
X-6	Bedroom 2	Interior window sill	289	0.898	321.8
X-7	Bedroom 2	Interior trough	154	0.775	198.7
X-8	Hall	Floor	3	1.107	2.7
X-9	Bedroom 3	Floor	4	1.094	3.7
X-10	Office	Floor	192	1.094	17.5
X-11	Bedroom 3	Interior window sill	412	0.88	468.1
X-12	Bedroom 3	Interior trough	52	0.67	77.6
X-13	Hall	Floor	900	1.107	813.0

1. Check the results (µg lead/ft²) for each sample. If the results are incorrect, provide the correct results in µg lead/ft².
2. After verifying the laboratory’s results, compare these results to the appropriate EPA dust-lead action levels. Did the individual samples pass or fail to clear to below the dust-lead action levels?

EPA Action Levels for Lead Dust

Floors: < 5 µg/ft²

Interior window sills: < 5 µg/ft²

Window troughs: < 5 µg/ft²

Sample #	Result	Dust-Lead Action Level	Pass or Fail?
X-1			
X-2			
X-3			
X-4			
X-5			
X-6			
X-7			
X-8			
X-9			
X-10			
X-11			
X-12			
X-13			

Attachment 6-C

Activity 4: Translating Results into a Written Report

Instructions: The purpose of this activity is to test your ability to translate the results from the previous activity (Interpreting Laboratory Results in a HUD-Funded Project) into a written report that is easy for the client to understand. Using the results from the previous activity and the report format from Chapter 5: Writing the Report, complete a dust-lead testing report.

DUST-LEAD TESTING REPORT

General Information

Information Needed	Report Information
Date of Dust-Lead Test	
Lead Dust Sampling Technician	
Property Address	
Client Name and Address	
Laboratory Name and Address	
Telephone Number	
NLLAP Number	

Summary of Dust-Lead Testing Results

This unit failed the dust-lead testing portion of the lead dust sampling examination. Areas represented by the failed samples should be re-cleaned.

Lead dust above the EPA action levels/HUD clearance standards was found in the following areas:

Location	Surface	µg lead/ft²
Small bedroom		
Small bedroom		
Kitchen		

Signature: _____

Date: _____

Summary of Hazard Reduction Activities

Information Needed	Report Information
Name of Firm	
Address of Firm	
Supervisor Name	
Supervisor Certification Number	
Start and Completion Date of Hazard Reduction or Completion Activity	

Description of Hazard Reduction Activities and Areas Addressed

Location	Activity

Description of Work

Part I. VISUAL INSPECTION RESULTS FORM

Information Needed	Report Information
Date of Lead Dust Sampling	
Lead Dust Sampling Technician	
Client	
Property Address	

Visual Inspection of the Work Area

Work Area	Deteriorated Paint	Debris	Visible Dust	Notes	Pass or Fail?

Appendix A:

Excerpt from the
Renovation, Repair, and
Painting Regulations at
40 CFR Part 745 Subpart E

Appendix A: Excerpt from the Renovation, Repair, and Painting Regulations at 40 CFR Part 745 Subpart E

To see the full regulations go to <https://www.ecfr.gov/current/title-40/chapter-I/subchapter-R/part-745/subpart-E>

§ 745.85 Work practice standards.

(c) *Optional dust-lead testing.* Cleaning verification need not be performed if the contract between the renovation firm and the person contracting for the renovation or another Federal, State, Territorial, Tribal, or local law or regulation requires:

- (1) The renovation firm to perform dust-lead sampling at the conclusion of a renovation covered by this subpart.
- (2) The dust-lead samples are required to be collected by a certified inspector, risk assessor or dust sampling technician.
- (3) The renovation firm is required to re-clean the work area until the dust sample results are below the dust-lead action levels in §745.227(e)(8) or any applicable State, Territorial, Tribal, or local standard.

§ 745.90 Renovator certification and dust sampling technician certification.

(a) *Renovator certification and dust sampling technician certification.*

(1) To become a certified renovator or certified dust sampling technician, an individual must successfully complete the appropriate course accredited by EPA under § 745.225 or by a State or Tribal program that is authorized under subpart Q of this part. The course completion certificate serves as proof of certification. EPA renovator certification allows the certified individual to perform renovations covered by this section in any State or Indian Tribal area that does not have a renovation program that is authorized under subpart Q of this part. EPA dust sampling technician certification allows the certified individual to perform dust clearance sampling under § 745.85(c) in any State or Indian Tribal area that does not have a renovation program that is authorized under subpart Q of this part.

(2) Individuals who have successfully completed an accredited abatement worker or supervisor course, or individuals who successfully completed an EPA, HUD, or EPA/HUD model renovation training course before October 4, 2011, may take an accredited refresher renovator training course that includes hands-on training in lieu of the initial renovator training course to become a certified renovator.

(3) Individuals who have successfully completed an accredited lead-based paint inspector or risk assessor course before October 4, 2011, may take an accredited refresher dust sampling technician course in lieu of the initial training to become a certified dust sampling technician. Individuals who are currently certified as lead-based paint inspectors or risk assessors may act as certified dust sampling technicians without further training.

(4) To maintain renovator certification or dust sampling technician certification, an individual must complete a renovator or dust sampling technician refresher course accredited by EPA under § 745.225 or by a State or Tribal program that is authorized under subpart Q of this part within 5 years of the date the individual completed the initial course described in paragraph (a)(1) of this section. If the individual does not complete a refresher course within this time, the individual must re-take the initial course to become certified again. Individuals who take a renovator refresher course that does not include hands-on training will be certified for 3 years from the date they complete the training. Individuals who take a refresher training course that includes hands-on training will be certified for 5 years. Individuals who take the renovator refresher without hands-on training must, for their next refresher course, take a refresher course that includes hands-on training to maintain renovator certification.

(b) *Renovator responsibilities.* Certified renovators are responsible for ensuring compliance with § 745.85 at all renovations to which they are assigned. A certified renovator:

- (1) Must perform all of the tasks described in § 745.85(b) and must either perform or direct workers who

perform all of the tasks described in § 745.85(a).

(2) Must provide training to workers on the work practices they will be using in performing their assigned tasks.

(3) Must be physically present at the work site when the signs required by § 745.85(a)(1) are posted, while the work area containment required by § 745.85(a)(2) is being established, and while the work area cleaning required by § 745.85(a)(5) is performed.

(4) Must regularly direct work being performed by other individuals to ensure that the work practices required are being followed, including maintaining the integrity of the containment barriers and ensuring that dust or debris does not spread beyond the work area.

(5) Must be available, either on-site or by telephone, at all times that renovations are being conducted.

(6) When requested by the party contracting for renovation services, must use an acceptable test kit to determine whether components to be affected by the renovation contain lead-based paint.

(7) Must have with them at the work site copies of their initial course completion certificate and their most recent refresher course completion certificate.

(8) Must prepare the records required by § 745.86(b)(7).

(c) *Dust sampling technician responsibilities.* When performing optional dust-lead sampling under § 745.85(c), a certified dust sampling technician:

(1) Must collect dust samples in accordance with § 745.227(e)(8), must send the collected samples to a laboratory recognized by EPA under TSCA section 405(b), and must compare the results to the action levels in accordance with § 745.227(e)(8).

(2) Must have with them at the work site copies of their initial course completion certificate and their most recent refresher course completion certificate.

Appendix B:

Lead-Safe Certified Guide to
Renovate Right



IT'S THE LAW!

Federal law requires contractors that disturb painted surfaces in homes, child care facilities and schools built before 1978 to be certified and follow specific work practices to prevent lead contamination. Always ask to see your contractor's certification.

Federal law requires that individuals receive certain information before renovating more than six square feet of painted surfaces in a room for interior projects or more than twenty square feet of painted surfaces for exterior projects or window replacement or demolition in housing, child care facilities and schools built before 1978.

- Homeowners and tenants: renovators must give you this pamphlet before starting work.
- Child care facilities, including preschools and kindergarten classrooms, and the families of children under six years of age that attend those facilities: renovators must provide a copy of this pamphlet to child care facilities and general renovation information to families whose children attend those facilities.



WHO SHOULD READ THIS PAMPHLET?

This pamphlet is for you if you:

- Reside in a home built before 1978.
- Own or operate a child care facility, including preschools and kindergarten classrooms, built before 1978, or
- Have a child under six years of age who attends a child care facility built before 1978.

You will learn:

- Basic facts about lead and your health.
- How to choose a contractor, if you are a property owner.
- What tenants, and parents/guardians of a child in a child care facility or school should consider.
- How to prepare for the renovation or repair job.
- What to look for during the job and after the job is done.
- Where to get more information about lead.

This pamphlet is not for:

- **Abatement projects.** Abatement is a set of activities aimed specifically at eliminating lead or lead hazards. EPA has regulations for certification and training of abatement professionals. If your goal is to eliminate lead or lead hazards, contact the National Lead Information Center at **1-800-424-LEAD (5323)** for more information.
- **“Do-it-yourself” projects.** If you plan to do renovation work yourself, this document is a good start, but you will need more information to complete the work safely. Call the National Lead Information Center at **1-800-424-LEAD (5323)** and ask for more information on how to work safely in a home with lead-based paint.
- **Contractor education.** Contractors who want information about working safely with lead should contact the National Lead Information Center at **1-800-424-LEAD (5323)** for information about courses and resources on lead-safe work practices.



RENOVATING, REPAIRING, OR PAINTING?



- Is your home, your building, or the child care facility or school your children attend being renovated, repaired, or painted?
 - Was your home, your building, or the child care facility or school where your children under six years of age attend built before 1978?
- If the answer to these questions is YES, there are a few important things you need to know about lead-based paint.
- This pamphlet provides basic facts about lead and information about lead safety when work is being done in your home, your building or the child care facility or school your children attend.

The Facts About Lead

- Lead can affect children’s brains and developing nervous systems, causing reduced IQ, learning disabilities, and behavioral problems. Lead is also harmful to adults.
- Lead in dust is the most common way people are exposed to lead. People can also get lead in their bodies from lead in soil or paint chips. Lead dust is often invisible.
- Lead-based paint was used in more than 38 million homes until it was banned for residential use in 1978.
- Projects that disturb painted surfaces can create dust and endanger you and your family. Don’t let this happen to you. Follow the practices described in this pamphlet to protect you and your family.

LEAD AND YOUR HEALTH


Lead is especially dangerous to children under six years of age.

Lead can affect children’s brains and developing nervous systems, causing:

- Reduced IQ and learning disabilities.
 - Behavior problems.
- Even children who appear healthy can have dangerous levels of lead in their bodies.**

Lead is also harmful to adults. In adults, low levels of lead can pose many dangers, including:

- High blood pressure and hypertension.
- Pregnant women exposed to lead can transfer lead to their fetuses. Lead gets into the body when it is swallowed or inhaled.
- People, especially children, can swallow lead dust as they eat, play, and do other normal hand-to-mouth activities.
- People may also breathe in lead dust or fumes if they disturb lead-based paint. People who sand, scrape, burn, brush, blast or otherwise disturb lead-based paint risk unsafe exposure to lead.

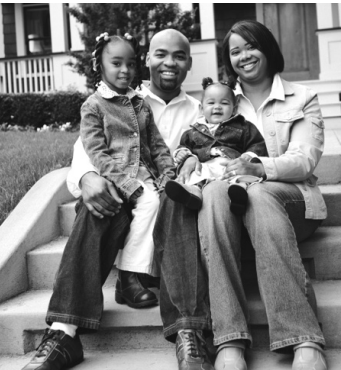

What should I do if I am concerned about my family’s exposure to lead?

- A blood test is the only way to find out if you or a family member already has lead poisoning. Call your doctor or local health department to arrange for a blood test.
 - Call your local health department for advice on reducing and eliminating exposures to lead inside and outside your home, child care facility or school.
 - Always use lead-safe work practices when renovation or repair will disturb painted surfaces.
- For more information about the health effects of exposure to lead, visit the EPA lead website at <https://www.epa.gov/lead/learn-about-lead> or call 1-800-424-LEAD (5323).

There are other things you can do to protect your family every day.

- Regularly clean floors, window sills, and other surfaces.
- Wash children’s hands, bottles, pacifiers, and toys often.
- Make sure children eat a healthy, nutritious diet consistent with the USDA’s dietary guidelines, that helps protect children from the effects of lead.
- Wipe off shoes before entering the house.

WHERE DOES THE LEAD COME FROM?

Dust is the main problem.

The most common way to get lead in the body is from dust. Lead dust comes from deteriorating lead-based paint and lead-contaminated soil that gets tracked into your home. This dust may accumulate to unsafe levels. Then, normal hand to-mouth activities, like playing and eating (especially in young children), move that dust from surfaces like floors and window sills into the body.

Home renovation creates dust.

Common renovation activities like sanding, cutting, and demolition can create hazardous lead dust and chips.

Proper work practices protect you from the dust.


The key to protecting yourself and your family during a renovation, repair or painting job is to use lead-safe work practices such as containing dust inside the work area, using dust-minimizing work methods, and conducting a careful cleanup, as described in this pamphlet.

Other sources of lead.

Remember, lead can also come from outside soil, your water, or household items (such as lead-glazed pottery and lead crystal). Contact the National Lead Information Center at 1-800-424-LEAD (5323) for more information on these sources.



CHECKING YOUR HOME FOR LEAD-BASED PAINT

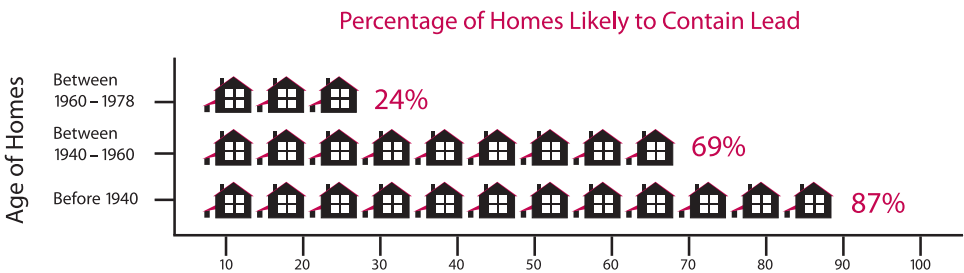

Older homes, child care facilities, and schools are more likely to contain lead-based paint.

Homes may be single-family homes or apartments. They may be private, government-assisted, or public housing. Schools are preschools and kindergarten classrooms. They may be urban, suburban, or rural.

You have the following options:

You may decide to assume your home, child care facility, or school contains lead.

Especially in older homes and buildings, you may simply want to assume lead-based paint is present and follow the lead-safe work practices described in this brochure during the renovation, repair, or painting job.

You can hire a certified professional to check for lead-based paint.

These professionals are certified risk assessors or inspectors, and can determine if your home has lead or lead hazards.

- A certified inspector or risk assessor can conduct an inspection telling you whether your home, or a portion of your home, has lead-based paint and where it is located. This will tell you the areas in your home where lead-safe work practices are needed.
- A certified risk assessor can conduct a risk assessment telling you if your home currently has any lead hazards from lead in paint, dust, or soil. The risk assessor can also tell you what actions to take to address any hazards.
- For help finding a certified risk assessor or inspector, call the National Lead Information Center at 1-800-424-LEAD (5323).

You may also have a certified renovator test the surfaces or components being disturbed for lead by using a lead test kit or by taking paint chip samples and sending them to an EPA-recognized testing laboratory. Test kits must be EPA-recognized and are available at hardware stores. They include detailed instructions for their use.

FOR PROPERTY OWNERS

You have the ultimate responsibility for the safety of your family, tenants, or children in your care.

This means properly preparing for the renovation and keeping persons out of the work area (see p. 8). It also means ensuring the contractor uses lead-safe work practices.

Federal law requires that contractors performing renovation, repair and painting projects that disturb painted surfaces in homes, child care facilities, and schools built before 1978 be certified and follow specific work practices to prevent lead contamination.

Make sure your contractor is certified, and can explain clearly the details of the job and how the contractor will minimize lead hazards during the work.

- You can verify that a contractor is certified by checking EPA's website at epa.gov/getleadSAFE or by calling the National Lead Information Center at 1-800-424-LEAD (5323). You can also ask to see a copy of the contractor's firm certification.
- Ask if the contractor is trained to perform lead-safe work practices and to see a copy of their training certificate.
- Ask them what lead-safe methods they will use to set up and perform the job in your home, child care facility or school.
- Ask for references from at least three recent jobs involving homes built before 1978, and speak to each personally.

Always make sure the contract is clear about how the work will be set up, performed, and cleaned.

- Share the results of any previous lead tests with the contractor.
- You should specify in the contract that they follow the work practices described on pages 9 and 10 of this brochure.
- The contract should specify which parts of your home are part of the work area and specify which lead-safe work practices will be used in those areas. Remember, your contractor should confine dust and debris to the work area and should minimize spreading that dust to other areas of the home.
- The contract should also specify that the contractor will clean the work area, verify that it was cleaned adequately, and re-clean it if necessary.

If you think a worker is not doing what he is supposed to do or is doing something that is unsafe, you should:

- Direct the contractor to comply with regulatory and contract requirements.
- Call your local health or building department, or
- Call EPA's hotline 1-800-424-LEAD (5323).

If your property receives housing assistance from HUD (or a state or local agency that uses HUD funds), you must follow the requirements of HUD's Lead-Safe Housing Rule and the ones described in this pamphlet.

FOR TENANTS AND FAMILIES OF CHILDREN UNDER SIX YEARS OF AGE IN CHILD CARE FACILITIES AND SCHOOLS

You play an important role ensuring the ultimate safety of your family.

This means properly preparing for the renovation and staying out of the work area (see p. 8).

Federal law requires that contractors performing renovation, repair and painting projects that disturb painted surfaces in homes built before 1978 and in child care facilities and schools built before 1978, that a child under six years of age visits regularly, to be certified and follow specific work practices to prevent lead contamination.

The law requires anyone hired to renovate, repair, or do painting preparation work on a property built before 1978 to follow the steps described on pages 9 and 10 unless the area where the work will be done contains no lead-based paint.



If you think a worker is not doing what he is supposed to do or is doing something that is unsafe, you should:

- Contact your landlord.
- Call your local health or building department, or
- Call EPA's hotline 1-800-424-LEAD (5323).

If you are concerned about lead hazards left behind after the job is over, you can check the work yourself (see page 10).



PREPARING FOR A RENOVATION

The work areas should not be accessible to occupants while the work occurs.
The rooms or areas where work is being done may need to be blocked off or sealed with plastic sheeting to contain any dust that is generated. Therefore, the contained area may not be available to you until the work in that room or area is complete, cleaned thoroughly, and the containment has been removed. Because you may not have access to some areas during the renovation, you should plan accordingly.

You may need:

- Alternative bedroom, bathroom, and kitchen arrangements if work is occurring in those areas of your home.
- A safe place for pets because they too can be poisoned by lead and can track lead dust into other areas of the home.
- A separate pathway for the contractor from the work area to the outside in order to bring materials in and out of the home. Ideally, it should not be through the same entrance that your family uses.
- A place to store your furniture. All furniture and belongings may have to be moved from the work area while the work is being done. Items that can't be moved, such as cabinets, should be wrapped in plastic.
- To turn off forced-air heating and air conditioning systems while the work is being done. This prevents dust from spreading through vents from the work area to the rest of your home. Consider how this may affect your living arrangements.

You may even want to move out of your home temporarily while all or part of the work is being done.

Child care facilities and schools may want to consider alternative accommodations for children and access to necessary facilities.



DURING THE WORK

Federal law requires contractors that are hired to perform renovation, repair and painting projects in homes, child care facilities, and schools built before 1978 that disturb painted surfaces to be certified and follow specific work practices to prevent lead contamination.

The work practices the contractor must follow include these three simple procedures, described below:

- 1. Contain the work area.** The area must be contained so that dust and debris do not escape from that area. Warning signs must be put up and plastic or other impermeable material and tape must be used as appropriate to:
- Cover the floors and any furniture that cannot be moved.
 - Seal off doors and heating and cooling system vents.
 - For exterior renovations, cover the ground and, in some instances, erect vertical containment or equivalent extra precautions in containing the work area.
- These work practices will help prevent dust or debris from getting outside the work area.

- 2. Avoid renovation methods that generate large amounts of lead-contaminated dust.** Some methods generate so much lead-contaminated dust that their use is prohibited. They are:
- Open flame burning or torching.
 - Sanding, grinding, planing, needle gunning, or blasting with power tools and equipment not equipped with a shroud and HEPA vacuum attachment.
 - Using a heat gun at temperatures greater than 1100°F.



There is no way to eliminate dust, but some renovation methods make less dust than others. Contractors may choose to use various methods to minimize dust generation, including using water to mist areas before sanding or scraping; scoring paint before separating components; and prying and pulling apart components instead of breaking them.

- 3. Clean up thoroughly.** The work area should be cleaned up daily to keep it as clean as possible. When all the work is done, the area must be cleaned up using special cleaning methods before taking down any plastic that isolates the work area from the rest of the home. The special cleaning methods should include:
- Using a HEPA vacuum to clean up dust and debris on all surfaces, followed by
 - Wet wiping and wet mopping with plenty of rinse water.

When the final cleaning is done, look around. There should be no dust, paint chips, or debris in the work area. If you see any dust, paint chips, or debris, the area must be re-cleaned.

FOR PROPERTY OWNERS: AFTER THE WORK IS DONE

When all the work is finished, you will want to know if your home, child care facility, or school where children under six attend has been cleaned up properly.

EPA Requires Cleaning Verification.

In addition to using allowable work practices and working in a lead-safe manner, EPA's RRP rule requires contractors to follow a specific cleaning protocol. The protocol requires the contractor to use disposable cleaning cloths to wipe the floor and other surfaces of the work area and compare these cloths to an EPA-provided cleaning verification card to determine if the work area was adequately cleaned. EPA research has shown that following the use of lead-safe work practices with the cleaning verification protocol will effectively reduce lead-dust hazards.

Lead-Dust Testing.

EPA believes that if you use a certified and trained renovation contractor who follows the LRRP rule by using lead-safe work practices and the cleaning protocol after the job is finished, lead-dust hazards will be effectively reduced. If, however, you are interested in having lead-dust testing done at the completion of your job, outlined below is some helpful information.

What is a lead-dust test?

- Lead-dust tests are wipe samples sent to a laboratory for analysis. You will get a report specifying the levels of lead found after your specific job.

How and when should I ask my contractor about lead-dust testing?

- Contractors are not required by EPA to conduct lead-dust testing. However, if you want testing, EPA recommends testing be conducted by a lead professional. To locate a lead professional who will perform an evaluation near you, visit EPA's website at cdxapps.epa.gov/leadpro or contact the National Lead Information Center at 1-800-424-LEAD (5323).
- If you decide that you want lead-dust testing, it is a good idea to specify in your contract, before the start of the job, that a lead-dust test is to be done for your job and who will do the testing, as well as whether re-cleaning will be required based on the results of the test.
- You may do the testing yourself. If you choose to do the testing, some EPA-recognized lead laboratories will send you a kit that allows you to collect samples and send them back to the laboratory for analysis. Contact the National Lead Information Center for lists of EPA-recognized testing laboratories.



FOR ADDITIONAL INFORMATION

You may need additional information on how to protect yourself and your children while a job is going on in your home, your building, or child care facility.

The National Lead Information Center at **1-800-424-LEAD (5323)** or epa.gov/lead/forms/nlic can tell you how to contact your state, local, and/or tribal programs or get general information about lead poisoning prevention.

- State and tribal lead poisoning prevention or environmental protection programs can provide information about lead regulations and potential sources of financial aid for reducing lead hazards. If your state or local government has requirements more stringent than those described in this pamphlet, you must follow those requirements.
- Local building code officials can tell you the regulations that apply to the renovation work that you are planning.
- State, county, and local health departments can provide information about local programs, including assistance for lead-poisoned children and advice on ways to get your home checked for lead.
- The National Lead Information Center can also provide a variety of resource materials, including the following guides to lead-safe work practices. Many of these materials are also available at epa.gov/lead/outreach
- Steps to Lead Safe Renovation, Repair and Painting.
- Protect Your Family from Lead in Your Home



For the hearing impaired, call the Federal Information Relay Service at 1-800-877-8339 to access any of the phone numbers in this brochure.

EPA CONTACTS

EPA Regional Offices

EPA addresses residential lead hazards through several different regulations. EPA requires training and certification for conducting abatement and renovations, education about hazards associated with renovations, disclosure about known lead paint and lead hazards in housing, and sets lead-paint hazard standards.

Your Regional EPA Office can provide further information regarding lead safety and lead protection programs at [epa.gov/lead/contacts](https://www.epa.gov/lead/contacts).

Region 1 (Connecticut, Massachusetts, Maine, New Hampshire, Rhode Island, Vermont) Regional Lead Contact U.S. EPA Region 1 Suite 1100 One Congress Street Boston, MA 02114-2023 (888) 372-7341	Region 4 (Alabama, Florida, Georgia, Kentucky, Mississippi, North Carolina, South Carolina, Tennessee) Regional Lead Contact U.S. EPA Region 4 61 Forsyth Street, SW Atlanta, GA 30303-8960 (404) 562-9900	Region 7 (Iowa, Kansas, Missouri, Nebraska) Regional Lead Contact U.S. EPA Region 7 901 N. 5th Street Kansas City, KS 66101 (913) 551-7003
Region 2 (New Jersey, New York, Puerto Rico, Virgin Islands) Regional Lead Contact U.S. EPA Region 2 2890 Woodbridge Avenue Building 205, Mail Stop 225 Edison, NJ 08837-3679 (732) 321-6671	Region 5 (Illinois, Indiana, Michigan, Minnesota, Ohio, Wisconsin) Regional Lead Contact U.S. EPA Region 5 77 West Jackson Boulevard Chicago, IL 60604-3507 (312) 886-6003	Region 8 (Colorado, Montana, North Dakota, South Dakota, Utah, Wyoming) Regional Lead Contact U.S. EPA Region 8 1595 Wynkoop Street Denver, CO 80202 (303) 312-6312
Region 3 (Delaware, Maryland, Pennsylvania, Virginia, Washington, DC, West Virginia) Regional Lead Contact U.S. EPA Region 3 1650 Arch Street Philadelphia, PA 19103-2029 (215) 814-5000	Region 6 (Arkansas, Louisiana, New Mexico, Oklahoma, Texas) Regional Lead Contact U.S. EPA Region 6 1445 Ross Avenue, 12th Floor Dallas, TX 75202-2733 (214) 665-7577	Region 9 (Arizona, California, Hawaii, Nevada) Regional Lead Contact U.S. Region 9 75 Hawthorne Street San Francisco, CA 94105 (415) 947-8021
		Region 10 (Alaska, Idaho, Oregon, Washington) Regional Lead Contact U.S. EPA Region 10 1200 Sixth Avenue Seattle, WA 98101-1128 (206) 553-1200

OTHER FEDERAL AGENCIES

CPSC

The Consumer Product Safety Commission (CPSC) protects the public from the unreasonable risk of injury or death from 15,000 types of consumer products under the agency’s jurisdiction. CPSC warns the public and private sectors to reduce exposure to lead and increase consumer awareness. Contact CPSC for further information regarding regulations and consumer product safety.

CPSC
4330 East West Highway
Bethesda, MD 20814
Hotline 1-(800) 638-2772
[cpsc.gov](https://www.cpsc.gov)

CDC Childhood Lead Poisoning Prevention Branch

The Centers for Disease Control and Prevention (CDC) assists state and local childhood lead poisoning prevention programs to provide a scientific basis for policy decisions, and to ensure that health issues are addressed in decisions about housing and the environment. Contact CDC Childhood Lead Poisoning Prevention Program for additional materials and links on the topic of lead.

CDC Childhood Lead Poisoning Prevention Branch
4770 Buford Highway, MS F-40
Atlanta, GA 30341
(770) 488-3300
[cdc.gov/lead-prevention/about/index.html](https://www.cdc.gov/lead-prevention/about/index.html)

HUD Office of Healthy Homes and Lead Hazard Control

The Department of Housing and Urban Development (HUD) provides funds to state and local governments to develop cost-effective ways to reduce lead-based paint hazards in America’s privately-owned low-income housing. In addition, the office enforces the rule on disclosure of known lead paint and lead hazards in housing, and HUD’s lead safety regulations in HUD-assisted housing, provides public outreach and technical assistance, and conducts technical studies to help protect children and their families from health and safety hazards in the home. Contact the HUD Office of Healthy Homes and Lead Hazard Control for information on lead regulations, outreach efforts, and lead hazard control research and outreach grant programs.

U.S. Department of Housing and Urban Development
Office of Healthy Homes and Lead Hazard Control
451 Seventh Street, SW, Room 8236
Washington, DC 20410-3000
HUD’s Lead Regulations Hotline
(202) 402-7698
[hud.gov/contactus/healthy-homes](https://www.hud.gov/contactus/healthy-homes)



SAMPLE PRE-RENOVATION FORM

This sample form may be used by renovation firms to document compliance with the Federal pre-renovation education and renovation, repair, and painting regulations.

Occupant Confirmation

Pamphlet Receipt

- ☐ I have received a copy of the lead hazard information pamphlet informing me of the potential risk of the lead hazard exposure from renovation activity to be performed in my dwelling unit. I received this pamphlet before the work began.

Printed Name of Owner-occupant

Signature of Owner-occupant

Signature Date

Renovator's Self Certification Option (for tenant-occupied dwellings only)

Instructions to Renovator: If the lead hazard information pamphlet was delivered but a tenant signature was not obtainable, you may check the appropriate box below.

- ☐ **Declined** – I certify that I have made a good faith effort to deliver the lead hazard information pamphlet to the rental dwelling unit listed below at the date and time indicated and that the occupant declined to sign the confirmation of receipt. I further certify that I have left a copy of the pamphlet at the unit with the occupant.
- ☐ **Unavailable for signature** – I certify that I have made a good faith effort to deliver the lead hazard information pamphlet to the rental dwelling unit listed below and that the occupant was unavailable to sign the confirmation of receipt. I further certify that I have left a copy of the pamphlet at the unit by sliding it under the door or by (fill in how pamphlet was left).

Printed Name of Person Certifying Delivery

Attempted Delivery Date

Signature of Person Certifying Lead Pamphlet Delivery

Unit Address

Note Regarding Mailing Option — As an alternative to delivery in person, you may mail the lead hazard information pamphlet to the owner and/or tenant. Pamphlet must be mailed at least seven days before renovation. Mailing must be documented by a certificate of mailing from the post office.



Appendix C:

Lead Dust Sampling Technician Field Guide

Step 4: (Continued)

- Fold the wipe again with the sample side folded in, and place the folded wipe into the sample tube.
- Cap the container. Discard the gloves into a trash bag.
- Label the centrifuge tube and record the dimensions of the sampling area.

Step 5: Measure the sample area

- Measure width and length (unless template was used).
 - Length of sill or trough between edges of tape
 - Width of sill or trough, measure at tape
- Measure to 1/8 inch.
- Do not remove tape until after measurements are taken.

Step 6: Record sample area dimensions on forms

- Calculate the sample area and record on sample collection form and laboratory chain-of-custody form.

Step 7: Clean up

- Clean template with a clean wipe; place in a plastic bag for storage.
- Remove materials from site:
 - Gloves, tape from floors and windows, and used shoe covers.
 - Put items in trash bag, NOT in client's containers.
- Clean face and hands with warm, soapy water.
- Use sanitary wipes if no access to warm, soapy water
- Send the samples to a laboratory recognized by the National Lead Laboratory Accreditation Program (NLLAP) as being proficient in lead in dust analysis. For information on locating EPA-accredited labs, visit www.epa.gov/lead/nllap.

Evaluate the Results

- Compare the laboratory results to the EPA dust-lead action levels for lead dust provided below:
 - Floors: < 5 µg/ft²
 - Interior window sills: < 40 µg/ft²
 - Window troughs: < 100 µg/ft²

These standards are for single-surface samples. The standards for composite samples will be different depending on how many subsamples are collected. Before collecting composite samples, check with your laboratory. Note that HUD discourages composite sampling when clearing federally-assisted housing.

Write the Report

- Use the standard report format.
- Sign the report.

Other Useful Resources

National Lead Information Center

- Clearinghouse of information—from outreach brochures to technical reports—on lead-based paint in the home.
- 1-800-424-LEAD [5323]
- www.epa.gov/lead/forms/nlic

National Lead Laboratory Accreditation Program

- For information on locating EPA-accredited labs
- www.epa.gov/lead/nllap

Office of Pollution Prevention and Toxics

- For information on EPA lead-based paint regulations.
- www.epa.gov/lead
- U.S. Environmental Protection Agency
1200 Pennsylvania Avenue, NW (7404T)
Washington, DC 20460

Office of Healthy Homes and Lead Hazard Control

- For information on the HUD lead-based paint regulations and technical assistance in complying with the HUD regulations for HUD-funded work.
- www.hud.gov/lead

United States
Environmental
Protection Agency

Office of
Pollution Prevention
and Toxics

EPA-740-F-26-002
January 2026

Lead Dust Sampling Technician Field Guide



What Is the Field Guide?

The *Lead Dust Sampling Technician Field Guide* should be used by lead dust sampling technicians to help determine if a recently renovated area has been cleaned sufficiently. The guide provides protocols for conducting post-renovation dust-lead testing under EPA's Renovation, Repair, and Painting (RRP) Rule covering housing and child-occupied facilities built before 1978, and clearance examinations under HUD's Lead Safe Housing Rule (LSHR) in federally-assisted housing built before 1978. This guide also provides federal standards for maximum allowable contamination levels of residual lead dust.

How To Use This Guide

Take this guide with you on site when you perform post-work dust-lead testing and visual inspections. It serves as a quick reminder of:

- When and where to take dust-lead samples
- The step-by-step instructions for taking a dust wipe sample
- EPA/HUD standards for lead dust.

When To Perform Dust-Lead Tests

Renovation activities that disturb lead-based paint can create lead dust so proper cleanup after these jobs is critical. The purpose of post-work dust-lead testing is to determine if the area is safe for re-occupancy.

Post-work dust-lead testing is performed:

- After renovation, repair, painting, and cleaning activities are finished in property built before 1978 and where children are assumed to spend time
- After hazard reduction or maintenance activities in most federally-assisted properties built before 1978 that are covered by HUD's LSHR

Lead dust sampling technicians should NEVER perform post-abatement dust-lead testing (abatement—as opposed to renovation, repair and painting—is a term used for addressing lead hazards). When performing dust-lead testing, the lead dust sampling technician is required to bring a copy of his or her certificate of training to the worksite.

Where To Collect Samples for Dust-Lead Testing

If there is more than one room, hallway, or stairwell within the work area, take:

- One window sill sample and one floor sample within each room, hallway, or stairwell (no more than four rooms, hallways, or stairwells need be sampled)
- If the windows were not closed and covered with plastic during the renovation, also take one window trough sample in each room, hallway, or stairwell (no more than four need to be sampled)
- One floor sample adjacent to the work area, but not in an area that has been cleaned

For federally-assisted housing, take these samples if the work area is contained, otherwise clear the whole unit.

If the work area is smaller than a room, hallway, or stairwell, take:

- One window sill sample and one floor sample
- Also one window trough sample if the windows were not closed and covered with plastic during the renovation
- One floor sample adjacent to the work area, but not in an area that has been cleaned

Equipment List

- Disposable lead dust wipes (individually wrapped)

- Disposable gloves

- Disposable shoe covers

- Sample tubes with caps

- Re-usable templates

- Masking or painter's tape

- Ruler

- Sample collection forms


- Chain-of-custody forms

- Markers, trash bags, labels, pens, re-sealable storage bags

- Calculator

- Sanitary wipes

Check with your laboratory for their sampling requirements

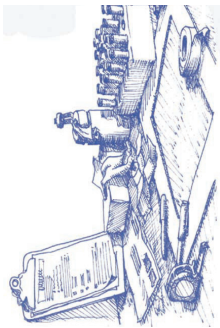

Visual Inspections

EPA's RRP Rule and HUD's LSHR requires a visual inspection as a first step in post-work dust-lead testing process:

- Under both HUD and EPA rules, the visual inspection is designed to determine if the area is free of visible dust and debris before dust-lead testing can begin

In addition, under HUD's rule the visual inspection determines whether the unit/work area (interior and exterior) is clear of visible conditions that can result in exposure to lead-based paint hazards:

- Deteriorated paint
- Chips or debris
- Visible dust



Lead Dust Wipe Sampling

Single or composite samples can be taken; however, single-surface sampling is recommended to get results for specific surfaces. Use durable, re-usable 12" x 12" sampling templates, a disposable template or use tape to lay out the sampling area.

Step 1: Put on disposable shoe covers and lay out sample area

- Clean template with a new wipe.
- Tape template to surface.
- If no template, outline with tape.
- Using tape to lay out the sample area, make sure that on floors the tape is laid in a square. On sills and troughs, the tape should be laid perpendicular to the sill.
- DO NOT touch area inside template.

Note: Use of disposable shoe covers between buildings and the removal of shoe covers before entering your vehicle can be helpful in minimizing the inadvertent transfer of settled dust from one location to another.

Step 2: Prepare the sample tubes

- Use clean tubes.
- Label tube with ID number.
- Record ID number on sample collection form and chain-of-custody form.
- Partially unscrew tube cap.
- Place tube near sample area.

Step 3: Put on clean gloves

- Use disposable gloves.
- Use new gloves for each sample.
- DO NOT touch anything besides the wipe after putting on the gloves.

Step 4: Wipe sample area and place wipe in sample tube

- Do not touch other objects.
- Press the wipe down firmly at an upper corner of the sample area.

- Make as many "S"-like motions as needed to wipe the entire sample area, moving from side to side. Do not cross the outer border of the tape or template.

- Fold the wipe in half, keeping the dirty side in, and repeat the wiping procedure in the original direction in a forward and back motion.

- Fold the wipe again and repeat the wiping procedure, concentrating on collecting dust from the edges and corners of the sample area.

Floors



Start at corner and wipe sideways.



Now wipe in the opposite direction.