

Statistical Comparison of Laboratory Tests

Daniel Strickman
USDA ARS
National Program Leader, Veterinary, Medical, and Urban
Entomology
Daniel.strickman@ars.usda.gov
301-504-5771

What is a “Repellent”

- The mode of action of various active ingredients is not the same
- Considering all active ingredients that stop biting as “repellents” has confused nomenclature and research
- Active ingredient that alters biting behavior might better be called a “phagomone”
- Product used by public to stop biting better called a “repellent product”

Mosquito Preparation

- Some species adapt to host animal in a few generations
- Provide sugar or not
 - Probably species dependent
 - Best to follow biology (e.g., starve *Ae. aegypti*, not *Culex quinquefasciatus*)
- Do not withhold water
- Almost never previously blooded
- Larval nutrition and density have big effects on avidity
- Age affects avidity
- Number of mosquitoes and density in cage affect avidity
- Diel patterns to feeding, even in lab
- Preselection for avidity
- Single exposure to AI can alter behavior for long period

Host Models

- Human models
 - Common to have 4x variation in subjects
 - Systematic gender differences documented
 - Systematic racial differences not known
 - Many test systems:
 - External cage (cage on arm or leg)
 - Arm in cage
- Animal models
 - Not currently popular
 - Limited studies showing correlation with human data, but overall encouraging
 - Duration correlated to humans, but not the same
 - Avidity of colony to animal species

Two Kinds of Measurements

- Inherent repellency
 - The minimum mass or molar concentration per surface area that has the desired effect
 - Does not necessarily predict duration because of loss from volatility, absorption, or ablation
- Duration of effectiveness
 - The time between activation and decrease in effect below minimum standard
 - Activation not always same as application

Inherent Repellency

- Compares biting inhibition at various dosages
- Assumes no loss of AI following application, therefore conducted soon after application
- AI usually not formulated but solvents vary
- Only realistic method for *in vitro* tests because no way to model loss of AI from surface
- Based on experience can set threshold at $ED_{90} \leq 0.01 \text{ mg/cm}^2$
- Useful for prioritizing candidate compounds

Duration of Effectiveness

- Field testing and consumer experience are only realistic measures of individual product, but nearly impossible to compare studies for ranking of products
- Mosquito avidity varies over time, much better to apply at intervals, test simultaneously
- Mosquitoes per cage and density makes a big difference in avidity
- Challenge is to reduce experimental error by decreasing variation in mosquito or tick source and in procedure

Application Rate


- Must be on per area basis
 - Can translate old data based on assumptions
 - Advantage of external cage models, but edge effects
- Moles logical chemically, but complicate translation to practical application
- Product formulation influences likely application rate

Percentage Efficacy Observed

- Highly dependent on number of potential biting arthropods in test
- If only 10 in a cage, then first bite lowers efficacy from 100% to 90%
- If 200 in cage, then first bite lowers efficacy from 100% to 99.5%
- If number of potential biting arthropods not reported, then assume 95% at first bite


Probit Regression

- Probit defined: “inverse cumulative distribution function of the normal distribution”
- If test stopped at first bite, then impossible to do probit regression.
- If test stopped at first bite, translate percentage protection at first bite to standard percentage protection by probit extrapolation
- If test proceeded to greater failure rate (ideally at least 50%), then possible to perform proper regression with error rate

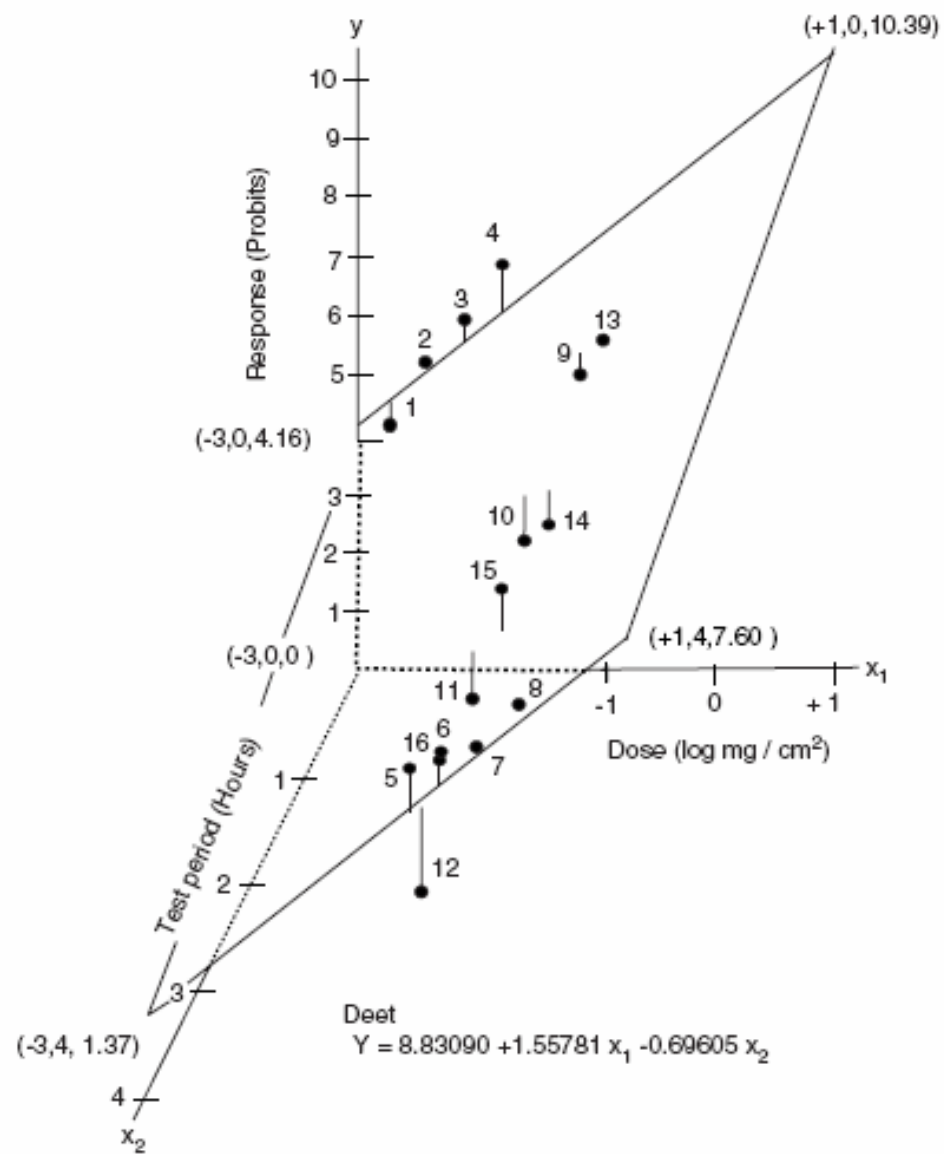

What is “Best” Percentage Protection

- Inherent statistical accuracy of probit curve is optimum at ET_{50}
- ET_{95} gets into top, curvy part of sigmoid curve
- ET_{90} is closer to linear portion of sigmoid curve
- ET_{90} is more realistic appraisal of efficacy

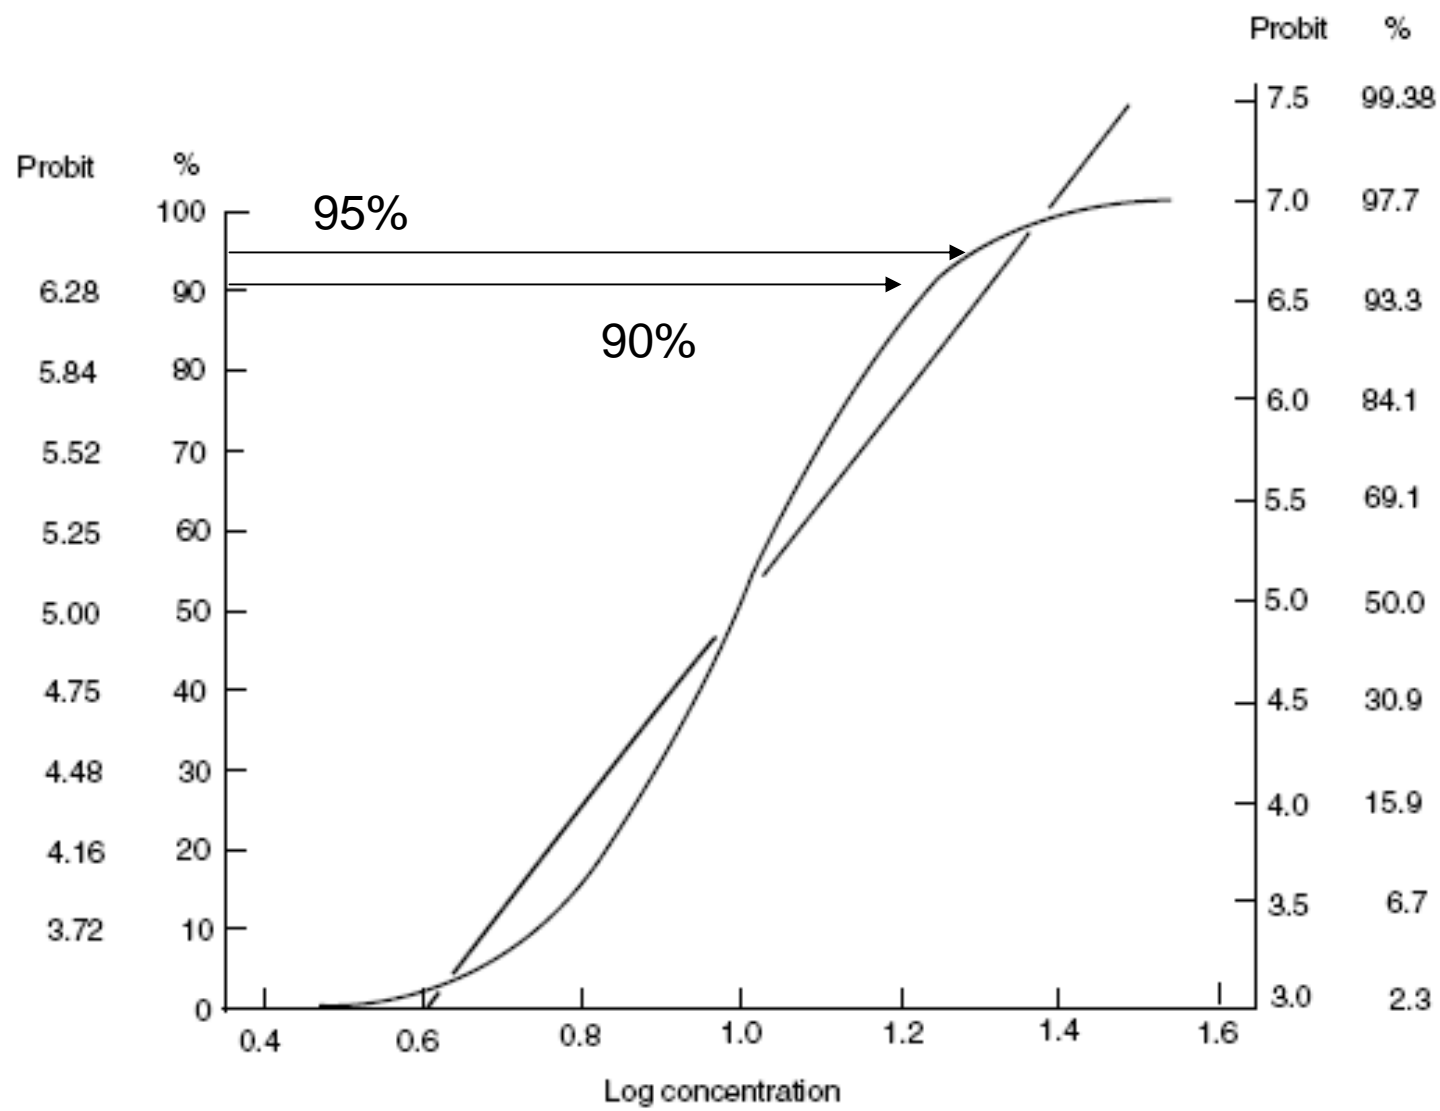

Comparison of 10% and 30% AI Formulations

- Standardizes comparisons at typical low dose and high dose formulations
- Compare 10% against threshold of one-hour of protection
- Compare 30% against threshold of two-hours of protection
- Compares active ingredients, not products

Net Result

Study's % translated to ET_{90} by probit ratio;
translated to standard AI % by log ratio

TABLE 22.1

Efficacy of Dimethyl Phthalate (DMP) Measured by Duration of Protection Against a Variety of Biting Arthropods

Lab	Field	Species	Method	Control	Dose	Result	10% Calc.	30% Calc.
	x	<i>Haemaphysalis zeylandica</i>	Human	14-22h	0.25	1.5	1.2	2.8
	x	<i>Haemaphysalis zeylandica</i>	Human	14-22h	0.5	2.5	1	2.4
x		<i>Parstrongylus megistus</i>	Rabbit, ec	10	1.54	2.2	0.3	1.2
x		<i>Aedes aegypti</i>	Arm in cage	100	0.385	0.7	0.4	1
x		<i>Aedes aegypti</i>	Arm in cage	NS	0.25	1.1	0.8	2.1

Summary Recommendations

- Ignore inherent repellency, use duration
- Quantify application
 - Preliminary study of actual application rate
 - Standardize tests at mean application rate (consider mean minus 10%)
- Standardize strain, rearing, and preparation of test arthropods; preselect for avidity; do not reuse specimens
- Use 50/50 gender ratio of subjects; stagger application times and test simultaneously
- Replicate with same subjects on different days
- Arm in cage, 100 mosquitoes per cage
- Sixteen tests: 30 minute intervals for 8 hours
- For new study, calculate ET_{90}
- For existing study, calculate ET_{90} from reported percentage protection using probit ratio