

Operator Tips

Operator Tips


Computer Reboot

File archiving will be initiated at each reboot or restart of the RadNet monitor. In addition, we have found that periodically rebooting the monitor's computer helps to prevent the computer from locking up after running continuously for months on end. The procedure for rebooting the computer takes about 5 minutes and can be done during a normal filter change.


After stopping the monitor for a routine filter change (Final Stop F1), perform the following steps to reboot the system:




1. Select
Main Window (ESC)

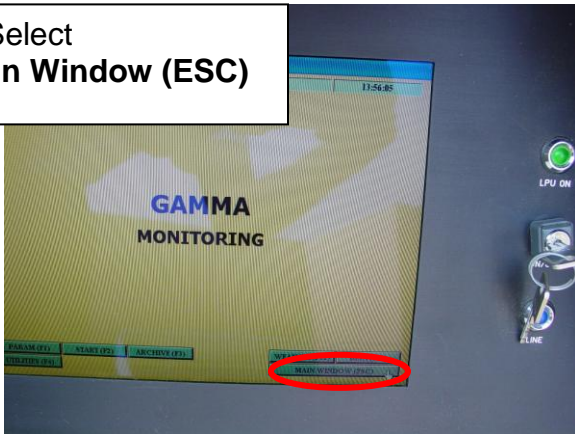


2. Select
Exit (ESC)

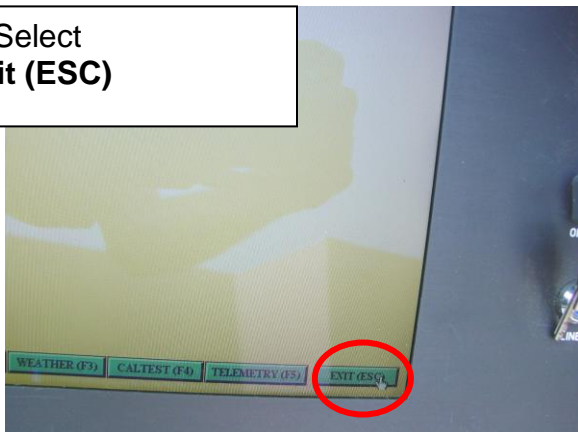


3. "**Do You Really Want To Exit?**"
Select
OK (RET)

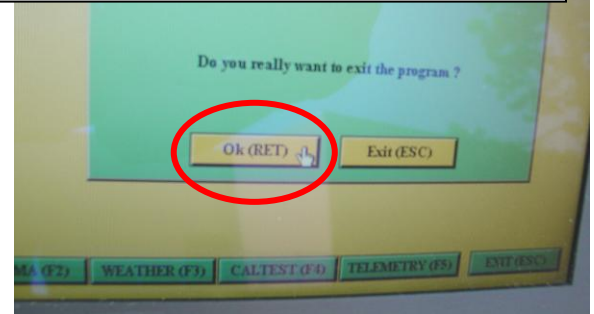

4. Select
Shutdown (F2)

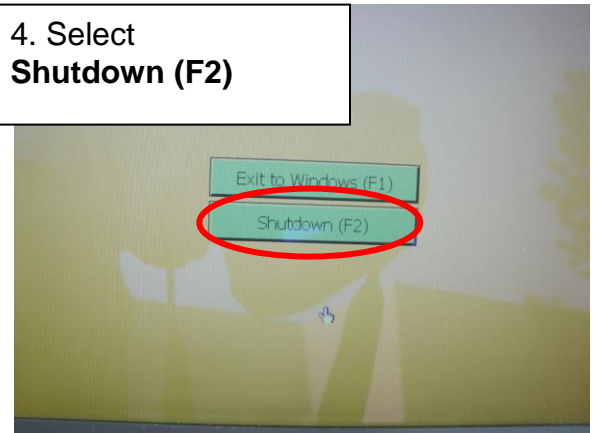

5. Turn the KEY to the left (counter-clockwise).

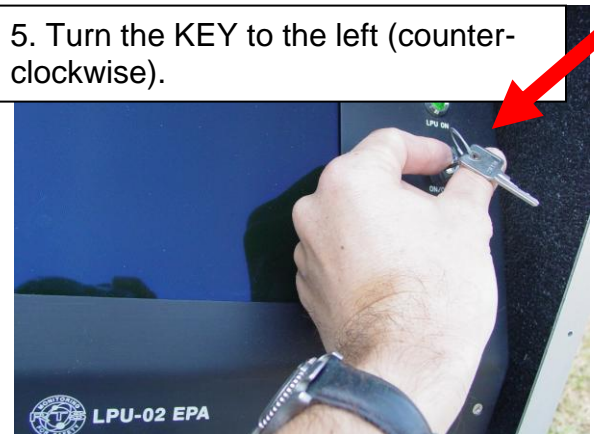

Wait 5 seconds, then turn the KEY to the right. The computer will reboot and launch the monitoring program. Select GAMMA (F2) and then START (F2), as usual, to start a new sample.