

Manufacturer: Cardinal Health  
Model: Slide Pack  
ASTM Type: VIIIJ

Description:

This is a semi-rigid blister reclosable package (Figure 1). There is a cover over the front of the card (see the left side of Figure 1). The front of the card covers each tablet with a clear semi-rigid plastic film.



Figure 1

The back of the card is a paper and foil combination with a clear plastic shield between the foil and the paper. Removing a perforated cut-out from the cardboard backing reveals a finger-hole to operate the clear plastic shield (the plastic shield is shown by the arrows in Figure 2). While holding the front of the card, the package is opened by sliding the clear plastic shield to the right so that the holes in the shield align with the foil back of the tablet, and while holding the shield in this position, pushing the tablet out the back of the card (Figure 2).

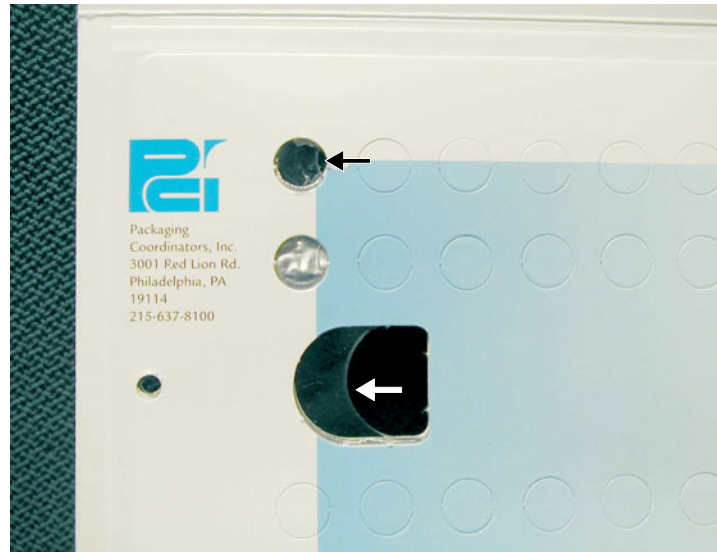


Figure 2

The manufacturer's instructions on the front cover of the card are (Figure 3):



Figure 3

- 1 PULL AND HOLD TO DISPENSE (an arrow pointing to the right with a hole and an edge of the clear plastic shield in it)

Hold slide pack as shown.  
Insert index finger thru opening.

- 2 (an arrow pointing to the right with a hole and an edge of the clear plastic shield in it)

Pull plastic trigger to right  
and hold as shown.

- 3      PULL AND HOLD  
         TO  
         DISPENSE (an arrow pointing to the right with a hole and an edge of the clear  
         plastic shield in it)

Press blister to release  
medication through foil.

The manufacturer also has instructions on the front of the card, which are (see the right  
side of Figure 1):

PULL AND HOLD  
TO DISPENSE (an arrow pointing to the right with a hole and an edge of the clear  
plastic shield)