

Manufacturer: Cardinal Health
Model: E-Z tear
ASTM Type: VIID(1)

Description:

This is a semi-rigid blister non-reclosable package (Figure 1A). The front of the card covers each tablet with a clear semi-rigid plastic film (Figure 1B) and the back of the card is a paper and foil combination.



Figure 1A



Figure 1B

The package is opened by folding at the perforation between two tablets where there is an internal (hidden) tear notch (see arrow in Figure 1B and Figure 2A), tearing the notch (bubble), and peeling the foil backing off the tablet (Figure 2B).



Figure 2A



Figure 2B

The manufacturer's instructions on the back of the blister card are (Figure 2B and Figure 3):

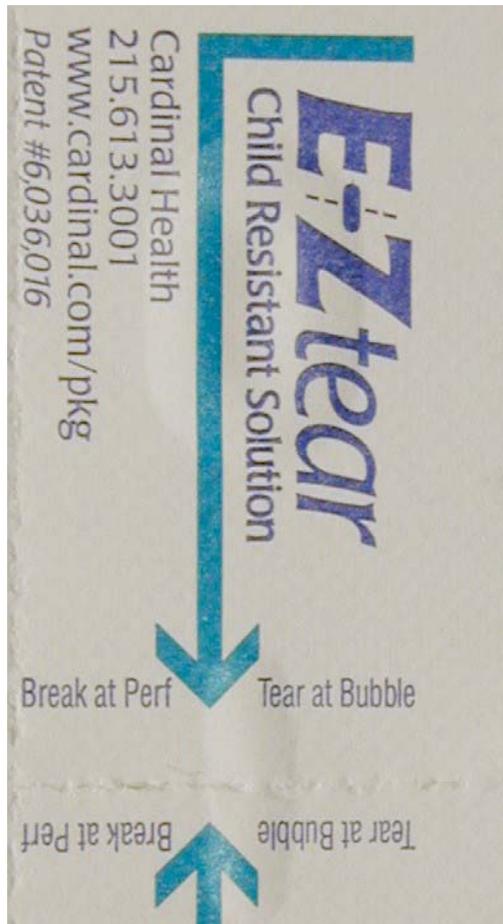


Figure 3

(“L” shaped arrow pointing to center of blister where tear notch (bubble) is located)

E-Z tear

Child Resistant Solution

(perpendicular to “L” shaped arrow) Tear at Bubble Break at Perf