

Manufacturer: Rexam Healthcare  
Model: Squeeze and Turn  
ASTM Type: IB

Description:

This is a one-piece plastic continuously-threaded closure (Figure 1).



Figure 1



Figure 2

The closure is opened by squeezing two sides of the closure and simultaneously turning it counterclockwise. The side of the closure has uniform ribbing around its entire circumference, except at the two squeeze points where it has a smooth semicircle at the bottom of the closure (Figure 2). The two squeeze points are 180° apart. The inside of the closure has two triangles 180° apart, which are 90° away from the squeeze points (circled in Figure 3A). The triangles lock into two bayonets on the bottle neck finish to keep the package closed (indicated with arrows in Figure 3B).

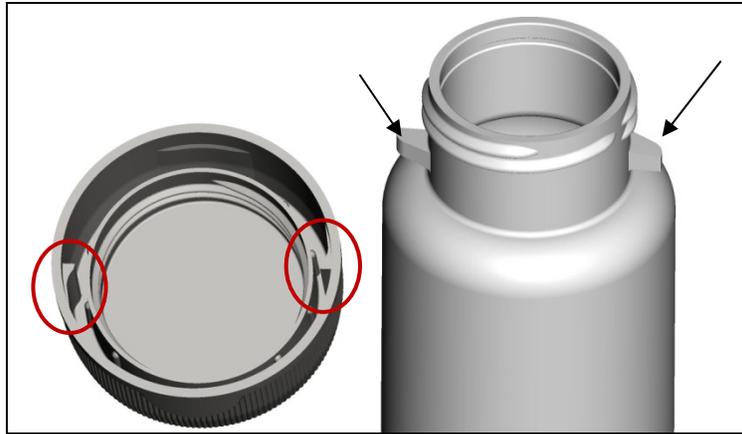


Figure 3A

Figure 3B



Figure 4

The manufacturer's instructions for the closure in Figure 4 are:

(Inside an arrow pointing towards both squeeze points) SQUEEZE SIDES  
CLOSE  
TIGHTLY  
& TURN TO OPEN  
(arrow pointing counterclockwise)